

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Princess](#) /

› [Princess 236023 Stainless Steel Kettle 1.0 Litre User Manual](#)

Princess 236023

Princess 236023 Stainless Steel Kettle 1.0 Litre User Manual

Model: 236023 | Brand: Princess

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Princess 236023 Stainless Steel Kettle. This compact 1.0-litre electric kettle is designed for efficient and safe water boiling, perfect for preparing up to five cups of your favorite hot beverages. Its cordless design and advanced safety features ensure ease of use and long-term reliability.

Key features include a powerful 2200W heating element for rapid boiling, a high-quality Strix controller, and a 360-degree rotatable base for convenient placement. The kettle also incorporates triple-level safety measures, including an automatic shut-off and boil-dry protection.



Figure 1: Princess 236023 Stainless Steel Kettle with a cup of tea. This image shows the kettle's sleek design, water level indicator, and power switch.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Retain this manual for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local mains voltage before connecting. Do not operate the kettle with a damaged cord or plug.
- **Water Level:** Never fill the kettle above the MAX (1.0L) mark or below the MIN mark to prevent boiling dry or overflowing.

- **Boil-Dry Protection:** The kettle is equipped with boil-dry protection, which automatically switches off the heating element if the kettle is accidentally switched on without water or with insufficient water. If this occurs, allow the kettle to cool down before refilling.
- **Automatic Shut-off:** The kettle will automatically switch off once the water has boiled (100°C).
- **Hot Surfaces:** The kettle body, especially the lid, becomes hot during operation. Always handle the kettle by its insulated handle. Avoid touching hot surfaces.
- **Placement:** Place the kettle on a stable, flat, heat-resistant surface, away from edges and out of reach of children. Do not place near hot gas or electric burners, or in a heated oven.
- **Children and Supervision:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **BPA-Free:** This kettle is made of stainless steel and does not contain Bisphenol A (BPA).
- **First Use Odor:** During the first few boiling cycles, a slight burning smell may be noticeable. This is normal and will dissipate with subsequent uses.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Princess kettle:

1. Kettle Body (Stainless Steel)
2. Lid
3. Handle
4. Water Level Indicator (with MIN/MAX markings)
5. Power Switch with Indicator Light
6. Spout with Filter
7. 360° Rotatable Power Base
8. Cord Storage (under the base)



Figure 2: Rear view of the kettle, highlighting the ergonomic handle and the position of the power switch.



Figure 3: Detailed view of the water level indicator, showing MIN, 0.5L, 0.75L, and MAX 1.0L markings.

4. SETUP

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Placement:** Place the power base on a dry, flat, and stable surface. Ensure the power cord is not dangling or in a position where it can be tripped over.
3. **First Use Cleaning:** Before first use, fill the kettle with clean water to the MAX level. Boil the water, then discard it. Repeat this process two to three times to remove any manufacturing residues and the initial odor.
4. **Cord Management:** The power base features integrated cord storage. Adjust the cord length as needed to keep your countertop tidy and safe.



Figure 4: The underside of the kettle's power base, illustrating the integrated cord storage system.

5. OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Open the lid and fill the kettle with the desired amount of fresh water. Observe the water level indicator to ensure the water is between the MIN and MAX marks. Close the lid securely.
2. **Place on Base:** Place the kettle firmly onto its 360-degree rotatable power base. The cordless design allows for easy placement from any angle, suitable for both left and right-handed users.
3. **Connect to Power:** Plug the power cord into a suitable wall outlet.
4. **Switch On:** Press the power switch located at the bottom of the handle downwards. The indicator light will illuminate, signaling that the kettle is heating.
5. **Boiling Process:** The water will begin to heat rapidly due to the 2200W heating element.
6. **Automatic Shut-off:** Once the water reaches boiling point, the kettle will automatically switch off, and the indicator light will extinguish.
7. **Pouring:** Carefully lift the kettle from its base by the handle and pour the hot water. Be cautious of steam escaping from the spout and lid.
8. **Switch Off Manually (Optional):** You can manually switch off the kettle at any time by pushing the power switch upwards.



Figure 5: Close-up view of the power switch with its illuminated indicator, showing the kettle in operation.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your kettle.

- **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before

cleaning.

- **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the stainless steel finish.
- **Interior Cleaning and Descaling:** The hidden heating element makes interior cleaning easier, reducing limescale buildup in hard-to-reach areas.
 - To descale, fill the kettle with a mixture of water and white vinegar (1:1 ratio) or a commercial descaling solution.
 - Boil the mixture and let it stand for at least 30 minutes, or longer for heavy buildup.
 - Empty the kettle and rinse thoroughly with fresh water several times to remove any residue and vinegar smell.
- **Filter Cleaning:** The spout filter prevents limescale particles from entering your cup. Remove the filter (if detachable) and rinse it under running water. Reinsert it securely.
- **Storage:** When not in use, ensure the kettle is clean and dry. You can wrap the power cord around the cord storage area under the base for neat storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not switch on.	Not plugged in; power switch not pressed; no power at outlet.	Ensure plug is securely in outlet. Press power switch down. Check outlet with another appliance.
Water does not boil.	Kettle not switched on; boil-dry protection activated.	Press power switch down. If boil-dry protection activated, allow kettle to cool before refilling and restarting.
Kettle switches off before boiling.	Excessive limescale buildup.	Descal the kettle as described in the "Cleaning and Maintenance" section.
Burning smell during first few uses.	Normal manufacturing residue.	This is normal and will disappear after a few boiling cycles. Ensure initial cleaning steps were followed.
Water tastes metallic or unusual.	New appliance residue; limescale buildup.	Perform initial cleaning and boiling cycles. Descal if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	Princess
Model Number	236023 (01.236023.01.001)
Capacity	1.0 Litre
Power	2200 Watts

Feature	Detail
Voltage	230 Volts
Material	Stainless Steel
Color	Black, Stainless Steel
Dimensions (L x W x H)	20.7 x 17.8 x 22.7 cm
Weight	780 grams
Special Features	Anti-slip feet, Water level indicator, Boil-dry protection, Filtering, Automatic power cut-off, 360° rotatable base.
Noise Level	44 Decibels

9. WARRANTY AND SUPPORT

Warranty: Princess offers a 24-month (2-year) warranty on all its products, covering manufacturing defects from the date of purchase.

Spare Parts: Availability of spare parts is guaranteed for 1 year from the date of purchase.

For warranty claims, technical support, or inquiries about spare parts, please contact your retailer or the official Princess customer service. Keep your proof of purchase for warranty validation.