

[manuals.plus](#) /› [Princess](#) /› [Princess Garment Steamer 332846 User Manual](#)

## Princess 332846

# Princess Garment Steamer 332846 User Manual

Model: 332846

## 1. INTRODUCTION

Thank you for purchasing the Princess Garment Steamer 332846. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

## 2. SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Exercise extreme caution when handling hot steam. Steam can cause burns.
- Never direct steam at people, pets, or electrical appliances.
- Only use distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- Unplug the appliance from the power outlet when not in use, before filling or emptying the water tank, and before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way.
- Allow the appliance to cool completely before storing.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Princess Garment Steamer.

1. Main Steamer Unit
2. Removable Water Tank (260ml capacity)
3. Fabric Brush Attachment
4. Bottle Adapter (for use with standard water bottles)

5. Power Button with Indicator Light

6. Steam Trigger with Lock



Image 3.1: The Princess Garment Steamer with its integrated water tank and fabric brush attachment.



Image 3.2: The steamer unit shown with a standard water bottle attached using the provided adapter, offering an alternative water source for travel.



Image 3.3: The fabric brush attachment, designed to help smooth fabrics and remove lint while steaming.

## 4. SETUP

Follow these steps to prepare your garment steamer for use:

- 1. Fill the Water Tank:** Remove the water tank from the main unit. Open the rubber stopper and fill the tank with distilled or demineralized water up to the 'MAX' line (260ml capacity). Do not overfill. Close the stopper securely and reattach the tank to the steamer unit. Alternatively, attach a standard water bottle using the provided adapter.
- 2. Attach Accessories:** If desired, attach the fabric brush to the steamer head by aligning it and pressing firmly until it clicks into place.
- 3. Position Garment:** Hang the garment you wish to steam on a hanger. Ensure the fabric is taut for best results.



Image 4.1: A close-up view of the water tank, showing the 'MAX' and 'MIN' fill lines for proper water level management.

## 5. OPERATING INSTRUCTIONS

---

Operating your garment steamer is straightforward:

- 1. Power On:** Plug the steamer into a suitable electrical outlet. Press the power button. The indicator light will illuminate, typically blue or green, indicating the unit is heating up. The steamer heats up rapidly, usually within 40 seconds.



Image 5.1: Close-up of the power button, showing its illuminated state when the device is active or heating.

2. **Activate Steam:** Once heated, press and hold the steam trigger located on the handle to release steam. For continuous steam, slide the lock switch on the trigger.



Image 5.2: The steam trigger and its locking mechanism for continuous steam output.

3. **Steaming Technique:** Hold the steamer vertically, approximately 1-2 inches away from the fabric. Move the steamer slowly over the garment, allowing the steam to penetrate the fibers. For stubborn wrinkles, gently press the fabric brush against the garment while steaming.



Image 5.3: The garment steamer in operation, showing steam being emitted from the nozzle.

4. **Eco Mode (if applicable):** Some models may feature an Eco mode for gentler steaming or delicate fabrics. Refer to your specific model's power button for this function.
5. **Automatic Shut-off:** The appliance is equipped with an automatic shut-off function for safety. If left inactive for a period, it will power off. The power indicator light may change to red to signal this state.
6. **Finishing:** Once steaming is complete, release the steam trigger and unplug the appliance. Allow the garment to cool and dry before wearing or storing.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your steamer.

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool. Remove the water tank and empty any remaining water. This prevents mineral buildup.

- **Cleaning the Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling:** If you notice reduced steam output or mineral residue, descaling may be necessary. Consult the manufacturer's website or contact support for specific descaling instructions. Generally, a solution of white vinegar and water can be used, followed by rinsing with clean water.
- **Storage:** Store the steamer in a cool, dry place, away from direct sunlight. Ensure the water tank is empty before storage.

## 7. TROUBLESHOOTING

---

If you encounter issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; mineral buildup; steamer not fully heated; steam trigger not pressed.	Refill water tank; descale the unit; wait for the indicator light to show ready; press the steam trigger firmly.
Steamer not heating up	Not plugged in; power button not pressed; electrical outlet malfunction.	Ensure the steamer is securely plugged in; press the power button; check the outlet with another appliance.
Water leaking	Water tank overfilled; tank not properly seated; condensation.	Do not overfill the tank; ensure the tank is securely attached; this is normal for some condensation.
Wrinkles not removing effectively	Steamer held too far from fabric; fabric too thick; steaming too quickly.	Hold steamer closer to fabric; move slower; for very thick fabrics, multiple passes may be needed. Note: This steamer is designed for light to medium fabrics and may not fully replace a traditional iron for heavy materials.

If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

---

- **Model Number:** 01.332846.01.001
- **Product Dimensions:** 20.4L x 11.8W x 21.1H cm
- **Item Weight:** 1 Kilogram
- **Water Tank Capacity:** 260 ml
- **Heat-up Time:** Approximately 40 seconds
- **Automatic Shut-off:** Yes



Image 8.1: Dimensional overview of the Princess Garment Steamer.

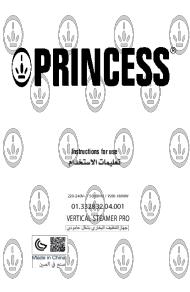
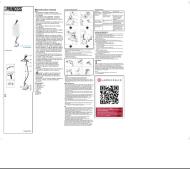
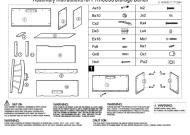
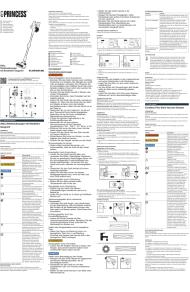
## 9. WARRANTY INFORMATION

This Princess Garment Steamer 332846 comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, neglect, accident, alteration, or unauthorized repair. Please retain your proof of purchase for warranty claims.

## 10. CUSTOMER SUPPORT

For further assistance, product registration, or to inquire about replacement parts, please visit the official Princess website or contact their customer service department. Contact details can typically be found on the product packaging or the brand's official website.

## Related Documents - 332846

	<p><a href="#"><u>Princess Vertical Steamer Pro 01.332832.04.001 User Manual</u></a></p> <p>Comprehensive user manual for the Princess Vertical Steamer Pro (Model 01.332832.04.001), providing detailed instructions on safety, setup, operation, cleaning, maintenance, and troubleshooting for effective garment steaming.</p>
	<p><a href="#"><u>Princess Garment Steamer Instruction Manual</u></a></p> <p>Instruction manual for the Princess Garment Steamer, model 01.332848.02.002, covering safety, installation, usage, troubleshooting, and maintenance.</p>
	<p><a href="#"><u>Princess Storage Bench Assembly Instructions   Disney Princess Furniture</u></a></p> <p>Detailed assembly instructions for the Disney Princess Storage Bench. Includes parts list, step-by-step guide, and safety warnings for easy setup.</p>
	<p><a href="#"><u>Princess Digital Family Aerofryer Instruction Manual</u></a></p> <p>User manual for the Princess Digital Family Aerofryer (Model 01.182050.01.001). Contains safety instructions, operating guidelines, program details, and maintenance tips for this household air fryer.</p>
	<p><a href="#"><u>Princess 01.339510.01.002 Cordless Flex Stick Vacuum Cleaner User Manual</u></a></p> <p>Comprehensive user manual for the Princess 01.339510.01.002 Cordless Flex Stick Vacuum Cleaner, covering setup, operation, maintenance, and troubleshooting.</p>
	<p><a href="#"><u>Princess Master Juicer Pro: User Manual and Safety Instructions</u></a></p> <p>Get detailed instructions, safety guidelines, and usage tips for the Princess Master Juicer Pro. Learn how to clean and maintain your citrus juicer for optimal performance.</p>