

Epson V11H842040

Epson EB-S41 SVGA Projector User Manual

Model: V11H842040

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Epson EB-S41 SVGA Projector. Please read this manual thoroughly before using the projector and keep it for future reference. The Epson EB-S41 is designed for versatile use, offering bright and clear projections for both business presentations and home entertainment.

SAFETY INFORMATION

Always observe the following safety precautions to prevent fire, electric shock, or injury.

- Do not block ventilation openings. Ensure adequate space around the projector for proper airflow.
- Do not look into the lens while the lamp is on. The bright light can damage your eyes.
- Do not place the projector on an unstable cart, stand, or table. It may fall, causing serious injury and damage.
- Do not expose the projector to rain or moisture to reduce the risk of fire or electric shock.
- Refer all servicing to qualified service personnel. Do not attempt to service this product yourself.
- Use only the power cord supplied with the projector or an equivalent approved by Epson.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Epson EB-S41 SVGA Projector
- Power Cable (1.8m)
- Computer Cable (VGA Cable, 1.8m)
- USB Cable (1.8m)
- Remote Control (with 2 AA batteries)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Epson EB-S41 projector.

Front View



This image shows the front of the Epson EB-S41 projector, highlighting the lens, ventilation grille, and the Epson branding. The lens cover slider is visible above the lens.



An angled view of the projector, providing a better perspective of its compact design and the location of the lens and front ventilation.

Top View and Control Panel




This image displays the top panel of the projector, featuring the control buttons for menu navigation, source selection, keystone correction,

and power. The focus and zoom rings are also visible near the lens area.

- **Power Button:** Turns the projector on or off.
- **Source Search Button:** Cycles through available input sources.
- **Menu Button:** Accesses the projector's on-screen menu.
- **Keystone Slider:** Adjusts the image shape to correct trapezoidal distortion.
- **Focus Ring:** Sharpens the projected image.
- **Zoom Ring:** Adjusts the size of the projected image.

Rear View and Connectivity Ports

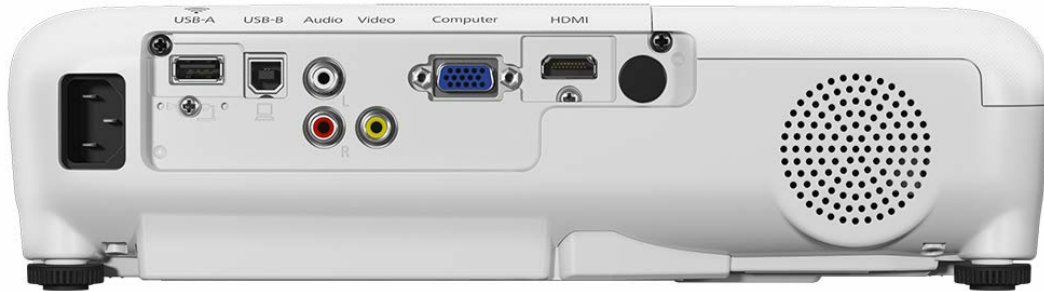

The rear panel of the projector, showing all available input and output ports. These include USB-A, USB-B, Audio In, Video In, Computer (VGA), and HDMI ports, along with the power input.

- **Power Input:** Connects the power cable.
- **HDMI Port:** For high-definition digital video and audio input.
- **Computer (VGA) Port:** For analog video input from computers.
- **Video Port:** For composite video input.
- **Audio In Ports:** For analog audio input.
- **USB-A Port:** For connecting USB devices like flash drives.
- **USB-B Port:** For connecting to a computer for display or control.

SETUP

1. Placement

Place the projector on a stable, flat surface. Ensure there is sufficient space around the projector for ventilation (at least 20 cm

from walls or other objects). For optimal image quality, position the projector directly in front of the screen or wall.

2. Connecting to Power

1. Connect the supplied power cable to the projector's power input port.
2. Plug the other end of the power cable into a grounded electrical outlet.

3. Connecting Input Devices

The EB-S41 supports various input sources:

- **HDMI:** For digital video and audio. Connect an HDMI cable from your computer, Blu-ray player, or gaming console to the projector's HDMI port.
- **VGA (Computer):** For analog video. Connect a VGA cable from your computer to the projector's Computer port.
- **USB-A:** For displaying content directly from a USB flash drive. Insert the USB drive into the USB-A port.
- **USB-B:** For USB Display function. Connect a USB-B cable from your computer to the projector's USB-B port.
- **Video/Audio:** For composite video and analog audio. Connect RCA cables from your device to the corresponding Video and Audio In ports.

4. Initial Power On

1. Press the Power button on the projector's control panel or the remote control. The power light will turn blue.
2. The projector will start up and display the Epson logo.

OPERATING THE PROJECTOR

1. Adjusting the Image

- **Focus:** Rotate the focus ring on the lens until the image appears sharp and clear.
- **Zoom:** Rotate the zoom ring on the lens to adjust the size of the projected image.
- **Keystone Correction:** If the image appears trapezoidal (wider at the top or bottom), use the horizontal keystone slider on the top of the projector or the keystone buttons on the remote control to square the image.

2. Selecting an Input Source

Press the **Source Search** button on the control panel or remote control to cycle through the connected input sources (HDMI, Computer, USB, Video).

3. Navigating the Menu

Press the **Menu** button on the control panel or remote control to access the projector's on-screen display (OSD) menu. Use the arrow buttons to navigate and the Enter button to select options. Press the Menu or Esc button to exit the menu.

4. Audio Settings

The projector has a built-in 2W mono speaker. Audio settings can be adjusted through the OSD menu. For higher quality audio, connect external speakers to your source device.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your projector.

1. Cleaning the Lens

Gently wipe the lens with a soft, dry, lint-free cloth designed for optical lenses. Do not use abrasive cleaners or solvents.

2. Cleaning the Air Filter

The air filter prevents dust from entering the projector. Clean the filter regularly (e.g., every 100 hours of use) by removing it and using a small vacuum cleaner or soft brush to remove dust. Refer to the detailed instructions in the full user guide for filter removal and reinstallation.

3. Lamp Replacement

The lamp has a life of up to 10,000 hours in eco-mode. When the lamp indicator light turns orange or the image becomes dim, the lamp may need replacement. Contact qualified service personnel for lamp replacement. Always allow the projector to cool down completely before attempting any maintenance.

TROUBLESHOOTING

If you encounter issues with your projector, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No image projected	• Ensure the power cable is securely connected and the projector is turned on. • Check the input source selection. Press the Source Search button to cycle through inputs. • Verify the video cable (HDMI, VGA) is securely connected to both the projector and the source device. • Ensure the lens cover is open.
Image is blurry	• Adjust the focus ring on the lens. • Ensure the projection distance is within the recommended range. • Clean the projector lens if it is dirty.
Image is trapezoidal	• Adjust the horizontal keystone slider on the projector. • Position the projector directly in front of the screen.
No sound	• Check the audio cable connection if using analog audio input. • Ensure the volume is not muted or set too low on the projector or source device. • If using HDMI, ensure the source device is sending audio through HDMI.
Projector overheats or shuts down	• Ensure ventilation openings are not blocked. • Clean the air filter. • Operate the projector in a well-ventilated area.

SPECIFICATIONS

Feature	Detail
Brand	Epson

Feature	Detail
Model	V11H842040 (EB-S41)
Display Type	LCD
Resolution	SVGA (800 x 600)
Brightness (White & Colour)	3300 lumens
Contrast Ratio	15,000:1
Aspect Ratio	16:9 (Native 4:3, supports 16:9)
Lamp Life (Eco Mode)	Up to 10,000 hours
Audio Output	2 Watts Mono
Connectivity	HDMI, VGA, USB-A, USB-B, Video, Audio In
Product Dimensions (LxWxH)	30.2 x 23.7 x 8.2 cm
Item Weight	2.5 kg
Noise Level (Eco)	28 dB
Power Supply Voltage	100 - 240 V AC ±10%, 50/60 Hz

WARRANTY AND SUPPORT

Epson provides a limited warranty for this product. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or to inquire about replacement parts (such as lamps or filters), please contact Epson customer service or visit the official Epson website.

Epson India Customer Service: For contact details, please visit [Epson India Support](#).

© 2024 Epson Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question