

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SAMSUNG](#) /

› [Samsung EVO 32GB U1 Class 10 microSDHC Memory Card with Adapter User Manual](#)

## SAMSUNG MB-MP32GA/IN

# Samsung EVO 32GB microSDHC Memory Card User Manual

MODEL: MB-MP32GA/IN

## 1. Product Overview

---

The Samsung EVO 32GB U1 Class 10 microSDHC Memory Card is designed to expand the storage capacity and enhance the transfer speeds of your compatible devices. This memory card is ideal for storing high-quality content, including Full HD videos, high-resolution photos, and various applications. It offers reliable performance and durability for everyday use.

## 2. Setup and Installation

---

To begin using your Samsung EVO microSDHC memory card, follow these steps:

- Identify Compatible Slot:** Locate the microSD card slot on your device (e.g., smartphone, tablet, digital camera, drone). If your device uses a standard SD card slot, use the included SD adapter.
- Insert the Card:** Gently insert the microSD card into the designated slot with the gold contacts facing down or as indicated by your device's manual. Ensure it clicks into place. If using the adapter, insert the microSD card into the adapter first, then insert the adapter into the device's SD card slot.
- Format (Optional/Recommended):** For optimal performance and compatibility, it is often recommended to format the memory card using your device's internal formatting function before first use. Refer to your device's user manual for specific instructions on how to format external storage. **Note:** Formatting will erase all data on the card.



An image of the Samsung EVO 32GB microSDHC memory card. The card is orange and white, displaying 'SAMSUNG', '32', 'EVO', and 'microSDHC U1' branding. A full-size SD adapter is also included.

### 3. Operating Instructions

---

Once installed, your Samsung EVO microSDHC card functions as an extended storage medium for your device. Here are general usage guidelines:

- **Data Storage:** Use the card to store photos, videos, music, documents, and other files. Many devices allow you to set the memory card as the default storage location for new media.
- **File Transfer:** Transfer files to and from the card using your device's file manager or by connecting your device to a computer. The card supports transfer speeds of up to 95MB/s for both reading and writing, enabling quick movement of large files.
- **Application Storage:** Some Android devices allow you to move compatible applications to the memory card to free up internal storage.
- **Full HD Video Recording:** The Class 10 speed rating ensures smooth and reliable recording of Full HD (1080p) video without dropped frames.
- **Compatibility:** This card is compatible with devices featuring microSDHC and microSDXC slots, including cell phones, smartphones, Android tablets, and tablet PCs.

### 4. Maintenance and Care

---

To ensure the longevity and optimal performance of your Samsung EVO microSDHC card, observe the following care guidelines:

- **Safe Removal:** Always use the