

Schwinn 100766

Schwinn Crewmaster Rower 100660 Instruction Manual

Model: 100766

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Schwinn Crewmaster Rower is designed to provide a comprehensive full-body workout. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your rowing machine.

Key Features:

- Large LCD display for tracking time, stroke count, distance, calories, and recovery.
- Adjustable console for optimal viewing angle.
- Convenient easy-fold design for vertical storage.
- Durable nylon transmission for quiet and powerful operation.
- Telemetric heart rate monitoring capability.
- Molded cushioned seat for comfort.
- Easy-to-grip handle.
- Large footplates with adjustable straps for secure footing.

Your browser does not support the video tag.

Video Description: An official product video demonstrating the features and use of the Schwinn Crewmaster Rowing Machine. It highlights the smooth motion, adjustable resistance, LCD console, and foldable design for storage.

2. SETUP

Before beginning assembly, ensure all components are present and undamaged. Refer to the included

assembly guide for detailed, step-by-step instructions and diagrams.

2.1 Unpacking

- Carefully remove all parts from the packaging.
- Place components on a clean, flat surface to prevent damage.
- Retain packaging materials until assembly is complete.

2.2 Assembly Overview

The Schwinn Crewmaster Rower requires minimal assembly. Typically, this involves attaching the seat rail to the main unit, securing the footplates, and installing the console. All necessary tools are usually provided.

2.3 Initial Placement

Position the rower on a stable, level surface. Ensure there is adequate clear space around the machine for safe operation, approximately 2 feet (60 cm) on all sides.



Image Description: A woman demonstrating the proper rowing form on the Schwinn Crewmaster Rower. She is seated on the machine, holding the handle, with her feet secured in the footplates, illustrating the machine in use.

3. OPERATION

3.1 Getting Started

- Sit on the cushioned seat and secure your feet in the footplates using the adjustable straps.
- Grasp the handle with both hands, ensuring a firm and comfortable grip.

3.2 Adjusting Resistance

The rower features multiple levels of magnetic resistance. Locate the resistance adjustment knob on the main unit. Rotate the knob clockwise to increase resistance and counter-clockwise to decrease it. Adjust the resistance to match your desired workout intensity.



Image Description: A detailed view of the Schwinn Crewmaster Rower's console and handle. The console displays workout metrics, and the handle is shown in a user's grip, highlighting the ergonomic design.

3.3 Using the LCD Console

The large LCD display tracks various workout metrics to help you monitor your progress:

- **Time:** Duration of your workout.
- **Count:** Number of strokes performed.
- **Distance:** Estimated distance covered.
- **Calories:** Estimated calories burned.
- **Recovery:** Heart rate recovery measurement (requires compatible heart rate monitor).
- **Pulley:** Displays pulley speed or related metric.

The console can be adjusted for optimal line of sight. Use the buttons on the console to navigate through display modes and reset workout data.

3.4 Heart Rate Monitoring

The Schwinn Crewmaster Rower is enabled for telemetric heart rate monitoring. To utilize this feature, a compatible heart rate chest strap (not included) is required. Follow the instructions provided with your heart rate monitor for pairing and use.



Image Description: A man actively rowing on the Schwinn Crewmaster Rower, demonstrating the full range of motion. His feet are strapped in, and he is pulling the handle towards his body, showcasing the machine's use during a workout.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Schwinn Crewmaster Rower.

4.1 Cleaning

- Wipe down the machine with a damp cloth after each use to remove sweat and dust.
- Avoid using abrasive cleaners or solvents that could damage the finish or electronic components.

4.2 Inspection

- Periodically check all bolts, nuts, and connections to ensure they are securely tightened.
- Inspect the nylon transmission strap for any signs of wear or fraying.
- Ensure the seat rollers move smoothly along the seat rail. Clean the rail if debris is present.

4.3 Storage

The rower features an easy-fold design for convenient storage. To fold:

1. Ensure the machine is powered off.

2. Locate the folding mechanism (refer to your assembly guide for exact location).
3. Release the locking pin or lever and carefully lift the seat rail into a vertical position.
4. Secure the rail in the folded position using the locking mechanism.

Store the rower in a dry, temperate environment away from direct sunlight and extreme temperatures.



Image Description: The Schwinn Crewmaster Rower shown in its folded, upright position for compact storage. This image highlights the space-saving design of the machine.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Schwinn Crewmaster Rower.

5.1 Console Not Displaying

- **Check Batteries:** Ensure the 2 AA batteries are correctly installed and not depleted. Replace if necessary.
- **Connection:** Verify that all console cables are securely connected to the main unit.

5.2 Unusual Noises During Operation

- **Loose Parts:** Inspect all bolts and nuts. Tighten any loose components.
- **Seat Rollers/Rail:** Clean the seat rail and check the seat rollers for any obstructions or damage.
- **Transmission:** If the noise persists and seems to come from the main unit, contact customer support.

5.3 Inconsistent Resistance

- **Resistance Knob:** Ensure the resistance knob is fully engaged and turning smoothly.
- **Internal Mechanism:** If the issue continues, it may indicate an internal mechanism problem. Contact customer support.

For issues not listed here or if troubleshooting steps do not resolve the problem, please contact Schwinn Customer Support.

6. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Schwinn
Model Number	100766
Resistance Mechanism	Magnetic
Maximum Weight Recommendation	300 Pounds
Product Dimensions (D x W x H)	10.5"D x 57.5"W x 38"H
Item Weight	1 Kilograms
Frame Material	Metal
Display Type	LCD
Power Source	Battery Powered (2 AA batteries included)
Included Components	Rowing machine

7. WARRANTY & SUPPORT

7.1 Product Warranty

The Schwinn Crewmaster Rower is covered by the following warranty:

- **Frame:** 10 Years
- **Parts:** 3 Years
- **Labor:** 1 Year

Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and does not cover damage due to misuse, accident, or unauthorized modifications.

7.2 Customer Support

For technical assistance, parts replacement, or any questions regarding your Schwinn Crewmaster Rower, please contact Schwinn Customer Support. Refer to the contact information provided with your product packaging or visit the official Schwinn website for current support details.