

Toyotomi Omni 230

Toyotomi Omni 230 Convection Kerosene Heater User Manual

Model: Omni 230 | Brand: Toyotomi

[Safety Information](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

INTRODUCTION

Thank you for choosing the Toyotomi Omni 230 Convection Kerosene Heater. This manual provides essential information for the safe and efficient use of your heater. Please read all instructions carefully before operation and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment.

- Use only **1-K grade kerosene**. Never use gasoline, naphtha, paint thinners, or other fuels.
- Ensure adequate ventilation. Kerosene heaters consume oxygen and produce carbon monoxide. Operate only in well-ventilated areas.
- Keep combustible materials at least 3 feet (0.9 meters) away from the heater.
- Never leave the heater unattended while in operation.
- Do not use in sleeping areas or small, unventilated rooms.
- Keep children and pets away from the heater.
- Do not move the heater while it is operating or hot.
- Always refuel outdoors and allow the heater to cool completely before refueling.
- In case of fire, use a dry chemical fire extinguisher. Do not use water.

SETUP AND FIRST USE

Unpacking

Carefully remove the heater from its packaging. Inspect for any damage during transit. Retain packaging for storage or return if necessary.

Placement

Place the heater on a firm, level, non-combustible surface. Ensure there is at least 3 feet (0.9 meters) clearance from walls, furniture, and other combustible materials.

Fueling the Heater

1. Ensure the heater is turned OFF and completely cool.
2. Take the heater outdoors or to a well-ventilated area for refueling.
3. Remove the fuel tank cap.
4. Carefully pour 1-K grade kerosene into the fuel tank. Do not overfill. The fuel quantity indicator will show the level.
5. Securely replace the fuel tank cap.
6. Wipe up any spilled fuel immediately.



Image: Close-up view of the Toyotomi Omni 230 Kerosene Heater's control panel, showing the fuel gauge, quick shutoff lever, and ignition knob. The fuel gauge indicates the current kerosene level, while the quick shutoff lever and ignition knob are used for operating the heater.

OPERATING INSTRUCTIONS

Ignition

1. Ensure the fuel tank is filled with 1-K grade kerosene.
2. Push the quick shutoff lever to the "OFF" position (down).
3. Turn the ignition knob to the "IGNITE" position. This will automatically ignite the wick.
4. Confirm the wick is burning evenly. If not, adjust the wick height using the knob.

Adjusting Heat Output

The heat output can be adjusted by rotating the wick adjustment knob. Turning it clockwise lowers the wick, reducing heat, while turning it counter-clockwise raises the wick, increasing heat. Always ensure a stable flame.

Shutting Down

To turn off the heater, simply push the quick shutoff lever to the "OFF" position (down). The flame will extinguish automatically. Allow the heater to cool completely before moving or storing.

MAINTENANCE

Daily Maintenance

- Check the fuel level and refill as needed.
- Wipe down the exterior of the heater with a soft, dry cloth.

Weekly Maintenance

- Inspect the wick for carbon buildup. If necessary, perform a "dry burn" to clean the wick.
- Clean the burner assembly if any soot or debris is visible.

Wick Replacement

The wick should be replaced annually or if it becomes excessively charred or damaged. Refer to the detailed wick replacement instructions provided with replacement wicks or consult a qualified service technician.



Image: Side view of the Toyota Omni 230 Kerosene Heater, showcasing its convection grill and overall design. This view helps in understanding the heater's structure for maintenance and placement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not ignite.	No fuel, low wick, faulty igniter.	Refill fuel tank, raise wick, check igniter battery/replace igniter.
Flame is too high or too low.	Improper wick adjustment.	Adjust wick height using the control knob.
Unpleasant odor.	Poor ventilation, incorrect fuel, dirty wick.	Increase ventilation, use 1-K kerosene only, perform dry burn.

Problem	Possible Cause	Solution
Heater shuts off unexpectedly.	Low fuel, safety mechanism activated.	Refill fuel, check for tipping or impact.

SPECIFICATIONS

Brand: Toyotomi

Model: Omni 230

Type: Convection Kerosene Heater, Wick Type

Fuel Type: 1-K Kerosene

Ignition: Automatic Ignition Switch

Safety Features: Triple Safety Extinguisher, Double Wall Tank Construction

Heating Coverage: Approximately 250 square feet

Form Factor: Pedestal

Indoor/Outdoor Usage: Indoor

Included Components: Main Unit, User manual, Battery

UPC: 769560353482

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Toyotomi website. For technical support or service inquiries, please contact Toyotomi customer service.

Manufacturer: Toyotomi

Country of Origin: India

