

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [JustFine](#) /

> [JustFine Replacement Remote Control User Manual for Vizio LED LCD HDTV TVs](#)

JustFine e77edb67-b58d-4c84-9b4b-052c42a09408

JustFine Replacement Remote Control User Manual

Compatible with Vizio LED LCD HDTV TVs

INTRODUCTION

This manual provides instructions for the JustFine Replacement Remote Control, designed for seamless compatibility with various Vizio LED LCD HDTV models, including E500I-A1, E241IA1W, E550IB2, E550IB2E, E551DA0, E420IA0, E420I-B0, and E500DA0. This remote offers direct functionality for your Vizio TV, including dedicated buttons for NETFLIX and M-GO services.

SETUP INSTRUCTIONS

Battery Installation

The JustFine Replacement Remote Control is pre-programmed and requires no additional setup or coding. Simply insert batteries to begin use.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



This image displays the rear view of the remote control, highlighting the battery compartment. The cover is designed to slide off for battery insertion.

Initial Use

Once batteries are installed, the remote is ready for immediate use with your compatible Vizio TV. Point the remote directly at your television's infrared receiver.

OPERATING THE REMOTE CONTROL

The remote control provides standard functions for navigating your Vizio TV. Familiarize yourself with the button layout for optimal use.

- **Power:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes TV channels.
- **Navigation (Arrow) Buttons:** Used to move through menus and selections.
- **OK/Enter:** Confirms selections.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **NETFLIX:** Direct access button for the Netflix streaming service.
- **M-GO:** Direct access button for the M-GO streaming service (if supported by your TV model).

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a dry place away from extreme temperatures and direct sunlight.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting steps:

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none">• Check if the batteries are inserted correctly, observing polarity (+/-).• Replace old batteries with new AAA batteries.• Ensure there are no obstructions between the remote and the TV's infrared sensor.• Confirm the remote is pointed directly at the TV.
Certain buttons do not work.	<ul style="list-style-type: none">• Verify that the TV model is listed as compatible.• Some advanced functions may require specific TV settings or may not be supported by all compatible Vizio models.• Clean the remote surface to ensure no debris is obstructing button presses.

Problem	Solution
Remote works intermittently.	<ul style="list-style-type: none">• Batteries may be low; replace them.• Ensure a clear line of sight to the TV.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	8 x 2 x 0.5 inches
Item Weight	2.72 ounces
Compatible Devices	Vizio LED LCD HDTVs (E500I-A1, E241IA1W, E550IB2, E550IB2E, E551DA0, E420IA0, E420I-B0, E500DA0)
Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic design, Pre-programmed
Color	Black

WARRANTY AND SUPPORT

This product is sold with a money-back guarantee and a 30-day quality warranty. For any issues or support inquiries, please contact the seller directly. Hassle-free returns are available within the specified period.