

Jimmyjane JJ10301

Jimmyjane Ruby Rabbit Rechargeable Vibrator Instruction Manual

Model: JJ10301

INTRODUCTION

Thank you for choosing the Jimmyjane Ruby Rabbit Rechargeable Vibrator. This manual provides essential information for the safe and effective use, care, and maintenance of your device. Please read these instructions thoroughly before first use and retain them for future reference.

The Ruby Rabbit features a dual-motor design, soft silicone construction, and 10 vibration programs. Its ergonomic shape is designed for targeted stimulation.

IMPORTANT SAFETY INFORMATION

- For adult use only.
- Do not use if the device appears damaged.
- Discontinue use immediately if you experience any discomfort or pain.
- Consult a healthcare professional if you have any medical conditions or concerns.
- Keep out of reach of children.
- This device is waterproof; however, avoid prolonged submersion.
- Use only with water-based lubricants. Oil-based lubricants may damage the silicone material.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Jimmyjane Ruby Rabbit Rechargeable Vibrator
- USB Charging Cable
- Instruction Manual (this document)



Image: The Jimmyjane Ruby Rabbit vibrator shown in its retail packaging, highlighting the product and brand.

SETUP

1. Initial Charging

Before first use, fully charge the device. The Ruby Rabbit contains one Lithium-ion battery.

1. Locate the charging port on the device. This is typically a small, circular indentation on the base of the vibrator.
2. Connect the USB charging cable to the charging port.
3. Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer USB port.
4. The indicator light on the device will illuminate or flash during charging. Refer to the specific light behavior in the "Charging Indicator" section below.
5. Charging typically takes 2-3 hours for a full charge. The indicator light will change or turn off when charging is

complete.



Image: Side view of the Ruby Rabbit, illustrating its curved design and the typical location of the charging port near the base.

2. Cleaning Before First Use

Clean the device thoroughly before its initial use and after each subsequent use.

- Wash the device with warm water and a mild, toy-safe soap.
- Rinse thoroughly to remove all soap residue.
- Pat dry with a lint-free cloth or allow to air dry completely.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button (usually a small, circular button on the device's base) for 2-3 seconds to turn the device on or off.

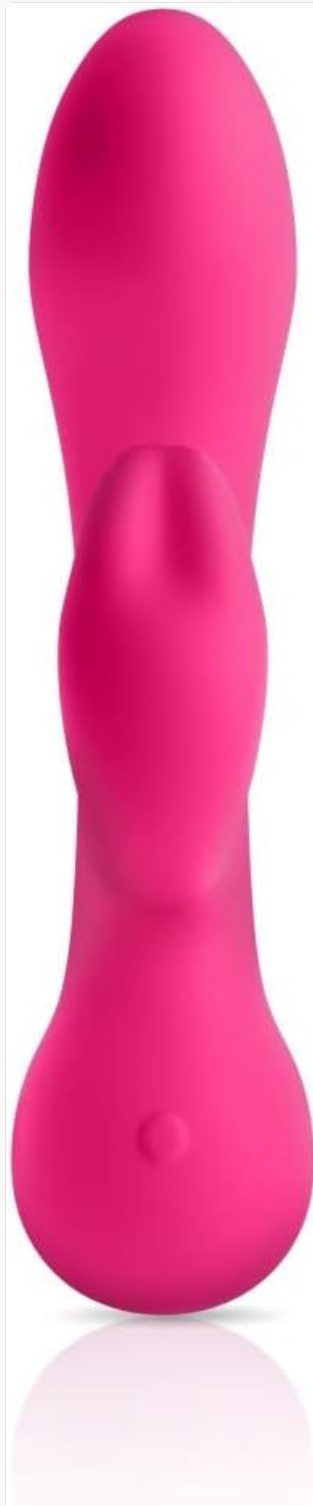


Image: Front view of the Ruby Rabbit, indicating the power button's position and the dual-stimulator design.

2. Changing Vibration Modes

Once the device is powered on, short press the power button to cycle through the 10 available vibration programs. Each press will switch to the next pattern.

3. Usage Recommendations

- Apply a generous amount of water-based lubricant to the device and the desired area of the body.

- Experiment with different vibration patterns and intensities to find what is most pleasurable.
- The bulbous end is designed for internal stimulation, while the clitoral stimulator is shaped to embrace the labia and clitoris.

MAINTENANCE AND CARE

1. Cleaning After Use

- Always clean your device immediately after each use.
- Wash with warm water and a mild, toy-safe soap or a specialized toy cleaner.
- Rinse thoroughly under running water.
- Dry completely with a soft, lint-free cloth or allow to air dry.

2. Storage

- Store the device in a clean, dry place, away from direct sunlight and extreme temperatures.
- Avoid storing with other toys made of different materials, especially those containing silicone, to prevent material degradation.
- Keep the device charged to prolong battery life, but avoid overcharging.

3. Battery Care

- To maintain battery health, charge the device fully before storing for extended periods.
- If not used regularly, charge the device every 3-6 months.
- Do not attempt to replace the internal battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Device does not charge.	Charging cable or adapter is faulty; charging port is obstructed.	Try a different USB port or adapter. Ensure the charging cable is securely connected. Check the charging port for debris.
Vibrations are weak or inconsistent.	Low battery; internal issue.	Charge the device fully. If the problem persists after charging, contact customer support.
Device feels sticky or degraded.	Used oil-based lubricant; improper storage.	Only use water-based lubricants. Store separately from other materials. This damage is often irreversible.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact Jimmyjane customer support.

SPECIFICATIONS

- **Model Number:** JJ10301
- **Material:** Silicone
- **Color:** Rose
- **Dimensions (L x W x H):** 9.1 x 6.4 x 24.1 cm
- **Weight:** 294.84 grams
- **Battery:** 1 Lithium-ion (included)
- **Charging:** USB Rechargeable
- **Vibration Programs:** 10
- **Waterproof:** Yes
- **UPC:** 603912747676

WARRANTY AND SUPPORT

For warranty information, product support, or to report an issue, please visit the official Jimmyjane website or contact their customer service directly. Keep your proof of purchase for warranty claims.

Manufacturer: Banana VPC

Brand: Jimmyjane

Website: www.jimmyjane.com (Note: This is a placeholder link, please refer to your product packaging or official brand resources for the correct support contact information.)

© 2026 Jimmyjane. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question