

[Manuals.plus](#) /

› [Pretty Love](#) /

› Pretty Love Jenny Remote Control Bullet Model 6041 User Manual

Pretty Love 6041

Pretty Love Jenny Remote Control Bullet User Manual

MODEL: 6041

Introduction

Thank you for choosing the Pretty Love Jenny Remote Control Bullet. This manual provides essential information for the safe and effective use of your product. Please read these instructions carefully before use and retain them for future reference.

Safety Information

- Clean the product thoroughly before and after each use with mild soap and warm water.
- Do not use with damaged skin or if you experience any discomfort. Discontinue use immediately if irritation occurs.
- This product is water-resistant, not fully waterproof. Do not submerge the remote control in water.
- Keep out of reach of children.
- Store in a cool, dry place away from direct sunlight.

Package Contents

Verify that all items are present in your package:

- 1 x Pretty Love Jenny Bullet
- 1 x Remote Control
- 1 x USB Charging Cable



Image: The product packaging for the Pretty Love Jenny Remote Control Bullet, showing the bullet, remote, and USB charging cable.

Product Overview

The Pretty Love Jenny is a compact, remote-controlled bullet designed for personal use. It features 12 distinct vibration functions for varied experiences. The bullet is USB rechargeable, while the remote control operates on a single AAA battery.



Image: A top-down view of the Pretty Love Jenny bullet and its accompanying remote control, both in purple.

Dimensions

- **Bullet Width:** 28 mm (approximately 1.10 inches)
- **Bullet Insertable Length:** 70 mm (approximately 2.75 inches)



Image: A diagram illustrating the dimensions of both the Pretty Love Jenny bullet (70mm length, 28mm width) and its remote control (75mm length, 45mm width).

Setup

Charging the Bullet

1. Locate the charging port on the bullet.
2. Connect the provided USB charging cable to the bullet's charging port.
3. Plug the other end of the USB cable into a standard USB power source (e.g., computer, USB wall adapter).
4. Allow the bullet to charge fully before first use. Charging time may vary.

Installing Remote Control Battery

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert one (1) AAA battery, ensuring correct polarity (+/-).
4. Close the battery cover securely.



USB RECHARGEABLE VIBRATING EGG



REMOTE CONTROL IS OPERATED
BY 1 PIECE AAA BATTERY

Image: A visual guide showing how to connect the USB charging cable to the bullet and how to open the remote control's battery compartment to insert a AAA battery.

Operating Instructions

Ensure both the bullet and remote control are charged/have batteries installed before operation.

1. **Power On/Off:** Press and hold the power button on the bullet (usually indicated by a power symbol) for a few seconds to turn it on or off.
2. **Remote Control Pairing:** The remote control should automatically pair with the bullet when both are powered on and within range.
3. **Adjusting Vibrations:** Use the vibration button on the remote control to cycle through the 12 different vibration functions. Each press will change the pattern or intensity.



Image: A diagram highlighting the ON/OFF button on the bullet and the vibration button on the remote control for easy identification.

Maintenance

Cleaning

- Always clean the bullet thoroughly before and after each use.
- Use warm water and a mild, toy-safe soap.
- Wipe the surface with a soft cloth or towel.
- Do not use harsh chemicals, alcohol, or petroleum-based cleaners.
- The bullet is water-resistant; however, avoid submerging the remote control.

Storage

- Store the product in a clean, dry, and cool place.
- Keep it away from direct sunlight and extreme temperatures.
- Ensure the product is fully dry before storing.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bullet does not turn on.	Low battery or not charged.	Charge the bullet using the USB cable.
Remote control not working.	AAA battery is dead or incorrectly installed.	Replace the AAA battery, ensuring correct polarity.
Vibrations are weak.	Low battery in the bullet.	Recharge the bullet.
Remote not connecting to bullet.	Out of range or interference.	Ensure the remote is close to the bullet. Check remote battery.

Specifications

- **Model:** 6041
- **Bullet Dimensions:** 28mm (width) x 70mm (insertable length)
- **Vibration Functions:** 12
- **Bullet Power:** USB Rechargeable (Lithium Ion battery)
- **Remote Control Power:** 1 x AAA Battery (not included)
- **Water Resistance:** Water Resistant (bullet)
- **Care Instructions:** Hand Wash
- **Manufacturer:** Liaoyang baile health care produ

Warranty and Support

For warranty information or product support, please refer to the packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B075J2CK4X>

More documents and user manuals: <https://manuals.plus/>