

## Arregui 151040

# ARREGUI Forma Evolution 151040 Wall-Mounted Safe Instruction Manual

Model: 151040 | Brand: Arregui

## 1. INTRODUCTION

This manual provides essential information for the proper installation, setup, operation, and maintenance of your ARREGUI Forma Evolution 151040 wall-mounted safe. Please read these instructions carefully before using the safe to ensure optimal security and functionality. Keep this manual for future reference.

## 2. SAFETY INFORMATION

- Ensure the safe is installed by a qualified professional due to the requirement for construction work.
- Do not store the emergency key inside the safe. Keep it in a secure location known only to trusted individuals.
- Avoid exposing the safe to extreme temperatures or humidity.
- Regularly check battery levels to prevent unexpected lockouts.
- Do not share your access codes with unauthorized persons.

## 3. PRODUCT OVERVIEW AND FEATURES

The ARREGUI Forma Evolution 151040 is a high-security wall-mounted safe designed for home use, offering dual protection with an electronic lock and a key. Its robust construction and advanced security mechanisms ensure the safety of your valuables.

### Key Features:


- **Construction:** Made of steel, laser-cut, and lacquered in white.
- **Front Protection:** 6 mm thick front with an additional 3 mm anti-drill plate.
- **Body Thickness:** 2 mm thick body.

- **Locking Bolts:** 6 nickel-plated steel bolts, 22 mm in diameter. These bolts are anti-saw (rotating) and anti-leverage, preventing forced entry attempts.
- **Adjustable Depth:** The safe's depth is adjustable in 5 positions (200/225/250/275/300 mm) to fit various wall thicknesses.
- **Internal LED Light:** Low-consumption LED light activates automatically when the safe is opened and deactivates when closed.
- **Dual Security System:** Electronic lock with keypad combined with a double-bit key lock. Both are required for opening.
- **Electronic Lock:** Supports two codes (master and user) with 3 to 8 digits (100 million combinations). Temporarily blocks after 5 incorrect entries.
- **Digital Display:** 8-digit display shows helpful messages. Features a 'secret screen' function to hide typed codes.
- **Sound Control:** Adjustable keypad sound (4 intensity levels) or can be deactivated.
- **Emergency Opening:** Includes an emergency key and an external microUSB power supply for use in case of forgotten codes, dead batteries, or keypad malfunction.

## CARACTERÍSTICAS

## FORMA EVOLUTION

151040



**Espesor cuerpo:** 1,5 mm

**Espesor frente:** 6 mm acero + 3 mm placa antitaladro

**Luz interna**

**Balda interior** extraíble


**Fondo regulable** en 5 posiciones, para adaptarse a distintos grosores de pared

**Pantalla** 8 dígitos


**Llave de emergencia**

**Cierre perimetral,** con 6 bulones de Ø 22 mm


Toma de corriente externa tipo **micro USB**




**PROTECCIÓN ANTI TALADRO**  
Dispone de placa de acero antitaladro de 3 mm protegiendo el frontal de la caja fuerte.




**PROTECCIÓN ANTI SIERRA**  
Bulones giratorios y guiados por soportes macizos.



**PROTECCIÓN ANTI FISHING**  
Protección del botón de reinicio.



**PROTECCIÓN ANTI BUMPING**  
Protección de sistema electrónico frente a apertura por golpes.



**PROTECCIÓN ANTI PALANCA**  
Corte láser, alojamientos internos para los bulones de cierre y refuerzos de soldadura en bulones que evitan la acción de palanca.




Image 1: Detailed diagram highlighting the key features and components of the safe.

## 4. INSTALLATION

The ARREGUI Forma Evolution 151040 safe is designed for wall-mounting and requires construction work for proper installation. It is recommended to have this process carried out by a qualified professional.

### General Installation Guidelines:

1. **Prepare the Wall Opening:** Create an opening in the wall that accommodates the safe's dimensions, considering the adjustable depth. Ensure the opening is level and secure.

2. **Insert the Safe:** Carefully slide the safe into the prepared wall opening.
3. **Adjust Depth:** Utilize the adjustable back panel to match the wall thickness. There are 5 possible depth positions between 200 mm and 300 mm.
4. **Secure the Safe:** Anchor the safe firmly within the wall structure using appropriate fasteners (screws and anchors are included). Ensure it is flush with the wall surface.
5. **Finish Construction:** Complete any necessary masonry or finishing work around the safe to integrate it seamlessly into the wall.

## CAPACIDAD

## FORMA EVOLUTION 151040



**Estante extraíble**

**Capacidad 12-19 L**



JOYAS



DINERO



DOCUMENTOS  
Y CARPETAS



PASAPORTES



PORTÁTIL (13")

**ARREGUI**

*Image 2: The ARREGUI Forma Evolution 151040 safe integrated into a wall, demonstrating its discreet installation.*

## 5. SETUP

### 5.1. Battery Installation

1. Locate the battery compartment, typically on the inside of the safe door.
2. Insert 4 AA 1.5V alkaline batteries (not included), ensuring correct polarity.
3. Close the battery compartment cover. The display should activate.

### 5.2. Setting the Electronic Code

The safe supports two codes: a Master Code and a User Code. Both can be 3 to 8 digits long.

1. **Initial Setup:** When first powered on, the safe will be in a default state. Refer to the specific instructions on the display for initial code programming.
2. **Programming Master Code:** Follow the on-screen prompts to set your desired Master Code. This code has full access and can modify the User Code.
3. **Programming User Code:** After setting the Master Code, you can program a User Code. This code is used for daily access.
4. **Confirmation:** Always test your new codes several times with the door open before closing it to ensure they are correctly set.

### 5.3. Adjusting Sound and Secret Screen

- **Sound Adjustment:** The keypad sound can be adjusted to 4 different intensity levels or completely deactivated through the safe's menu settings. Consult the display for navigation.
- **Secret Screen Function:** Activate this function in the settings to prevent the entered code from being displayed on the screen, enhancing privacy.

## 6. OPERATION

---

### 6.1. Normal Opening (Electronic Code + Key)

1. Enter your programmed electronic code on the keypad. The display will confirm successful entry.
2. Immediately after entering the correct code, insert the user key into the keyhole and turn it to open the safe door.
3. To close, shut the door and turn the key to lock. The electronic system will automatically re-engage.

### 6.2. Emergency Opening

In situations such as forgotten codes, completely discharged batteries, or keypad malfunction, the safe can be opened using emergency methods.


- **Emergency Key:** Insert the emergency key into the designated emergency keyhole (separate from the user keyhole) and turn it. This will bypass the electronic lock. Then, use the user key to open the safe.
- **External Power Supply:** If batteries are dead, connect the provided external microUSB power supply to the microUSB port on the safe. This will temporarily power the keypad, allowing you to enter your code and open the safe with the user key. Once open, replace the internal batteries.

## MODOS DE APERTURA

FORMA EVOLUTION  
**ARREGUI**

### APERTURA HABITUAL

Código personal + llave de usuario

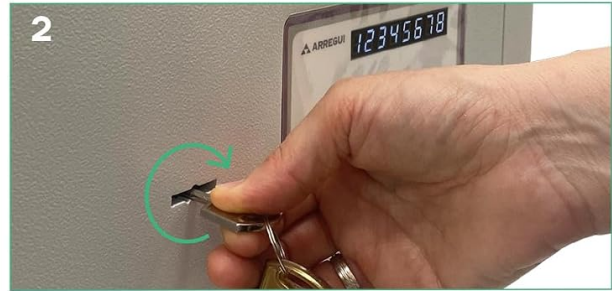

### APERTURA DE EMERGENCIA


Llave de emergencia  
(sustituye al código personal)




Cargador externo  
(en caso de pilas agotadas)



Servicio de Asistencia Técnica  
en toda España

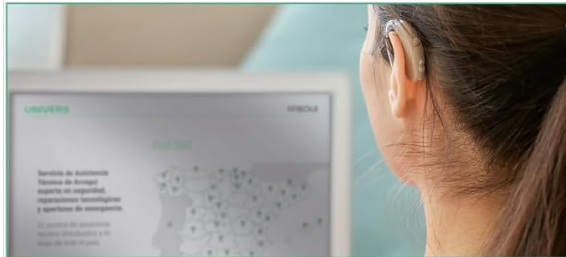

Duplicado  
de llaves

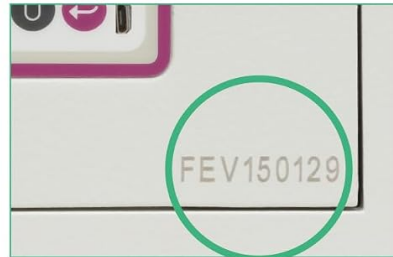

Nº de serie  
único grabado  
en la caja, para  
solicitar  
duplicados de  
llaves en caso  
de pérdida.

Image 3: Illustration of standard and emergency opening procedures.

## 7. MAINTENANCE

### 7.1. Battery Replacement

The digital display will indicate when the batteries are running low. It is crucial to replace them promptly to avoid being locked out.

1. Open the safe door.
2. Locate the battery compartment.
3. Remove the old batteries and dispose of them responsibly.
4. Insert 4 new AA 1.5V alkaline batteries, observing correct polarity.
5. Close the battery compartment.

### 7.2. General Care

- Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners.
- Do not lubricate the electronic lock mechanism.

- Ensure the safe door closes smoothly and the bolts engage fully.

## 8. TROUBLESHOOTING


Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered; batteries are low or dead; keypad malfunction.	Re-enter code carefully. Replace batteries. Use emergency key or external power supply.
Keypad is unresponsive.	Dead batteries; temporary electronic fault.	Use external microUSB power supply to activate keypad and open. Replace internal batteries.
Safe is temporarily blocked.	Too many incorrect code entries (5 times).	Wait for the lockout period to expire (refer to display messages).
Forgotten code.	Code cannot be recalled.	Use the emergency key to open the safe. Once open, reset the electronic code.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	151040
Exterior Dimensions (H x W x D)	27 x 38.5 x 20-30 cm (adjustable depth)
Interior Dimensions (H x W x D)	23 x 34.5 x 14.5-24.5 cm (adjustable depth)
Capacity	12 to 19 Liters (depending on depth)
Weight	20 kg
Material	Alloy Steel
Front Thickness	6 mm + 3 mm anti-drill plate
Body Thickness	2 mm
Locking Bolts	6 x 22 mm diameter, anti-saw, anti-leverage
Lock Type	Electronic lock with key (dual security)
Power Supply	4 x AA 1.5V batteries (not included)
Special Features	Adjustable depth, internal LED light, digital display, secret screen function, sound control

## DIMENSIONES Y COMPONENTES

## FORMA EVOLUTION 151040

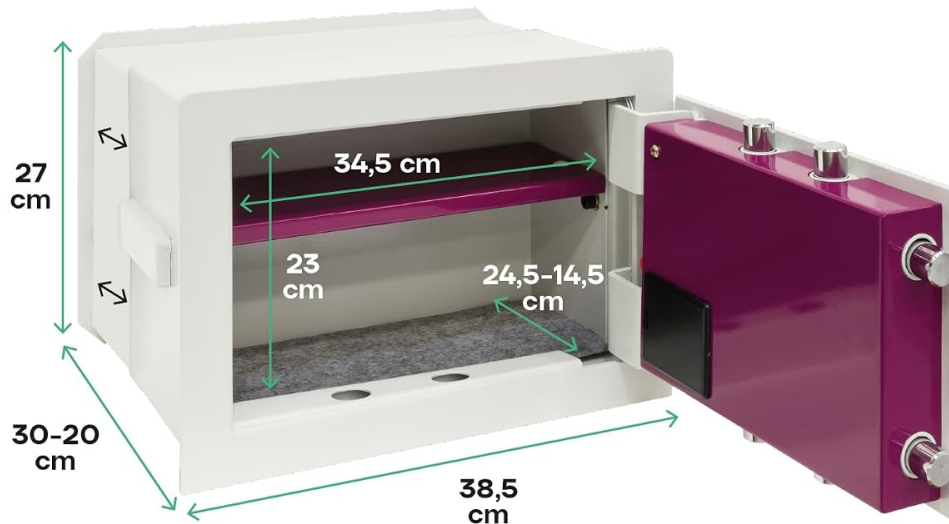

ESTANTE	MANUAL DE INSTRUCCIONES	CARGADOR EXTERNO MICRO USB	ALFOMBRILLA	2 LLAVES DE USUARIO	1 LLAVE DE EMERGENCIA
					

**ARREGUI**

Image 4: Visual representation of the safe's dimensions and capacity.

## 10. PACKAGE CONTENTS

The following items are included in your package:

- ARREGUI Forma Evolution 151040 Wall-Mounted Safe
- Instruction Manual (this document)
- 2 User Keys
- 1 Emergency Key
- 1 External MicroUSB Power Supply
- Mounting hardware (screws and anchors for installation)

## 11. WARRANTY AND SUPPORT

For warranty information, technical assistance, or to request duplicate keys, please contact ARREGUI customer support. Ensure you have your safe's serial number available when contacting support. The serial number is typically engraved on the safe body or inside the door.

For service requests or to obtain duplicate keys, please refer to the contact information provided on the official ARREGUI website or within your purchase documentation.

© 2024 Arregui. All rights reserved.