

[manuals.plus](#) /› [Philips](#) /› [Philips Norelco Multigroom All-in-One Trimmer MG3740 Instruction Manual](#)

Philips MG3740

Philips Norelco Multigroom All-in-One Trimmer MG3740 Instruction Manual

MODEL: MG3740**Brand: Philips**

1. INTRODUCTION

The Philips Norelco Multigroom All-in-One Trimmer MG3740 is designed for versatile grooming of face, head, and body hair. This durable trimmer features self-sharpening, skin-friendly blades to ensure a consistent and comfortable experience. The device includes various attachments for different styling needs, such as a nose trimmer, combs for facial hair, and a detail metal trimmer for precise edging. Its rinsable attachments facilitate easy cleaning and maintenance, making it a convenient tool for personal grooming.

2. PACKAGE CONTENTS

Your Philips Norelco Multigroom All-in-One Trimmer MG3740 package includes the following items:

- Multigroom Trimmer Handle
- Steel Trimmer Attachment
- Steel Precision Trimmer Attachment
- Nose and Ear Trimmer Attachment
- 4 Beard and Stubble Guards (1mm, 3mm, 5mm, 7mm)
- 3 Hair Guards (9mm, 12mm, 16mm)
- Power Adapter
- Cleaning Brush
- Storage Bag
- User Manual (this document)



Figure 2.1: Philips Norelco Multigroom Trimmer with all 13 pieces and storage bag.

Your browser does not support the video tag.

Video 2.2: Unboxing and overview of the Philips Norelco Multigroom 3000 trimmer and its accessories.

3. SETUP

3.1. Charging the Trimmer

Before first use, fully charge the trimmer. The trimmer is equipped with a rechargeable NiMH battery. A full charge provides up to 60 minutes of cordless use. The power adapter is included in the package.

1. Ensure the trimmer is switched off.
2. Insert the small plug of the power adapter into the charging port at the bottom of the trimmer.
3. Plug the power adapter into a wall outlet.
4. Allow the trimmer to charge for approximately 16 hours for the initial charge. Subsequent charges may take less time.



**60 minutes
of cordless use**



Figure 3.1: Charging port location and connection.

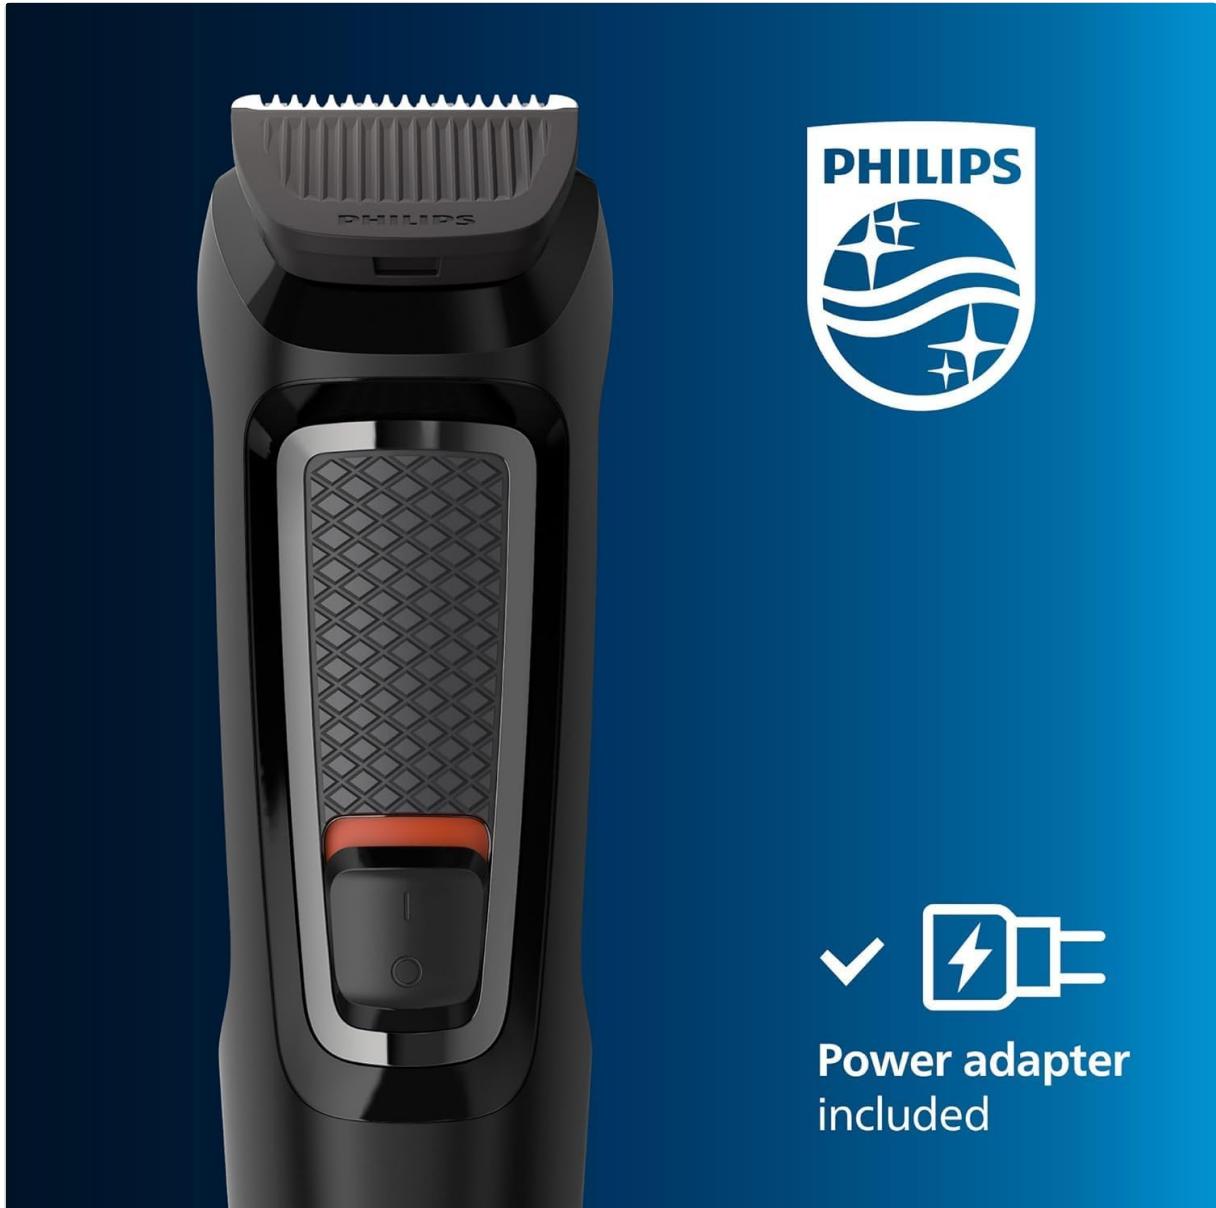


Figure 3.2: The trimmer provides up to 60 minutes of cordless use on a full charge.

3.2. Attaching and Detaching Trimmer Heads and Guards

The trimmer comes with various interchangeable heads and comb guards for different grooming styles.

1. **To attach a head:** Align the tab on the back of the desired head with the slot on the trimmer handle. Press the head down until it clicks into place.
2. **To detach a head:** Gently pull the head upwards from the trimmer handle.
3. **To attach a comb guard:** Slide the comb guard onto the trimmer head until it clicks into place.
4. **To detach a comb guard:** Pull the comb guard upwards from the trimmer head.



Figure 3.3: Overview of the trimmer and its various detachable heads and comb guards.

4. OPERATING THE TRIMMER

4.1. Switching On/Off

To switch the trimmer on, slide the on/off button upwards. To switch it off, slide the on/off button downwards.

4.2. Trimming Face and Beard

Use the steel trimmer head without a comb guard for a close trim (0.5mm) or to create clean lines around your beard, neck, and sideburns. For longer beard lengths, attach one of the 4 beard and stubble guards (1mm, 3mm, 5mm, 7mm).

1. To trim hair, place the flat side of the cutting element against your skin and make strokes against the direction of hair growth.
2. For contouring, hold the cutting element perpendicular to the skin and move it downwards or upwards with gentle pressure.

Self-sharpening, maintenance-free steel blades



Figure 4.1: Trimming facial hair with the Multigroom trimmer.

4.3. Hair Clipping

Use the steel trimmer head with one of the 3 hair guards (9mm, 12mm, 16mm) for clipping head hair.

1. Attach the desired hair guard to the full-size hair trimmer.
2. To trim the hair, move the trimmer slowly and smoothly following the natural hair growth.



**Rechargeable
NiMH battery**

Figure 4.2: Hair clipping with the Multigroom trimmer.

4.4. Detailing and Edging

Use the steel precision trimmer for creating fine lines and details, or for precise edging around your beard or hairline.

Complete styling



Face



Head



Detailing



Figure 4.3: Detailing and edging with the precision trimmer head.

4.5. Nose and Ear Trimming

Attach the nose and ear trimmer head to gently remove unwanted nose and ear hair. Insert the trimmer tip into your nostril or ear and move it gently to trim hairs.

5. MAINTENANCE

5.1. Cleaning

The trimmer's attachments are rinsable for easy cleaning.

1. Switch off the trimmer and disconnect it from the power outlet.
2. Remove the trimmer head and comb guards.
3. Rinse the trimmer heads and comb guards under running tap water.
4. Use the provided cleaning brush to remove any remaining hair from the trimmer body or attachments.
5. Allow all parts to air dry completely before reattaching or storing.



Rinseable attachments
Easy to clean
and maintain

Figure 5.1: Rinsable attachments for easy cleaning.

5.2. Blade Care

The trimmer features self-sharpening, maintenance-free steel blades that remain sharp for long-lasting performance. No oil is required for the blades.

Self-sharpening, maintenance-free steel blades



Figure 5.2: Self-sharpening steel blades for maintenance-free use.

6. TROUBLESHOOTING

- Trimmer does not turn on:** Ensure the trimmer is fully charged. If the issue persists, check the power cord for damage.
- Reduced trimming performance:** Clean the blades and attachments thoroughly. Ensure no hair is caught in the cutting element.
- No charging indicator:** This model does not feature a charging indicator light. Charge the device for the recommended time (16 hours for first charge, then 2-3 hours for subsequent charges) and rely on the battery life.

7. SPECIFICATIONS

Feature	Detail
Model Number	MG3740/15
Power Source	Battery Powered (1 AA battery required)
Battery Type	Rechargeable NiMH

Cordless Run Time	Up to 60 minutes
Charging Time	Approx. 16 hours (first charge), 2-3 hours (subsequent)
Blades	Self-sharpening steel blades (no oil required)
Attachments	13 pieces (various trimmer heads and comb guards)
Cleaning	Rinsable attachments
Color	Chrome/Black
Product Dimensions	2.68 x 8.78 x 5.59 inches
Item Weight	0.35 Kilograms (12.35 ounces)

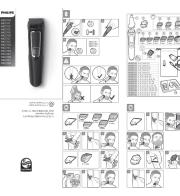
8. SAFETY INFORMATION

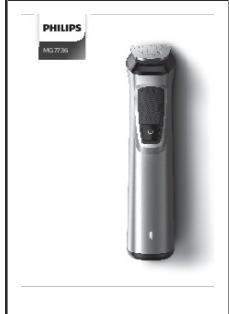
Always read the full instruction manual before using the product. Pay close attention to all safety warnings and guidelines to prevent injury or damage to the product. Do not operate this product if it has a damaged power cord, if it is not working properly, or after the product or power cord has been dropped into water. Keep the power cord away from heated surfaces. Do not use the power cord in or near a power outlet that contains an electric air freshener to prevent damage to the power cord. Do not use product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

9. WARRANTY AND SUPPORT

For warranty information and product support, please refer to the official Philips Norelco website or contact their customer service. Specific warranty details are typically provided with your purchase documentation.

Related Documents - MG3740

	<p><u>Philips Multigroom Series 3000 User Manual</u></p> <p>Comprehensive user manual for the Philips Multigroom Series 3000, covering safety information, usage instructions, maintenance, and troubleshooting for models MG3710 through MG3758.</p>
	<p><u>Philips Multigroom Series 3000 User Guide and Quick Start</u></p> <p>A comprehensive guide for the Philips Multigroom Series 3000 grooming device, detailing setup, usage, maintenance, and attachment compatibility for models MG3710 through MG3758.</p>

	<p>Philips Norelco Multigroom 3000 (MG3750/60) - Frequently Asked Questions & User Guide</p> <p>Find answers to common questions about your Philips Norelco Multigroom 3000 (MG3750/60) trimmer, including water resistance, model numbers, symbols, charging, and attachment replacement.</p>
	<p>Philips MG7736 MultiGroom Series 7000 User Manual and Instructions</p> <p>Comprehensive guide for the Philips MG7736 MultiGroom Series 7000, detailing attachment usage for beard, hair, and body grooming, charging, cleaning, and safety information.</p>
	<p>Philips MG3945/15 9-in-1 Trimmer: Versatile Grooming for Face, Hair, and Body</p> <p>Discover the Philips MG3945/15 All-in-One Trimmer 3000 Series. This 9-in-1 grooming tool offers efficient styling for face, hair, and body with self-sharpening blades, multiple attachments, and a long-lasting battery. Learn about its features, specifications, and user-friendly design.</p>
	<p>Philips MG3930/15 All-in-One Trimmer 3000 Series: Versatile Grooming Guide</p> <p>Discover the Philips MG3930/15 All-in-One Trimmer 3000 Series. This 7-in-1 trimmer offers versatile face and hair styling with self-sharpening blades, rounded tips, and 60 minutes of runtime. Learn about its features, specifications, and easy maintenance.</p>