



Manuals.plus /

› DEWALT /

› DEWALT DCS367P2-QW Compact Brushless XR 18V Reciprocating Saw User Manual

DEWALT DCS367P2-QW

DEWALT DCS367P2-QW Compact Brushless XR 18V Reciprocating Saw User Manual

Model: DCS367P2-QW | Brand: DEWALT

**Safety
Instructions**

**Product Components
Troubleshooting**

**Setup
Specifications**

**Operating
Instructions
Warranty
Support**

Maintenance

INTRODUCTION

This manual provides essential information for the safe and efficient use of your DEWALT DCS367P2-QW Compact Brushless XR 18V Reciprocating Saw. Please read all instructions carefully before operating the tool to ensure proper function and to prevent injury.

The DEWALT DCS367P2-QW is a compact, cordless reciprocating saw designed for various cutting applications, including wood, metal, and PVC. It features a powerful brushless motor, variable speed trigger, and a 4-position blade clamp for versatility.

GENERAL SAFETY INSTRUCTIONS

Always follow basic safety precautions when using power tools to reduce the risk of fire, electric shock, and personal injury.

Work Area Safety

- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating a power tool.

Electrical Safety

- Power tool plugs must match the outlet. Never modify the plug in any way.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges, and refrigerators.
- Do not expose power tools to rain or wet conditions.

Personal Safety

- Always wear eye protection, such as safety goggles, and hearing protection.
- Dress properly. Do not wear loose clothing or jewelry. Keep hair and clothing away from moving parts.
- Stay alert, watch what you are doing, and use common sense when operating a power tool.
- Do not overreach. Keep proper footing and balance at all times.
- Remove any adjusting key or wrench before turning the power tool on.

Power Tool Use and Care

- Do not force the power tool. Use the correct power tool for your application.
- Disconnect the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the power tool's operation.
- Use the power tool, accessories, and tool bits in accordance with these instructions, taking into account the working conditions and the work to be performed.

Battery Tool Use and Care

- Recharge only with the charger specified by the manufacturer.
- Use power tools only with specifically designated battery packs.
- When the battery pack is not in use, keep it away from other metal objects.

PRODUCT COMPONENTS

Familiarize yourself with the main components of your DEWALT DCS367P2-QW reciprocating saw.



Image: The DEWALT DCS367P2-QW reciprocating saw, showing the main body, handle, blade clamp, and an attached 18V XR 5.0Ah battery.



Image: Side view of the DEWALT DCS367P2-QW reciprocating saw, highlighting its compact design and the XR 18V Li-Ion branding.



Image: Another side view of the saw, showing the product label with model number DCS367 and various certifications.



Image: Close-up of the saw's front end, detailing the 4-position blade clamp mechanism for versatile cutting angles.



Image: Close-up of the yellow blade release lever, indicating the mechanism for quick blade changes.

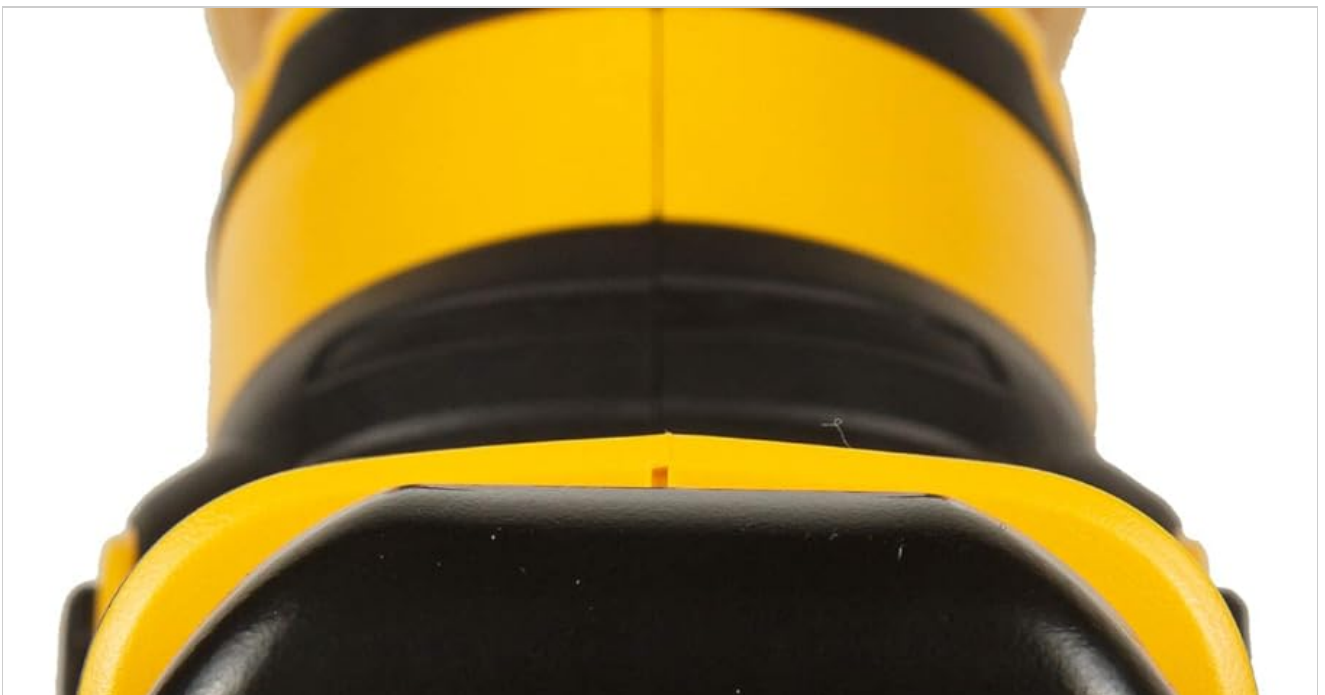




Image: Close-up of the saw's handle, showing the variable speed trigger and the lock-off button for safety and control.



Image: The included DEWALT 18V XR 5.0Ah Lithium-ion batteries and the DCB115 charger, essential for cordless operation.

SETUP INSTRUCTIONS

Charging the Battery

1. Connect the charger (DCB115) to a suitable power outlet.
2. Slide the battery pack (18V XR 5.0Ah) onto the charger until it clicks into place.
3. The charging indicator light on the charger will show the charging status. Refer to the charger manual for specific light patterns.
4. Once fully charged, remove the battery pack from the charger.

Installing the Battery

1. Ensure the saw's trigger is locked off.
2. Align the battery pack with the battery port on the saw's handle.
3. Slide the battery pack into the tool until it locks securely in place.
4. To remove, press the battery release button and slide the battery out.

Installing a Saw Blade

Always ensure the battery pack is removed before installing or changing blades.

1. Locate the blade clamp lever on the front of the saw.
2. Rotate the blade clamp lever counter-clockwise to open the blade clamp jaws.
3. Insert the shank of the reciprocating saw blade fully into the blade clamp. Ensure the teeth of the blade are facing the correct direction for cutting.
4. Release the blade clamp lever. The blade should be held firmly in place. Gently pull on the blade to confirm it is secure.
5. To remove a blade, rotate the blade clamp lever counter-clockwise and pull the blade out.

OPERATING INSTRUCTIONS

General Operation

1. **Grip:** Hold the saw firmly with both hands. The compact design allows for a comfortable grip near the center of gravity.
2. **Starting the Saw:** Press the lock-off button (if engaged) and then depress the variable speed trigger. The saw speed will increase as you press the trigger further.
3. **Stopping the Saw:** Release the variable speed trigger. The electronic motor brake will stop the blade quickly.
4. **Adjusting the Shoe:** The pivoting shoe can be adjusted to control the depth of cut and provide stability.
5. **4-Position Blade Clamp:** The blade can be inserted in four different orientations (up, down, left, right) to facilitate flush cutting and access in tight spaces.



Image: A user wearing gloves holding the DEWALT DCS367P2-QW reciprocating saw, demonstrating a secure grip on the tool.

Cutting Techniques

- **Wood Cutting:** Use appropriate wood-cutting blades. Ensure the workpiece is securely clamped. Start the saw before contacting the material.
- **Metal Cutting:** Use metal-cutting blades. Apply cutting fluid to prolong blade life and improve cutting performance. Maintain a steady, firm pressure.
- **PVC Cutting:** Use blades designed for plastic. The variable speed trigger allows for slower speeds to prevent melting of the material.

- **Flush Cutting:** Utilize the 4-position blade clamp to orient the blade for flush cuts against surfaces.
- **Plunge Cutting (Wood Only):** For plunge cuts in wood, position the shoe firmly against the workpiece. Start the saw at a low speed, allowing the blade to slowly pivot into the material. Increase speed once the blade has entered the material.



Image: A user operating the DEWALT DCS367P2-QW reciprocating saw to cut a piece of wood, demonstrating a typical cutting application.



Image: A user utilizing the DEWALT DCS367P2-QW reciprocating saw to cut a metal pipe, showcasing its versatility across different materials.

LED Work Light

The integrated LED light illuminates the work area, improving visibility in dimly lit conditions. It activates when the trigger is pressed.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your reciprocating saw. Always disconnect the battery pack before performing any maintenance.

Cleaning

- Keep the ventilation slots clean to prevent overheating.
- Use a soft brush or compressed air to remove dust and debris from the tool.
- Do not use water or chemical cleaning agents.

Blade Care

- Inspect blades before each use for sharpness and damage. Replace dull or damaged blades immediately.
- Store blades properly to prevent damage and corrosion.

Battery and Charger Care

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not store batteries in a discharged state for extended periods.
- Keep charger contacts clean.

TROUBLESHOOTING

This section addresses common issues you might encounter with your reciprocating saw.

Problem	Possible Cause	Solution
Saw does not start.	Battery not charged or improperly installed. Lock-off button engaged.	Ensure battery is fully charged and correctly inserted. Disengage the lock-off button before pressing the trigger.
Blade not cutting efficiently.	Dull or incorrect blade for the material. Blade not securely clamped.	Replace with a sharp, appropriate blade. Ensure the blade is fully inserted and the clamp is secure.
Excessive vibration.	Loose blade. Damaged blade.	Check blade for secure installation. Replace damaged blade.
Tool overheats.	Blocked ventilation slots. Overloading the tool.	Clean ventilation slots. Reduce cutting pressure and allow the tool to cool.

If you encounter issues not listed here or if the problem persists after attempting the solutions, please contact DEWALT customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	DCS367P2-QW
Voltage	18 Volts
Battery Type	Lithium-ion (2 included, 5 Ah each)
No-Load Stroke Rate	0-2900 strokes per minute (spm)
Stroke Length	28.6 mm
Max. Cutting Capacity (Wood)	300 mm
Max. Cutting Capacity (Metal)	100 mm
Max. Cutting Capacity (PVC)	160 mm
Tool Length	363 mm (compact design)
Weight (without battery)	2.3 kg
Blade Material	High-speed steel (recommended)
Special Features	Brushless motor, 4-position blade clamp, LED work light, variable speed trigger, electronic motor brake.
Dimensions (L x W x H)	44.5 x 34.5 x 16 cm
Included Components	Reciprocating Saw, 2x 5.0Ah XR 18V Batteries, Charger, TSTAK Case

WARRANTY INFORMATION

Your DEWALT DCS367P2-QW Reciprocating Saw comes with a limited warranty. The specific terms and duration of the warranty may vary by region and purchase date. Please refer to the warranty card included with your product or visit the official DEWALT website for detailed information regarding warranty coverage, terms, and conditions. Keep your proof of purchase (receipt) as it will be required for any warranty claims.

CUSTOMER SUPPORT

For technical assistance, service, or to order replacement parts, please contact DEWALT customer support.

- **Online Support:** Visit the official DEWALT website for FAQs, product registration, and service center locations.
- **Telephone Support:** Refer to your product packaging or the DEWALT website for local contact numbers.
- **Service Centers:** Authorized DEWALT service centers are available for repairs and maintenance.

When contacting support, please have your model number (DCS367P2-QW) and serial number ready.