

Gingko GK08W13

Gingko Cube LED Click Clock User Manual

Model: GK08W13 | Brand: Gingko

- [Introduction](#)
- [Safety Information](#)
- [Setup](#)
- [Operation](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Specifications](#)
- [Support](#)

1. INTRODUCTION

Thank you for purchasing the Gingko Cube LED Click Clock. This innovative alarm clock combines elegant design with smart functionality, displaying time, date, and temperature. Its unique sound-activated display ensures a dark room at night, illuminating only when needed. Please read this manual carefully to ensure proper setup and operation of your device.



Figure 1: The Gingko Cube LED Click Clock displaying the time 15:19. The clock features a minimalist cube design with a white wood-grain finish and bright white LED digits.

2. SAFETY INFORMATION

- Do not expose the device to water or excessive moisture.
- Avoid extreme temperatures, direct sunlight, or heat sources.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Use only the provided USB adapter or compatible power sources.
- Keep out of reach of children.
- Dispose of batteries responsibly according to local regulations.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Gingko Cube LED Click Clock (Model GK08W13)

- USB Power Adapter
- USB Cable
- Instruction Manual (this document)

4. PRODUCT OVERVIEW

The Ginkgo Cube LED Click Clock is designed for simplicity and functionality. Its main features include a hidden LED display that appears through the wood-grain finish, and control buttons located on the back panel.



Figure 2: Rear view of the Ginkgo Cube LED Click Clock. This image shows the battery compartment cover removed, revealing slots for three AAA batteries. Above the battery compartment, five small control buttons are visible: SET, UP, DOWN, V/S, and RESET.

4.1 Control Buttons

SET: Enters setting mode for time, date, and alarms. Confirms selections.

UP: Increases values during setting.

DOWN: Decreases values during setting.

V/S (Voice/Sound): Toggles between sound-activated display mode and permanent display mode.

RESET: Resets the clock to factory defaults.

4.2 Power Input

The clock can be powered via the included USB cable and adapter, or by 3 x AAA batteries (not included). An internal battery is included to retain settings during power outages.

5. SETUP

5.1 Powering On

1. **Using USB Power:** Connect the small end of the USB cable to the DC5V port on the back of the clock. Plug the larger end into the USB power adapter, then plug the adapter into a wall outlet.
2. **Using Batteries:** Open the battery compartment cover on the back of the clock. Insert 3 x AAA batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.

The display will light up, indicating the clock is powered on.

5.2 Initial Settings (Time, Date, Temperature Format)

Press and hold the **SET** button for 3 seconds to enter setting mode. The display will flash, indicating the current setting is ready for adjustment. Use the **UP** and **DOWN** buttons to change values. Press **SET** to confirm and move to the next setting.

1. **Year Setting:** Adjust the year (e.g., 2024). Press **SET**.
2. **Month Setting:** Adjust the month. Press **SET**.
3. **Date Setting:** Adjust the day. Press **SET**.
4. **12/24 Hour Format:** Select "12H" or "24H". Press **SET**.
5. **Hour Setting:** Adjust the hour. Press **SET**.
6. **Minute Setting:** Adjust the minute. Press **SET**.
7. **Temperature Unit:** Select "°C" (Celsius) or "°F" (Fahrenheit). Press **SET**.

The clock will exit setting mode automatically after a few seconds of inactivity or after the last setting is confirmed.

6. OPERATING INSTRUCTIONS

6.1 Display Modes (Time, Date, Temperature)

The clock can cycle through displaying time, date, and temperature. By default, it will alternate between these displays.



Figure 3: The clock displaying the time 11:43, positioned on a dark desk next to a laptop. This illustrates the clock's compact size and clear LED display in a typical environment.



Figure 4: The clock displaying the temperature 19°C, also on a dark desk next to a laptop. This shows the clock's ability to display environmental temperature in addition to time and date.

6.2 Sound Activation (V/S Mode)

The clock features a sound-activated display mode, which conserves power and keeps your room dark. In this mode, the display turns off when the room is quiet and illuminates when a sound (like a clap or tap) is detected.

- Press the **V/S** button to toggle between sound-activated display (display turns off after a few seconds of silence) and permanent display (display remains on).
- When in sound-activated mode, a sound above 60dB (e.g., a clap, finger snap, or gentle tap on the clock/surface) will activate the display for approximately 10 seconds.

6.3 Alarm Settings

The clock supports up to three different alarm settings (AL1, AL2, AL3).

1. From the normal display mode, short press the **SET** button repeatedly until "AL1", "AL2", or "AL3" appears.
2. To set an alarm, press and hold the **SET** button for 3 seconds when the desired alarm (e.g., "AL1") is displayed. The hour digits will flash.
3. Use **UP** and **DOWN** to set the alarm hour. Press **SET**.
4. Use **UP** and **DOWN** to set the alarm minute. Press **SET**.
5. The display will show "ON:AL" or "OFF:AL". Use **UP** or **DOWN** to toggle the alarm ON or OFF. Press **SET** to confirm.
6. Repeat for AL2 and AL3 if desired.

When an alarm sounds, it will last for 1 minute. To stop the alarm, press any button. The alarm will automatically turn off after 1 minute if no button is pressed.

6.4 Dimmer Function

The clock features an automatic dimmer function. The display brightness will automatically adjust between brighter (7:00 AM - 6:59 PM) and dimmer (7:00 PM - 6:59 AM) modes to suit ambient light conditions.

7. MAINTENANCE

- Clean the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If using batteries, replace them when the display becomes dim or erratic. Remove batteries if the clock will not be used for an extended period.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is off or dim.	Sound-activated mode is on; low batteries; no power.	Tap the clock or make a sound to activate. Press V/S to switch to permanent display. Replace batteries or ensure USB power is connected.
Clock not responding to buttons.	Temporary software glitch.	Press the RESET button on the back of the clock. Re-enter settings if necessary.
Alarm does not sound.	Alarm is set to OFF; incorrect alarm time.	Check alarm settings (AL1/AL2/AL3) to ensure it is set to ON and the time is correct.
Incorrect time/date/temperature.	Settings not correctly configured.	Re-enter setting mode (Section 5.2) and adjust values.



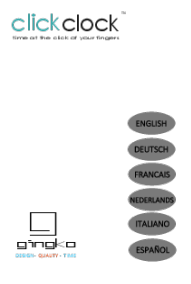

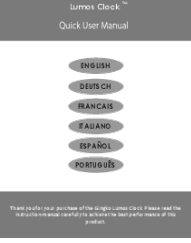

9. SPECIFICATIONS

Feature	Detail
Model Number	GK08W13
Dimensions (L x W x H)	68 x 68 x 68 mm (2.68 x 2.68 x 2.68 inches)
Weight	120 grams (0.26 lbs)
Material	Plastic
Color	White / White LED
Display Type	Digital LED
Power Source	USB Cable (DC5V) or 3 x AAA Batteries
Features	Time, Date, Temperature Display, Sound Activation, 3 Alarm Settings, Dimmer Function, Internal Battery for Settings Retention

10. WARRANTY AND SUPPORT

Gingko products are designed and manufactured to the highest standards. For warranty information or technical support, please refer to the official Gingko website or contact your retailer. Please have your model number (GK08W13) and purchase details ready when seeking support.

For more information, visit: www.gingkodesign.com

	<p>Gingko Cube Plus Click Clock User Manual</p> <p>A comprehensive guide to setting up, operating, and maintaining the Gingko Cube Plus Click Clock, including features like time setting, alarm functions, sound activation, and flip operations.</p>
	<p>Gingko Click Clock Digital Alarm Clock - Features, Settings, and Manual</p> <p>Comprehensive guide to the Gingko Click Clock, a wooden digital alarm clock. Learn about its features, how to set the time, date, alarms, temperature format, sound activation, and snooze function. Includes care instructions.</p>
	<p>Gingko clickclock: Digital Alarm Clock User Manual and Instructions</p> <p>Comprehensive user manual for the Gingko clickclock digital alarm clock. Learn how to set time, date, temperature, alarms, use sound activation, and snooze functions. Includes product care information.</p>
	<p>Gingko Tumbler Click Clock: Quick User Manual</p> <p>User manual for the Gingko Tumbler Click Clock, detailing its features, setup, operation, and care. Learn how to set time, alarms, and manage display modes.</p>
	<p>Gingko Lumos Clock Quick User Manual - Setup, Operation, and Care</p> <p>Comprehensive guide for the Gingko Lumos Clock, covering setup, charging, touch controls, time and alarm settings, display modes, snooze, light functions, product care, and warranty information.</p>
	<p>Gingko Smart Diffuser Lamp: User Manual & Guide</p> <p>Official user manual for the Gingko Smart Diffuser Lamp. Learn about its features, how to use it, charging, care, and warranty information.</p>