

## WMF 0414120011

# WMF Küchenminis Long Slotted Toaster Model 0414120011 User Manual

Model: 0414120011

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your WMF Küchenminis Long Slotted Toaster, Model 0414120011. Please read all instructions carefully before first use and retain this manual for future reference.

The WMF Küchenminis Long Slotted Toaster is designed for toasting various types of bread, including long slices, bagels, and rolls. It features a compact design, multiple browning levels, and convenient functions for defrosting and reheating.



Image 1.1: The WMF Küchenminis Long Slotted Toaster, showcasing its sleek stainless steel design and control panel.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions.
2. **Electrical Compatibility:** This appliance operates on 220-240 Volts. Ensure your power supply matches this requirement. Do not use with incompatible voltage.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect, press the STOP button, then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
15. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
16. Do not attempt to dislodge food when toaster is plugged in.
17. Do not operate unattended.

## 3. PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your WMF Küchenminis Long Slotted Toaster:

- **Toasting Slot:** Long slot designed for various bread sizes.
- **Browning Control Dial:** Adjusts the desired level of toast browning (1-7).
- **Control Buttons:** Includes Stop, Reheat, Defrost, and Bagel functions, each with an indicator light.
- **Toast Lift Lever:** Lowers and raises bread into the toasting slot.
- **Crumb Tray:** Removable tray for easy cleaning of crumbs.
- **Integrated Bun Warmer:** A rack that can be raised for warming buns or pastries.



Image 3.1: Close-up view of the toaster's control panel, showing the browning dial and function buttons.



Image 3.2: The toaster with its integrated bun warmer raised, suitable for warming rolls or pastries.

## 4. SETUP

---

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future transport if needed.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
3. **First Use:** Before toasting bread for consumption, operate the toaster empty on the highest browning setting (7) for a few cycles. This will burn off any manufacturing residues and eliminate initial odors. Ensure the area is well-ventilated during this process.
4. **Power Connection:** Plug the power cord into a grounded 220-240V AC electrical outlet.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Toasting

1. Ensure the crumb tray is properly inserted.
2. Place one slice of bread or a long slice of bread into the toasting slot.
3. Select your desired browning level using the browning control dial (settings 1-7, with 1 being lightest and 7 darkest).
4. Press the toast lift lever down until it locks into place. The toasting cycle will begin.

5. Once the desired browning is achieved, the toast will automatically pop up.



Image 5.1: Bread inserted into the long toasting slot of the WMF toaster.

## 5.2 Function Buttons

- **STOP Button (||):** Press this button to immediately cancel the toasting cycle at any time. The toast will pop up.
- **REHEAT Button (SSS):** Use this function to warm up already toasted bread without further browning. Insert the toast, press the lever down, then press the REHEAT button. The indicator light will illuminate.
- **DEFROST Button (\*):** For toasting frozen bread. Insert frozen bread, press the lever down, then press the DEFROST button. The indicator light will illuminate. This function automatically adjusts the toasting time for frozen items.
- **BAGEL Button (Triangle):** Ideal for toasting bagels or thick slices of bread, toasting one side more than the other. Insert the bagel (cut side facing inwards), press the lever down, then press the BAGEL button. The indicator light will illuminate.

## 5.3 Using the Integrated Bun Warmer

To warm buns, croissants, or pastries:

1. Gently push the bun warmer lever upwards until the rack is fully extended.
2. Place the items to be warmed on the bun warmer rack.
3. Set the browning control to a lower setting (e.g., 1 or 2).
4. Press the toast lift lever down to start the warming cycle.
5. Monitor the items closely to prevent over-warming or burning. Press the STOP button when desired warmth is achieved.
6. After use, push the bun warmer lever downwards to retract the rack.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always unplug the toaster** from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
3. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the stainless steel finish.
4. **Interior:** Never insert any objects into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully remove the item once the toaster is cool.
5. Do not immerse the toaster in water or any other liquid.



Image 6.1: The removable crumb tray being extracted from the base of the toaster for cleaning.

## 7. TROUBLESHOOTING

---

If you encounter issues with your toaster, refer to the following common problems and solutions:

| Problem                         | Possible Cause                                                | Solution                                                                                                                       |
|---------------------------------|---------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Toaster does not turn on.       | Not plugged in; power outage; faulty outlet.                  | Ensure plug is securely in a working 220-240V outlet. Check circuit breaker.                                                   |
| Toast is too light or too dark. | Browning control setting is incorrect.                        | Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.                    |
| Toast does not pop up.          | Lever not fully engaged; mechanical issue.                    | Ensure the toast lift lever is pushed down until it locks. If issue persists, unplug and contact customer support.             |
| Smoke coming from toaster.      | Food lodged in slot; excessive crumbs; high browning setting. | Immediately press STOP and unplug. Allow to cool. Clean crumb tray. Carefully remove any lodged food. Reduce browning setting. |

If the problem persists after attempting these solutions, please contact WMF customer support.

## 8. SPECIFICATIONS

- **Brand:** WMF
- **Model Number:** 0414120011
- **Material:** Stainless Steel
- **Voltage:** 240 Volts (Nominal, compatible with 220V systems)
- **Wattage:** 220 watts
- **Number of Slices:** 1 (long slot)
- **Browning Settings:** 7 levels
- **Special Features:** Cancel Function, Defrost, Reheat, Bagel Function, Integrated Bun Warmer, Removable Crumb Tray
- **Product Dimensions:** 9.45 x 16.54 x 6.3 inches (24 x 42 x 16 cm)
- **Item Weight:** 5.13 pounds (2.33 kg)

## 9. WARRANTY AND SUPPORT

Your WMF Küchenminis Long Slotted Toaster is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or to inquire about replacement parts, please contact WMF customer service through their official website or the contact information provided in your product documentation. Please have your model number (0414120011) and proof of purchase ready when contacting support.

Related Documents - 0414120011

WMF KÜCHENminis



DE Betriebsanleitung  
Long-Slot Toaster

EN Operating Manual  
Long Slot Toaster

FR Mode d'emploi  
Grilltoaster

ES Instrucciones de uso  
Tostador

IT Istruzioni per l'uso  
Tostapane

NL Bedieningshandleiding  
Broodtoaster

4

50

41

5

51

42

16

52

53

22

50

55

[WMF KÜCHENminis Long Slot Toaster - Operating Manual](#)

Comprehensive operating manual for the WMF KÜCHENminis Long Slot Toaster, covering safety instructions, usage, features, cleaning, and maintenance. Learn how to safely and effectively use your WMF toaster for perfect toast every time.

WMF

LONG-SLOT TOASTER

LUMERO



TECHNISCHE DATEN  
TECHNICAL DATA

[WMF Lumero Long-Slot Toaster Operating Instructions](#)

Discover the WMF Lumero Long-Slot Toaster with this comprehensive operating manual. Learn about its features, safe usage, maintenance, and how to achieve perfect toast every time.

WMF Lono



DE Betriebsanleitung  
Glas-Toaster

EN Operating Manual  
Glass Toaster

FR Mode d'emploi  
Grilltoaster en verre

ES Instrucciones de uso  
Tostador con ventana de vidrio

IT Istruzioni per l'uso  
Tostapane in vetro

4

50

41

5

51

42

16

52

53

22

50

55

[WMF Lono Glass Toaster - Instruction Manual](#)

Comprehensive instruction manual for the WMF Lono Glass Toaster, detailing safety precautions, operating instructions, cleaning procedures, and technical specifications in multiple languages.

WMF

2-LONG SLOT TOASTER

BUENO



TECHNISCHE DATEN  
TECHNICAL DATA

[WMF Bueno 2-Slot Toaster Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für den WMF Bueno 2-Slot Toaster. Enthält Sicherheitshinweise, Gebrauchsanweisungen und technische Daten für optimale Nutzung und Pflege.

WMF

TOASTER

MASTER



TECHNISCHE DATEN  
TECHNICAL DATA

[WMF Master Toaster: Operating Instructions and User Guide](#)

Learn how to safely operate and maintain your WMF Master Toaster. This guide covers setup, features, safety precautions, cleaning, and technical specifications for optimal use.

WMF 5000S+

Operating & cleaning instructions





WMF 5000S+

Operating & cleaning instructions



WMF 5000S+

Operating & cleaning instructions



WMF 5000S+

Operating & cleaning instructions

[WMF 5000S+ Operating and Cleaning Instructions](#)

Comprehensive operating and cleaning instructions for the WMF 5000S+ coffee machine, covering daily maintenance, system cleaning, milk system care, and hopper management.

Documents - WMF – 0414120011







Un grille-pain compact pour des toasts XXL, bagels, longues tranches de pain et viennoiseries

Le grille-pain longue fente WMF KITCHENminis a une forme très mince et compacte et son faible encombrement tient du miracle. Pourtant il peut contenir deux tranches de pain XXL, ou une grande crêpe longue. Grâce à sa fonction de grillage régulier, il vous offre des résultats parfaitement conformes des deux côtés.

[pdf]

Télécharger la fiche produit WMF 0414120011 Grille pain Villatech 1000119779 villatech fr media ||| KITCHENminis Grille-pain longue fente **0414120011** Un grille-pain compact pour des toasts XXL, bagels, longues tranches de pain et viennoiseries Le grille-pain longue fente WMF KITCHENminis a une forme trs mince et compacte et son faible encombrement tient du miracle Pourtant il peut contenir deux t... lang:fr score:31 filesize: 232.38 K page\_count: 4 document date: 2022-02-19



KÜCHENminis®

Langschlitz-Toaster



de

Gebruiksaanwijzing

4

en

Operating Manual

10

fr

Mode d'emploi

16

it

Istruzioni per l'uso

22

es

Instrucciones de uso

28

nl

Gebruiksaanwijzing

34

da

Brugsanvisning

40

av

Arvidningsanvisning

46

fi

Käyttöohje

52

no

Bruksanvisning

58

[pdf] User Manual Guide Accessories

Buch 14120011 KITCHENminis LongTA indb WMF XXL Toaster 881795 Manual wmf kitchenminis xxi broodrooster manuals coolblue nl d6 ||| Langschlitz-Toaster de Gebrauchsanweisung 4 en Operating Manual 10 fr Mode d'emploi 16 it Istru ... D-89343 Jettingen-Scheppach Germany www.wmf-ce.de nderungen vorbehalten - IB-14120011-02-1707 type: **0414120011** ... lang:it score:26 filesize: 3.17 M page\_count: 64 document date: 2017-07-14



[\[pdf\]](#) User Manual Instructions Guide

Buch 14120011 KITCHENminis LongTA indb Langschlitz Toaster 10 oct 2023 — Operating Manual  
Important safety instructions - The device must not be Insert the slice of bread into slot slices should  
thicker 33 pages 31185227 d otto de files |||

Langschlitz-Toaster de Gebrauchsanweisung 4 en Operating Manual 10 fr Mode d  
emploi 16 it Istru ... D-89343 Jettingen-Scheppach Germany www.wmf-ce.de  
nderungen vorbehalten - IB-14120011-05-1708 type: **0414120011** ...  
lang:it **score:26** filesize: 3.17 M page\_count: 33 document date: 2017-11-07



[\[pdf\]](#)

Wmf 414120011 KITCHENminis Toster Stal Nierdzwerna 900 W Srebrny Sklep internetowy stylem pl wmf  
kitchenminis toster stal nierdzwerna w srebrny 258082 upload files product |||  
Wmf 414120011 KITCHENminis Toster, Stal Nierdzwerna, 900 W, Srebrny Indeks:  
258082 Producent: WMF Kod producenta: **0414120011** Cena: 492.23 zł Opis Wmf  
414120011 KITCHENminis Toster, Stal Nierdzwerna, 900 W, Srebrny Producent:  
WMF Zapraszamy do skorzystania z rewelacyjnego tostera WMF KITCHENminis,  
ktry...

lang:pl **score:25** filesize: 942.25 K page\_count: 3 document date: 2023-05-17



[\[pdf\]](#) User Manual Guide

Buch 14120011 KITCHENminis LongTA indb Bedienungsanleitung 1762840 WMF 0414120011  
Langschlitztoaster Schwarz Silber matt Conrad e B2B on line SLO Trgovina za podjetja!  
bedienungsanleitung wmf langschlitztoaster schwarz silber asset conrad media10 add 160267 c1 gl  
001762840ML01 |||

Langschlitz-Toaster de Gebrauchsanweisung 4 en Operating Manual 10 fr Mode d  
emploi 16 it Istru ... D-89343 Jettingen-Scheppach Germany www.wmf-ce.de  
nderungen vorbehalten - IB-14120011-05-1708 type: **0414120011** ...  
lang:it **score:20** filesize: 3.17 M page\_count: 33 document date: 2017-11-07





### [\[pdf\]](#) User Manual Guide

Microsoft Word Couverture notice 1 page 2015 flo1dia MARQUE WMF REFERENCE 414120011 CODIC 4391241 Darty Consignes de sécurité importantes - L appareil ne doit pas être mis en service à l aide d une minuterie externe ou commande distance b3d54826e0c4fafba59d6808eec37824d4768f9f fc darty notices b 3 5 |||

MARQUE: REFERENCE: CODIC: WMF 414120011 4391241 NOTICE Langschlitz-Toaster de Gebrauchsanweisun ... D-89343 Jettingen-Scheppach Germany www.wmf-ce.de nderungen vorbehalten - IB-14120011-05-1708 type: **0414120011** ... lang:it **score:17** filesize: 737.71 K page\_count: 7 document date: 2018-02-08



### [\[pdf\]](#) User Manual Guide Accessories

Buch 14120011 KITCHENminis LongTA indb Bekijk de handleiding WMF Broodrooster XXL 900W RVS Zwart bol original media s xQWkJOj49GP |||

Langschlitz-Toaster de Gebrauchsanweisung 4 en Operating Manual 10 fr Mode d emploi 16 it Istru ... D-89343 Jettingen-Scheppach Germany www.wmf-ce.de nderungen vorbehalten - IB-14120011-02-1707 type: **0414120011** ...

lang:it **score:13** filesize: 272.61 K page\_count: 64 document date: 2020-04-30



### [\[pdf\]](#) User Manual Guide Accessories

Buch 14120011 KITCHENminis LongTA indb GebrauchsanleitungWMF KÜCHENminis XXL Toaster Coolblue Toasterv1manuals coolblue de d6 wmf kitchenminis xxl broodrooster Langschlitz ToasterGebrauchsanleitungWMF Toasterv1v1manuals be broodroostermanuals |||

Langschlitz-Toaster de Gebrauchsanweisung 4 en Operating Manual 10 fr Mode d emploi 16 it Istru ... D-89343 Jettingen-Scheppach Germany www.wmf-ce.de nderungen vorbehalten - IB-14120011-02-1707 type: **0414120011** ...

lang:it **score:12** filesize: 3.17 M page\_count: 64 document date: 2017-07-14



[\[pdf\]](#) User Manual Instructions

Download WMF KITCHENminis Long slot toaster 04 1412 0011 IFU LD dam groupeseb m 44ccf3bed58a74c9 original timestamp 20250128104534 |||

LONG SLOT TOASTER KITCHENMINIS BEDIENUNGSANLEITUNG OPERATING INSTRUCTIONS LONG SLOT TOASTER KITCHENMINIS 73312 Geislingen/Steige Germany 49 0 7331 256 256 contact wmf.com wmf.com CMMF 3200002113 Model **0414120011** CMMF 3200002234 Model 0414120071 , : - 125171, , , . 16, . 3 8 495 213-32-31 c...

lang:de score:12 filesize: 6.12 M page\_count: 45 document date: 2024-10-21



[\[pdf\]](#) User Manual Instructions

Download WMF KITCHENminis Long slot toaster Deep Black 04 1412 0071 IFU screen timestamp 20250325183540 dam groupeseb m 461d36f6204bcd1f original |||

LONG SLOT TOASTER KITCHENMINIS BEDIENUNGSANLEITUNG OPERATING INSTRUCTIONS LONG SLOT TOASTER KITCHENMINIS 73312 Geislingen/Steige Germany 49 0 7331 256 256 contact wmf.com wmf.com CMMF 3200002113 Model **0414120011** CMMF 3200002234 Model 0414120071 , : - 125171, , , . 16, . 3 8 495 213-32-31 c...

lang:de score:12 filesize: 6.13 M page\_count: 45 document date: 2024-10-21