

De'Longhi XL155.41

De'Longhi XL155.41 Bagless Electric Broom User Manual

[Overview](#)

[Safety](#)

[Contents](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

1. PRODUCT OVERVIEW

The De'Longhi XL155.41 Bagless Electric Broom is designed for efficient and convenient cleaning of various floor types. This appliance combines reliability with an elegant design, offering maximum practicality for daily cleaning tasks.

Key features include:

- **Parquet Care Brush:** Specifically designed for wood and hard floors, ensuring effective dust removal.
- **Electronic Power Regulation:** Offers 3 power levels and an adjustable brush for optimal suction on different surfaces.
- **HEPA Filter:** Captures 99.98% of dust particles, preventing re-emission for a thorough clean.
- **Easy Clean System:** Allows for quick and hygienic emptying of the 1-liter dust tank.
- **Electronic Safety System (EPS):** A flashing indicator signals a full dust tank or operational anomalies.
- **Ergonomic Handle:** Designed for comfortable use.
- **Cord Rewind:** Integrated system for convenient cable storage.



The De'Longhi XL155.41 electric broom stands upright in a contemporary living room, showcasing its sleek design and readiness for use.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the appliance outdoors or on wet surfaces.
- Always unplug the appliance from the power outlet before cleaning or performing maintenance.
- Do not allow children to operate the appliance. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible materials, hot ashes, or sharp objects.
- Do not use the appliance if the power cord or plug is damaged. Contact authorized service personnel for repair.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only manufacturer's recommended attachments.
- Do not immerse the appliance in water or any other liquid.

3. PACKAGE CONTENTS

Carefully unpack your De'Longhi XL155.41 electric broom and check that all items are present and in good condition. The package should contain:

- De'Longhi XL155.41 Electric Broom main unit
- Parquet Care Brush head
- HEPA Filter (pre-installed or separate)
- T-nozzle attachment
- Crevice tool

- Small brush tool
- User Manual



A front view of the De'Longhi XL155.41 electric broom, showing its main body and cleaning head.



A side view of the De'Longhi XL155.41 electric broom, highlighting its ergonomic handle and compact profile.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your electric broom before first use:

1. **Attach the Handle:** Insert the upper part of the handle into the main body of the electric broom until it clicks securely into place.
2. **Connect the Floor Nozzle:** Attach the Parquet Care brush head to the bottom of the main unit. Ensure it is firmly connected.
3. **Check Dust Tank and Filter:** Verify that the dust tank is correctly installed and the HEPA filter is in

place.

4. **Unwind Power Cord:** Unwind the power cord from the integrated cord rewind system to the desired length.

5. OPERATING INSTRUCTIONS

Operating your De'Longhi XL155.41 is straightforward:

1. **Power On/Off:** Plug the power cord into a suitable electrical outlet. Press the ON/OFF button located on the handle to start or stop the appliance.
2. **Adjust Power Level:** Use the electronic power regulation controls to select one of the 3 available power levels. Choose a lower setting for delicate surfaces or light dust, and a higher setting for stubborn dirt or carpets.
3. **Brush Adjustment:** The brush head can be adjusted to suit different floor types. Refer to the markings on the brush head for appropriate settings for hard floors or carpets.
4. **Cleaning:** Guide the electric broom across the surface to be cleaned. The ergonomic handle provides comfortable control.
5. **Using Attachments:** For specific cleaning tasks, detach the main brush head and attach the T-nozzle, crevice tool, or small brush tool as needed.
6. **Cord Rewind:** After use, press the cord rewind button or gently pull the cord to retract it into the appliance for tidy storage.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your electric broom.

6.1 Emptying the Dust Tank (Easy Clean System)

1. Ensure the appliance is unplugged from the power outlet.
2. Locate the dust tank release button and press it to detach the dust tank from the main unit.
3. Hold the dust tank over a waste bin. Open the bottom flap of the dust tank to empty its contents.
4. Close the flap securely and reattach the dust tank to the electric broom until it clicks into place.

6.2 Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly to maintain suction power and air quality.

1. Remove the dust tank as described above.
2. Carefully remove the HEPA filter from the dust tank.
3. Tap the filter gently over a waste bin to remove loose dust. For a more thorough clean, rinse the filter under cold running water.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it. Do not use heat to dry the filter.
5. Reinsert the dry filter into the dust tank and reattach the tank to the appliance.

6.3 Cleaning the Brush Head

Periodically check the brush head for tangled hair or debris.

- Unplug the appliance.
- Remove any hair, threads, or debris wrapped around the brush roller using scissors or a brush.
- Wipe the exterior of the brush head with a damp cloth.

7. TROUBLESHOOTING

If you encounter issues with your De'Longhi XL155.41, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on	No power supply Damaged power cord/plug	Check if the plug is securely inserted into the outlet. Check the circuit breaker. Contact customer support if cord/plug is damaged.
Reduced suction power	Dust tank full Filter clogged Hose/nozzle blocked	Empty the dust tank. Clean or replace the HEPA filter. Check for and remove any blockages in the hose or brush head.
Unusual noise during operation	Blockage in brush head or hose Motor issue	Check for and remove any foreign objects. If the noise persists, contact customer support.
EPS indicator flashing	Dust tank full Operational anomaly	Empty the dust tank. Check for blockages and ensure all parts are correctly assembled.

8. PRODUCT SPECIFICATIONS

- **Brand:** De'Longhi
- **Model:** XL155.41
- **Special Features:** Bagless, HEPA filter, Parquet brush, Easy Clean system, EPS electronic system
- **Filter Type:** HEPA Filter
- **Recommended Surfaces:** Hard floors, Parquet, Carpet
- **Power Source:** Corded Electric
- **Dust Tank Capacity:** 1 liter

9. WARRANTY AND SUPPORT

De'Longhi products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty in accordance with the laws of the country of purchase. For detailed warranty information, please refer to the warranty card included with your product or visit the official De'Longhi website.

For technical assistance, spare parts, or repair services, please contact De'Longhi customer support. Contact information can typically be found in the warranty documentation or on the official De'Longhi website.