

## Transformers E0767

# Transformers E0767 Shatter Energon Igniters Action Figure Instruction Manual

## 1. PRODUCT OVERVIEW

This manual provides instructions for the Transformers E0767 Shatter Energon Igniters Action Figure. This figure is designed to convert between robot and jet modes in 5 steps and features an Energon Igniter core for enhanced play.

- **Brand:** Transformers
- **Model Number:** E0767
- **Product Dimensions:** 2.38 x 7 x 6 inches
- **Item Weight:** 3.17 ounces
- **Recommended Age:** 5 years and up

The Shatter figure is part of the Transformers universe, allowing users to engage in imaginative play by transforming the character between its distinct modes.



Figure packaging displaying the Transformers Shatter character in both robot and jet forms.

## 2. SAFETY INFORMATION

Please read and understand all safety information before using this product.

- **Warning:** Small parts may be generated. This product is not suitable for children under 3 years due to potential choking hazards.
- Adult supervision is recommended during play, especially for younger children.
- Avoid forcing parts during transformation to prevent breakage.

## 3. TRANSFORMATION INSTRUCTIONS

The Transformers E0767 Shatter figure converts between robot mode and jet mode in 5 steps. Refer to the included visual instructions on the product packaging or the general transformation video for guidance.

### 3.1. Jet Mode to Robot Mode

To transform Shatter from jet mode to robot mode, carefully manipulate the figure's components. The transformation involves a sequence of folding and unfolding parts to reveal the robot form. Ensure each joint clicks into place securely.



The Shatter figure displayed in its sleek jet mode.





The Shatter figure in its robot mode, ready for action.

### 3.2. Robot Mode to Jet Mode

To convert Shatter back to jet mode, reverse the transformation steps. Fold the robot's limbs and body panels to form the jet's fuselage and wings. Pay attention to alignment to ensure a complete and secure transformation.

### 3.3. Energon Igniters Feature

The Energon Igniters feature allows for dynamic action. Locate the designated slot on the figure (typically on the back or top in vehicle mode) and insert the Energon Igniter core. Pressing down on the core activates a spinning action, simulating the power of Energon.



Activating the Energon Igniter by pressing down on the core in jet mode.





Removing the Energon Igniter core from the figure.

For a visual demonstration of the Energon Igniters feature and general transformations, please refer to the video below.

Your browser does not support the video tag.

Official demonstration video showcasing various Transformers figures, including transformations and the Energon Igniters feature. This video provides a general overview of the play pattern for the Energon Igniters line.

#### 4. OPERATING THE FIGURE

---

Once transformed into either robot or jet mode, the figure can be posed for display or used in imaginative play scenarios. The Energon Igniter core can be inserted and activated in vehicle mode to simulate power-up effects.

- Ensure all parts are securely connected after transformation to maintain stability during play.
- Avoid excessive force when posing joints to prevent damage.

#### 5. MAINTENANCE AND CARE

---

To ensure the longevity of your Transformers figure, follow these care guidelines:

- **Cleaning:** Wipe the figure with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the figure in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the figure with care, especially during transformations, to avoid stress on joints and small parts.

## 6. TROUBLESHOOTING

If you encounter any issues with your figure, consider the following:

- **Difficulty Transforming:** Ensure you are following the correct sequence of steps. Do not force parts; if a part is stuck, gently re-examine the transformation path.
- **Loose Joints:** Over time, joints may become slightly loose with repeated use. This is normal wear and tear for action figures.
- **Missing Parts:** Check the packaging thoroughly. If a part is genuinely missing upon purchase, contact the retailer or manufacturer.

## 7. SPECIFICATIONS

Feature	Detail
Product Dimensions	2.38 x 7 x 6 inches
Item Weight	3.17 ounces
ASIN	B075LNDNBH
Item Model Number	E0767
Manufacturer Recommended Age	5 years and up
Release Date	April 20, 2018
Manufacturer	Hasbro
Included Components	Action Figure (Shatter)

## 8. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For warranty details, product support, or to inquire about replacement parts, please contact Hasbro customer service directly or refer to their official website.

You can visit the official Transformers store for more information:

[Transformers Official Store](#)