



[Manuals.plus](#) /

› [Panasonic](#) /

› Panasonic ER-SB40-K Cordless Precision Power Beard Trimmer Instruction Manual

Panasonic ER-SB40-K

Panasonic ER-SB40-K Cordless Precision Power Beard Trimmer Instruction Manual

Model: ER-SB40-K

PRODUCT OVERVIEW

The Panasonic ER-SB40-K Beard Trimmer is designed for precise grooming of beards, mustaches, and hair. It features a high-performance linear motor, ultra-sharp blades, and multiple adjustable settings for a customized trimming experience. The device is washable for easy cleaning and supports both cordless and corded operation.

PREMIUM. POWERFUL. ADVANCED.



Japanese
Blade Technology



Ultra-Powerful
Linear Motor



Quick-Adjust
Trim Dial



Trim
Wet or Dry



Cordless
or Coded Operation



60 Min
Run Time

Image: Panasonic ER-SB40-K Beard Trimmer, showcasing its key features including Japanese blade technology, ultra-powerful linear motor, quick-adjust trim dial, wet/dry trimming, and 60-minute run time.

1. SETUP

1.1 Unboxing and Included Components

Before first use, ensure all components are present:

- Panasonic ER-SB40-K Beard Trimmer
- Comb Attachment
- Cleaning Brush
- Blade Oil
- AC Adapter/Charger

IN THE BOX



Image: Contents of the box, including the trimmer, comb attachment, blade oil, cleaning brush, AC adapter, and a travel pouch.

1.2 Charging the Trimmer

The trimmer operates on rechargeable battery power. For optimal performance, fully charge the device before its first use.

- Connect the AC adapter/charger to the trimmer's charging port.
- Plug the charger into a universal voltage (AC 100-240V) outlet.
- A full charge provides up to 60 minutes of cordless operation.

1.3 Attaching and Detaching the Comb Attachment

The comb attachment allows for various cutting lengths.

- To attach: Align the comb attachment with the trimmer head and gently push until it clicks into place.
- To detach: Press the release buttons on the sides of the comb attachment and pull it away from the trimmer head.



Image: Close-up of the Panasonic ER-SB40-K showing the snap-on comb attachment.

2. OPERATING INSTRUCTIONS

2.1 Adjusting Cutting Lengths

The quick-adjust trimmer dial offers 19 precision settings for lengths from 0.5mm to 10mm.

- Rotate the dial located on the front of the trimmer to select your desired cutting length.
- The comb attachment will move up or down to correspond with the selected length.



QUICK-ADJUST TRIM DIAL

With **19 length settings** (0.5mm - 10mm).

Image: A hand adjusting the quick-adjust trim dial on the trimmer, showing length settings from 0.5mm to 10mm.

2.2 Powering On/Off and Travel Lock

- To power on: Press the power button once.
- To power off: Press the power button once.
- To activate Travel Lock: Press and hold the power button for approximately 3 seconds until the lock icon illuminates. This prevents accidental activation during travel.
- To deactivate Travel Lock: Press and hold the power button for approximately 3 seconds until the lock icon turns off.

2.3 Trimming Techniques

For best results, ensure your beard is clean and dry before trimming. Use smooth, even strokes against the direction of hair growth.

- **Beard and Mustache:** Select your desired length. Hold the trimmer with the blades facing your beard and move it slowly against the direction of hair growth.
- **Detailing and Outlining:** Remove the comb attachment for precise shaping and outlining around the edges of your beard, mustache, or sideburns.

ULTRA-POWERFUL LINEAR MOTOR

The linear motor maintains consistent cutting power for **smoother cutting performance**.



Image: A man using the Panasonic ER-SB40-K to trim his beard, illustrating the trimmer's powerful motor for smooth cutting.

Video: Official tutorial demonstrating the features and usage of the Panasonic ER-SB40-K Beard Trimmer, including length adjustment and trimming techniques.

3. MAINTENANCE

3.1 Cleaning the Trimmer

The Panasonic ER-SB40-K is 100% washable for easy cleaning.

- After each use, remove the comb attachment.
- Rinse the trimmer head and blades thoroughly under warm running water to remove hair clippings.
- Use the provided cleaning brush to dislodge any stubborn hairs.
- Allow the trimmer to air dry completely before storing.



Image: The Panasonic ER-SB40-K being held under running water, demonstrating its washable feature.

3.2 Blade Oiling

To maintain blade sharpness and longevity, apply blade oil regularly.

- Apply a few drops of the provided blade oil to the blades before and after each use.
- Turn the trimmer on for a few seconds to distribute the oil evenly.

3.3 Blade Replacement

For optimal performance, replace the blade when it becomes dull. Replacement blades can be purchased separately from authorized Panasonic retailers.

4. TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the travel lock is deactivated. Check if the battery is charged; connect to the AC adapter if needed.
- **Poor trimming performance:** Clean the blades and comb attachment thoroughly. Apply blade oil. Ensure the blades are not dull and replace if necessary.
- **Battery indicator:** The LED display shows the battery level (High, Mid, Low). Recharge the trimmer when the indicator shows 'Low' or blinks.

5. SPECIFICATIONS

Feature	Detail
Model Number	ER-SB40-K
Brand	Panasonic
Motor Performance	9,800 cuts per minute linear motor
Blade Material	Stainless Steel (hypoallergenic wide tip blades)
Cutting Length Settings	19 (0.5mm - 10mm)
Power Source	Cordless/Corded Electric
Cordless Operation Time	Up to 60 minutes
Washable	Yes (100% washable)
Dimensions	1.78 x 1.89 x 7.05 inches
Weight	2.88 ounces

Included Components	AC Adapter/Charger, Beard Trimmer, Blade Oil, Cleaning Brush, Comb Attachment
---------------------	-------------------------------------------------------------------------------

6. WARRANTY & SUPPORT

6.1 Manufacturer Warranty

This Panasonic ER-SB40-K Beard Trimmer comes with a 2-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.

6.2 Customer Support

For further assistance, product inquiries, or warranty service, please contact Panasonic customer support. Refer to the contact information provided in the product packaging or on the official Panasonic website.