

[Manuals.plus](#) /

› [Tommy Hilfiger](#) /

› Tommy Hilfiger Men's Quartz Multifunction Watch (Model 1791421) Instruction Manual

Tommy Hilfiger 1791421

Tommy Hilfiger Men's Quartz Multifunction Watch

MODEL: 1791421

Introduction

This instruction manual provides essential information for the proper use, setup, and maintenance of your Tommy Hilfiger Men's Quartz Multifunction Watch, Model 1791421. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

Product Overview

The Tommy Hilfiger Model 1791421 is a sophisticated men's quartz multifunction watch featuring a striking blue dial and a durable blue stainless steel mesh bracelet. It is designed for everyday wear with practical functions and a classic aesthetic.



Front view of the Tommy Hilfiger Men's Quartz Multifunction Watch, Model 1791421, showcasing its blue dial, three sub-dials, and blue stainless steel mesh bracelet.

- **Movement:** Quartz multifunction with three sub-dials.
- **Case Diameter:** 44 mm.

- **Case Thickness:** 10.5 mm.
- **Dial:** Blue with applied hour markers and the Tommy Hilfiger flag logo.
- **Bracelet:** Blue ion-plated stainless steel mesh with an adjustable clasp.
- **Water Resistance:** 5 ATM (50 meters), suitable for showering and swimming, but not for diving.
- **Special Features:** 24-hour display, day of the week indicator, and date indicator.

Setup

1. Setting the Time

1. Pull the crown out to the second position (farthest out).
2. Rotate the crown to move the hour and minute hands until the correct time is displayed. Ensure the 24-hour sub-dial aligns correctly for AM/PM.
3. Push the crown back into the normal operating position.

2. Setting the Date and Day

1. Pull the crown out to the first position (halfway out).
2. Rotate the crown in one direction to adjust the date sub-dial.
3. Rotate the crown in the opposite direction to adjust the day of the week sub-dial.
4. Once the correct date and day are set, push the crown back into the normal operating position.



Side view of the watch, illustrating the position of the crown for time and date adjustments.

3. Adjusting the Mesh Bracelet

The mesh bracelet features an adjustable clasp for a comfortable fit. To adjust:

1. Locate the small lever or tab on the clasp.
2. Using a small, flat tool (like a screwdriver or spring bar tool), gently lift the lever to unlock the clasp mechanism.
3. Slide the clasp along the mesh band to the desired position.
4. Press the lever back down firmly to lock the clasp in place. Ensure it is securely fastened before wearing.



Back view of the watch, showing the adjustable clasp mechanism on the mesh bracelet.

Operating

Your Tommy Hilfiger watch is designed for reliable timekeeping. Once set, the quartz movement ensures accurate time. The multifunction sub-dials provide additional utility for tracking the date, day of the week, and a 24-hour display.

Water Resistance Guidelines (5 ATM / 50 Meters)

- Suitable for everyday use, including showering and swimming in shallow water.
- **Not suitable for:** Diving, snorkeling, or high-impact water sports.
- Avoid operating the crown or pushers while the watch is wet or submerged to prevent water intrusion.
- After exposure to saltwater, rinse the watch with fresh water and dry thoroughly.

Maintenance

Cleaning

- Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dirt and perspiration.
- For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish.

Battery Replacement

- The watch is powered by a lithium metal battery.
- When the watch stops or the hands move erratically, the battery may need replacement.
- Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

- When not in use, store your watch in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep the watch away from strong magnetic fields, which can affect the accuracy of quartz movements.

Troubleshooting

Problem	Possible Cause	Solution
Watch not running	Depleted battery	Replace battery (professional service recommended).
Incorrect time/date	Time/date not set correctly or crown is not fully pushed in.	Refer to 'Setting the Time' and 'Setting the Date and Day' sections. Ensure crown is fully pushed in.
Water inside watch	Crown/pushers operated underwater or seal compromised.	Immediately take the watch to a professional watch repair service. Do not attempt to dry it yourself.

Specifications

Model Number	1791421
Movement Type	Quartz Multifunction
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	44 mm
Case Thickness	11 mm
Band Material	Stainless Steel Mesh
Band Width	21 mm
Dial Window Material	Mineral
Water Resistance Depth	50 Meters (5 ATM)
Power Source	Battery Powered (1 Lithium metal included)
Weight	104 Grams
Country of Origin	China
UPC	885997235617

Warranty and Support

Your Tommy Hilfiger watch, Model 1791421, is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear. For warranty claims, service, or technical support, please refer to the warranty card included with your watch or contact Tommy Hilfiger customer service through their official website. Please retain your proof of purchase for warranty validation.