

Panasonic ER-GB42-K

Panasonic ER-GB42-K Cordless Beard Trimmer Instruction Manual

Model: ER-GB42-K

1. IMPORTANT SAFETY INFORMATION

To reduce the risk of burns, fire, electric shock, or injury to persons, please observe the following:

- Close supervision is required when this appliance is used by, on, or near children or individuals with reduced physical, sensory, or mental capabilities.
- Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer.

2. PRODUCT OVERVIEW

The Panasonic ER-GB42-K is a cordless beard trimmer designed for precise grooming. It features a precision dial with 19 adjustable length settings, ultra-sharp 45-degree blades, and a washable wet/dry design for convenient use.



Image 2.1: Panasonic ER-GB42-K Cordless Beard Trimmer. This image displays the main unit of the trimmer, highlighting its sleek black design and the integrated precision dial.

Key Features:

- **Precision Dial:** Offers 19 adjustable length settings for customized trimming.
- **Cordless Operation:** Provides flexibility for use at home or while traveling.
- **Wet/Dry Design:** Allows for convenient trimming in or out of the shower.
- **Unique Trimming Attachment:** Designed to lift and cut flattened hairs effectively.
- **Ultra-Sharp Blades:** Features 45-degree stainless steel blades for quick and smooth trimming.



QUICK-ADJUST DIAL

19 settings for precise trimming lengths



CORDLESS OPERATION

Trim comfortably, at home or on the go



WET DRY WATERPROOF DESIGN

Convenient trimming in or out of the shower



UNIQUE TRIMMING ATTACHMENT

Neatly lifts and cuts flat laying whiskers



ULTRA-SHARP BLADES

45° stainless steel blades for quick, smooth trimming



Image 2.2: Key Features of Panasonic ER-GB42-K Trimmer. This graphic illustrates the main features including the quick-adjust dial, cordless operation, wet dry waterproof design, unique trimming attachment, and ultra-sharp blades.

3. SETUP AND CHARGING

Before initial use, ensure the trimmer is fully charged.

1. **Charge the Trimmer:** Connect the provided AC wall adaptor to a power outlet and place the trimmer onto the charging stand. The charging indicator light will illuminate.
2. A full charge provides approximately 50 minutes of cordless operation.
3. The charging adaptor is designed to plug directly into a wall outlet, with the trimmer sitting vertically above it. Ensure adequate space around the outlet for proper charging.



Image 3.1: Panasonic ER-GB42-K Trimmer in Charging Stand. The trimmer is shown securely placed in its charging stand, which plugs directly into a wall socket, indicating the charging process.

4. OPERATING INSTRUCTIONS

Follow these steps for effective trimming:

1. **Adjust Length Settings:** Rotate the precision dial on the handle to select your desired trimming length. The trimmer offers 19 settings for precise control.
2. **Prepare for Trimming:** For optimal results, use the snap-on comb attachment to lift any flattened hairs before trimming.
3. **Wet or Dry Use:** The trimmer is 100% washable and can be used for both wet and dry trimming. You may use it with shaving foam or gel for a comfortable wet shave, or dry for quick touch-ups.
4. **Trimming Technique:** Hold the trimmer against the direction of hair growth, moving it slowly and steadily for an even cut.



QUICK ADJUST DIAL
19 settings for precise trimming lengths

Image 4.1: Precision Dial Adjustment. A close-up view of the trimmer's precision dial, showing the length settings in millimeters and an arrow indicating how to adjust it.



WET DRY WATERPROOF DESIGN

Convenient trimming in or out of the shower

Image 4.2: Wet Trimming with Panasonic ER-GB42-K. A user is shown using the trimmer with shaving foam, demonstrating its wet/dry capability for comfortable grooming.



Image 4.3: Panasonic ER-GB42-K Trimmer in Use. A collage showing different angles of the trimmer being used for beard and mustache grooming, highlighting its ergonomic design and ease of handling.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your trimmer.

1. **Rinse Blades:** After each use, rinse the blades under running water to remove hair clippings and debris. The trimmer's washable design allows for easy cleaning.
2. **Lubricate Blades:** Periodically apply a small amount of lubricating oil (if provided or recommended by Panasonic) to the blades to maintain smooth operation.
3. **Blade Replacement:** For peak performance, replace the blades approximately every three years or when they become dull. The recommended replacement blade is Panasonic WER9606P.



Image 5.1: Cleaning Trimmer Blades. The image shows the trimmer head being rinsed under running water, demonstrating its waterproof feature for easy cleaning.

6. TROUBLESHOOTING

If you encounter issues with your Panasonic ER-GB42-K trimmer, consider the following:

- **Trimmer Not Turning On:** Ensure the trimmer is fully charged. If the issue persists, check the charging adaptor and power outlet.
- **Poor Trimming Performance:** Clean the blades thoroughly. If blades are dull, consider replacing them with the Panasonic WER9606P replacement blade.
- **Charging Issues:** Verify that the charging stand is correctly plugged into a functional wall outlet and that the trimmer is properly seated in the stand.

For further assistance, please contact Panasonic customer support.

7. SPECIFICATIONS

Brand	Panasonic
-------	-----------

Model Number	ER-GB42-K
Product Dimensions	1.85 x 6.97 x 1.65 inches
Item Weight	0.33 Pounds (5.28 ounces)
Color	Black
Power Source	Adaptor, Battery Powered
Recommended Uses	Beard, Mustache
UPC	885170313811
GTIN	885170313811

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Panasonic website. For customer support, product registration, or to purchase replacement parts like the WER9606P blade, please visit the [Panasonic Store](#) or contact their authorized service centers.