

CELLO Quick Pop 300

CELLO Quick Pop 300 2-Slice Automatic Pop-up Toaster User Manual

Model: Quick Pop 300

Brand: CELLO

1. INTRODUCTION

Thank you for choosing the CELLO Quick Pop 300 2-Slice Automatic Pop-up Toaster. This appliance is designed for efficient and convenient toasting of bread slices. Featuring 7 browning levels, a cool-touch body, and a removable crumb tray, it ensures a safe and enjoyable user experience. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. IMPORTANT SAFEGUARDS

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the

like, when in operation.

- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your CELLO Quick Pop 300 Toaster:



Figure 3.1: Main components of the CELLO Quick Pop 300 Toaster.

Aluminium-plated Upper Cover: Provides durability and a sleek finish.

Stainless Steel Bread Guide: Ensures bread slices are centered for even toasting.

Carriage Handle: Used to lower and raise bread into the toasting slots.

Crumb Tray: Removable tray located at the bottom for easy cleaning of crumbs.

"Cancel" & Red Light Indicator: Button to stop the toasting cycle and indicator light for operation.

7 Colour Brown Control: Dial to select desired browning level from 1 (lightest) to 7 (darkest).

Non-Slip Feet: Provides stability and prevents the toaster from sliding on surfaces.

Cord Storage: Integrated area at the base for neat storage of the power cord.



Crumb Tray



"Cancel" & light indicator
7 colour brown control



Aluminium-plated
upper Cover



Carriage handle



Cord Storage



Non-Slip Feet

Figure 3.2: Detailed views of key features including the crumb tray, browning control, upper cover, carriage handle, cord storage, and non-slip feet.



700W

2
Slice

1Yr
Warranty

Figure 3.3: The CELLO Quick Pop 300 Toaster, a 700W appliance with a 2-slice capacity, backed by a 1-year warranty.

4. SETUP

1. **Unpack the Toaster:** Carefully remove the toaster and all packaging materials from the box. Retain the user manual and warranty card.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure there is adequate ventilation around the appliance.
3. **Initial Use:** Before first use, operate the toaster without bread for a few minutes on the highest browning setting (7) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

Your browser does not support the video tag.

Video 4.1: Unboxing and initial setup of the CELLO Quick Pop 300 Toaster, demonstrating how to remove it from packaging and prepare for use. This video is provided by the seller.

5. OPERATION

- 1. Insert Bread:** Place up to two slices of bread into the toasting slots. The stainless steel bread guide will automatically center the bread.
- 2. Select Browning Level:** Turn the **7 Colour Brown Control** dial to your desired browning setting. Level 1 is for light toast, and Level 7 is for dark toast.
- 3. Start Toasting:** Press down the **Carriage Handle** until it locks into place. The red light indicator will illuminate, signifying that the toasting cycle has begun.
- 4. Automatic Pop-up:** Once the selected browning level is achieved, the toast will automatically pop up, and the red light indicator will turn off.
- 5. Cancel Function:** To stop the toasting cycle at any time, press the "**Cancel**" button. The carriage handle will immediately pop up, and the red light will turn off.

Your browser does not support the video tag.

Video 5.1: A brief overview of the CELLO Quick Pop 300 Toaster's features, including the carriage handle, browning control, and crumb tray. This video is provided by the seller.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

- 1. Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
- 2. Empty Crumb Tray:** Pull out the **Removable Bread Crumbs Tray** located at the bottom of the toaster. Dispose of the crumbs. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
- 3. Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface.
- 4. Interior Cleaning:** Do not insert any objects into the toasting slots to clean them. If food gets stuck, unplug the toaster and carefully remove it once the appliance has cooled.
- 5. Cord Storage:** Utilize the integrated cord storage facility at the base of the toaster to keep the power cord neatly wrapped when not in use.

7. TROUBLESHOOTING

If you encounter any issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; carriage handle not fully depressed.	Ensure the toaster is securely plugged into a working outlet. Press the carriage handle down until it locks.
Bread is not toasting or toasts unevenly.	Browning control set too low; bread slices too thick or thin; first use residue.	Adjust the browning control to a higher setting. Ensure bread fits properly in slots. Perform initial burn-off cycle if new.
Smoke or burning smell.	Crumbs in the toaster; food stuck in slots; initial use residue.	Unplug and let cool. Empty and clean the crumb tray. Carefully remove any stuck food. Ensure proper ventilation during initial use.
Carriage handle does not stay down.	Toaster not plugged in or no power; browning cycle not initiated.	Ensure the toaster is plugged in and the power outlet is active. The handle will only lock down when power is supplied and the toasting cycle can begin.

8. SPECIFICATIONS

- **Brand:** CELLO
- **Model:** Quick Pop 300
- **Colour:** Red
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Product Dimensions:** 6.1D x 11.8W x 7.5H Centimeters
- **Wattage:** 700 Watts
- **Number of Slices:** 2
- **Browning Settings:** 7 levels
- **Voltage:** 240 Volts
- **Item Weight:** 810 Grams
- **Special Features:** Anti-Slip Base, Automatic Shut-Off, Cancel Function, Cool Touch Exterior, Removable Crumb Tray
- **Country of Origin:** India



Figure 8.1: Dimensions of the CELLO Quick Pop 300 Toaster.

9. WARRANTY AND SUPPORT

The CELLO Quick Pop 300 Toaster comes with a **1-year warranty** from the date of purchase. Please refer to the included warranty card for detailed terms and conditions.

For prompt after-sales service or any inquiries, please contact CELLO customer care:

All India Customer Care No: 7400001799

Email: customercare@cellokitchenette.com



The graphic features a grey background with a large gear icon. In the top left, there is a circular icon with crossed wrench and screwdriver, followed by the text '270+ Service Centers'. In the top right, the 'cello' logo is displayed in white on a red square. In the center, there is a black silhouette of a person wearing a headset. Below this, the word 'APPLIANCES' is written in large, bold, black capital letters. Underneath, the text 'For prompt after sales service, contact us at..' is shown. A prominent red horizontal band contains the text 'All India customer care no: 7400001799' in white. At the bottom, the email address 'Email: customercare@cellokitchenette.com' is displayed in black.

Figure 9.1: CELLO Customer Care details for support and service.

