

[Manuals.plus](#) /

› [Lenoxx](#) /

› Lenoxx Boombox BD 129 CD/MP3/USB/AUX System Instruction Manual

Lenoxx BD129

Lenoxx Boombox BD 129

CD/MP3/USB/AUX SYSTEM INSTRUCTION MANUAL

1. Product Overview

The Lenoxx Boombox BD 129 is a versatile and portable audio system designed for various playback options, including CD, MP3, USB, AUX, and FM radio. Its compact design and integrated handle make it suitable for use in different environments.



Figure 1: Front view of the Lenoxx Boombox BD 129, showing the CD compartment, dual speakers with red accents, digital display, and control buttons for playback, volume, and mode selection. Input ports for AUX, USB, and headphones are visible below the display.

2. Setup

1. **Power Connection:** Connect the power cord to the AC inlet on the back of the unit and then to a standard electrical outlet. The unit is bivolt, supporting various voltage inputs automatically.
2. **Placement:** Place the boombox on a stable, flat surface. Ensure adequate ventilation around the unit.
3. **Antenna (FM Radio):** For optimal FM radio reception, extend the telescopic antenna located on the back of the unit. Adjust its position for the best signal.

3. Operating Instructions

3.1 General Controls

- **Power Button ():** Press to turn the unit ON or OFF.
- **Volume Buttons (V-, V+):** Press V- to decrease volume, V+ to increase volume.
- **EQ/MODE Button:** Press to cycle through different playback modes (CD, USB, AUX, FM Radio).
- **Repeat/Stop Button:** Controls repeat functions during playback and stops current playback.
- **Skip/Search Buttons (,):** Press to skip tracks. Hold to fast forward or rewind within a track.
- **Play/Pause Button ():** Starts or pauses playback.
- **P+/SCAN Button:** Used for scanning and storing radio stations in FM mode.

3.2 CD/MP3 CD Playback

1. Open the CD compartment cover.
2. Place a CD or MP3 CD with the label side facing up.
3. Close the CD compartment cover securely.
4. Press the **EQ/MODE** button until 'CD' appears on the display.
5. Press the **Play/Pause** button () to begin playback.
6. Use the **Skip/Search** buttons (,) to navigate tracks.
7. Press the **Repeat/Stop** button to stop playback or activate repeat functions (e.g., repeat one track, repeat all tracks).

3.3 USB Playback

1. Insert a USB flash drive into the **USB** port.
2. Press the **EQ/MODE** button until 'USB' appears on the display.
3. The unit will automatically scan and begin playing MP3 files from the USB drive.
4. Use the **Skip/Search** buttons (,) to navigate tracks.
5. Press the **Repeat/Stop** button to stop playback or activate repeat functions.

3.4 FM Radio Operation

1. Extend the telescopic antenna for better reception.
2. Press the **EQ/MODE** button until 'FM' appears on the display.
3. Press the **P+/SCAN** button to automatically scan and store available FM radio stations.
4. Use the **Skip/Search** buttons (,) to tune to the next or previous stored station.

3.5 AUX Input

1. Connect an external audio device (e.g., smartphone, MP3 player) to the **AUX IN** port using a 3.5mm audio cable (not included).
2. Press the **EQ/MODE** button until 'AUX' appears on the display.
3. Control playback directly from your connected external device. The boombox will act as a speaker.

3.6 Headphone Usage

To listen privately, connect headphones to the **PHONES** jack. The main speakers will be muted automatically.

4. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store them in their cases when not in use.
- **Storage:** If storing the unit for an extended period, disconnect it from the power outlet and store it in a cool, dry place.

5. Troubleshooting

- **No Power:**

- Ensure the power cord is securely connected to both the unit and the electrical outlet.
- Verify the power outlet is functional.

- **No Sound:**

- Increase the volume using the V+ button.
- If headphones are connected, disconnect them.
- For AUX input, ensure the volume on the external device is also turned up.

- **CD Not Playing:**

- Ensure the CD is clean and free of scratches.
- Verify the CD is inserted correctly with the label side up.
- Ensure the unit is in 'CD' mode.

- **USB Not Recognized:**

- Ensure the USB drive is properly inserted.
- Verify the unit is in 'USB' mode.
- Check if the USB drive contains compatible MP3 files.

- **Poor FM Radio Reception:**

- Fully extend and adjust the telescopic antenna.
- Relocate the unit to a different position to improve signal.

6. Specifications

Brand	Lenoxx
Model	BD129
Power Input	Bivolt (AC)
Supported Media	CD, MP3 (via CD or USB)
Radio Bands	FM
Connectivity	USB, AUX Input
Hardware Interface	USB
Special Features	Lightweight, Digital Display, Repeat Function
Dimensions (L x W x H)	28 cm x 14.3 cm x 12.5 cm (approx.)
Weight	1.17 kg (approx.)

7. Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Lenoxx customer service directly. Keep your proof of purchase for any warranty

claims.