

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Air Wick](#) /

> [Air Wick Automatic Spray Starter Kit \(Gadget + 2 Refills\), Summer Delights Instruction Manual](#)

### Air Wick 8541813305

## Air Wick Automatic Spray Starter Kit (Gadget + 2 Refills), Summer Delights Instruction Manual

### PRODUCT OVERVIEW

---

The Air Wick Automatic Air Freshener spray fills your home with continuous, fresh fragrance. This version features 24/7 OdorProtect technology, designed to combat odors around the clock. Each refill provides continuous fragrance for up to 70 days when set to the low (40 minutes) setting. The device can be set to spray at intervals of 9, 18, or 40 minutes to achieve your desired fragrance level. It is suitable for use in various rooms including living rooms, bathrooms, hallways, kitchens, dens, and offices.



Image: Air Wick Automatic Spray Starter Kit, Summer Delights.

- **Fragrance:** Experience the delightful scent of Summer Delights, a blend of fresh white florals, sweet melon, and subtle vanilla.
- **OdorProtect Technology:** Equipped with 24/7 OdorProtect technology to continuously fight odors.
- **Long-lasting Refills:** Each refill provides up to 70 days of continuous fragrance on the low setting. A red flashing light indicates when a refill needs replacement.
- **Adjustable Spray Settings:** Customize fragrance intensity with spray intervals of 9, 18, or 40 minutes.
- **Versatile Use:** Ideal for freshening any room in your home or office.

## SETUP INSTRUCTIONS

Follow these steps to set up your Air Wick Automatic Spray device:

1. **Open the Device:** Twist the top section of the device counter-clockwise and pull upwards to open it.
2. **Insert Refill:** Insert the Air Wick Automatic Spray refill can into the bottom section of the device, ensuring the nozzle faces outwards through the opening.
3. **Insert Battery:** Open the battery compartment (usually located at the bottom or back) and insert one AA battery, ensuring correct polarity (+/-).

4. **Close the Device:** Align the top section with the bottom section, ensuring the refill nozzle is correctly positioned. Push down and twist clockwise until it clicks securely into place.




*Image: Visual guide for setting up the Air Wick Automatic Spray, illustrating the steps to open, insert refill, and close the device.*

## OPERATING YOUR AUTOMATIC SPRAY

---

The Air Wick Automatic Spray offers adjustable fragrance control:

- **Adjust Settings:** Locate the switch inside the device (often near the battery compartment).
- **Low Setting:** For a subtle fragrance, select the 'Low' setting, which sprays every 40 minutes.
- **Medium Setting:** For a balanced fragrance, select the 'Medium' setting, which sprays every 18 minutes.
- **High Setting:** For a more noticeable fragrance, select the 'High' setting, which sprays every 9 minutes.

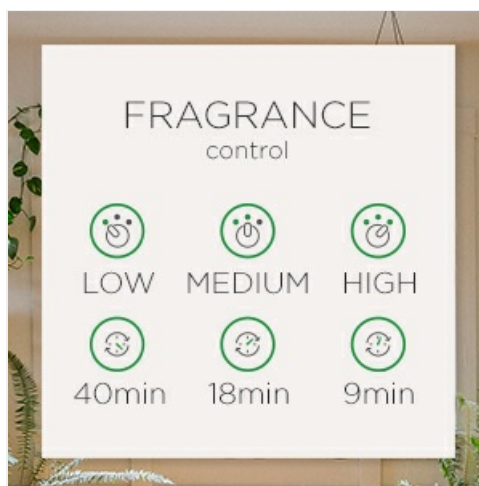

*Image: Illustration of the fragrance control settings (Low, Medium, High) and their corresponding spray intervals (40 min, 18 min, 9 min).*

## MAINTENANCE AND REFILL

---

To ensure continuous freshness, replace the refill and battery as needed:

- **Refill Replacement:** When the refill is empty, the device will indicate this with a red flashing light. Open the device as described in the Setup section, remove the empty can, and insert a new Air Wick

Automatic Spray refill.

- **Battery Replacement:** The device uses one AA battery. Replace the battery when the device stops spraying or the motor sounds weak. Ensure correct polarity when inserting the new battery.

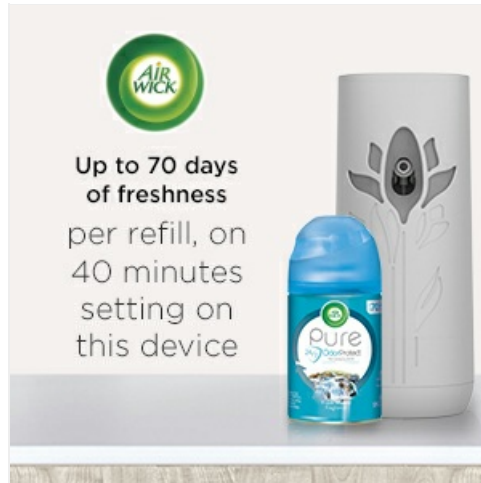


Image: The Air Wick Automatic Spray device with a refill, highlighting its long-lasting fragrance capability.

## TROUBLESHOOTING COMMON ISSUES

---

If your Air Wick Automatic Spray is not functioning as expected, consider the following:

- **Device Not Spraying:**
  - Ensure the battery is correctly inserted with the proper polarity and has sufficient charge.
  - Verify that the refill can is fully inserted and the device is securely closed. The spray nozzle should align with the internal mechanism.
  - Check the spray interval setting; if set to a longer interval (e.g., 40 minutes), it may take some time for the first spray.
- **Loud Noise During Spray:** The device's internal mechanism may produce a noticeable sound when spraying. This is generally normal operation.
- **Leakage:** Ensure the refill can is properly seated and the device is closed tightly to prevent any leakage.

## PRODUCT SPECIFICATIONS

---

Feature	Detail
Product Dimensions	3.19 x 8.44 x 7.75 inches
Item Model Number	8541813305
Manufacturer	Air Wick
Scent	Summer Delights
Item Form	Oil, Spray
Power Source	Battery (1 AA)
Scent Duration	Up to 70 Days (on low setting)

Recommended Uses	Home and Office Odor Neutralization and Fragrance
Container Type	Can
Color	White

## SAFETY INFORMATION

---

Please read and follow all safety instructions before use:

- **Eye Irritant:** Avoid contact with eyes. In case of contact, rinse immediately with plenty of water.
- **Contents Under Pressure:** Do not puncture or incinerate container. Do not expose to heat or store at temperatures above 120°F (49°C).
- **Keep Out of Reach:** Keep out of reach of children and pets. Place the device above eye level and away from direct spray onto surfaces.
- **Ventilation:** Use in well-ventilated areas.
- **Flammable:** Do not spray near open flames or any incandescent material.

## WARRANTY AND SUPPORT

---

Specific warranty details for the Air Wick Automatic Spray Starter Kit are not provided in the product information. For warranty claims, product support, or further assistance, please contact Air Wick customer service directly. Refer to the product packaging for contact information or visit the official Air Wick website.