

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Westinghouse](#) /

› [Westinghouse 6334900 Mulberry Outdoor Wall Fixture User Manual](#)

Westinghouse 6334900

Westinghouse 6334900 Mulberry Two-Light Outdoor Wall Fixture

Model: 6334900

INTRODUCTION

Thank you for choosing the Westinghouse 6334900 Mulberry Two-Light Outdoor Wall Fixture. This manual provides essential information for the safe and proper installation, operation, and maintenance of your new outdoor lighting fixture. Please read all instructions carefully before beginning installation and retain this manual for future reference.

SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the circuit breaker or fuse box before installation or servicing. Improper wiring can result in electric shock or fire.

- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Do not connect this fixture to an ungrounded electrical system.
- Ensure all connections are secure and properly insulated.
- Do not exceed the maximum wattage specified for the light bulbs.
- Handle glass components with care to prevent breakage.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Outdoor Wall Fixture Body
- Clear Seeded Glass Panels
- Mounting Hardware (crossbar, mounting screws, wire nuts)
- Installation Instructions



Image: The Westinghouse 6334900 Mulberry Two-Light Outdoor Wall Fixture, featuring a matte black finish with washed copper accents and clear seeded glass.

SETUP AND INSTALLATION

This fixture is designed for outdoor wall mounting. Professional installation is recommended.

- 1. Turn Off Power:** Before starting, ensure the power to the electrical box is turned off at the circuit breaker or fuse box.
- 2. Prepare Mounting Surface:** Ensure the mounting surface is clean, dry, and structurally sound.
- 3. Attach Mounting Bracket:** Secure the mounting crossbar to the electrical junction box using the provided screws. Ensure the crossbar is level.
- 4. Make Electrical Connections:**
 - Connect the bare copper ground wire from the fixture to the ground wire from the electrical box (usually bare copper or green) using a wire nut.
 - Connect the white wire from the fixture to the white (neutral) wire from the electrical box using a wire nut.
 - Connect the black wire from the fixture to the black (hot) wire from the electrical box using a wire nut.

- Carefully tuck all wires into the electrical box.
5. **Secure Fixture:** Align the fixture's backplate with the mounting screws on the crossbar. Secure the fixture to the crossbar using the decorative nuts or screws provided.
6. **Install Glass and Bulbs:**
- Carefully insert the clear seeded glass panels into the fixture body as per the design.
 - Install two candelabra-base light bulbs (not included) into the sockets. Do not exceed 40 watts per bulb.
7. **Restore Power:** Once installation is complete, restore power at the circuit breaker.

OPERATING INSTRUCTIONS

The Westinghouse 6334900 Outdoor Wall Fixture operates via a standard wall switch connected to its electrical circuit. Simply toggle the wall switch to turn the light fixture on or off.

Bulb Replacement: To replace bulbs, ensure power is disconnected at the circuit breaker. Allow bulbs to cool completely before touching. Unscrew old bulbs and screw in new candelabra-base bulbs, ensuring they do not exceed 40 watts each.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your fixture.

- **Cleaning:** Disconnect power before cleaning. To clean the fixture, wipe it with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or glass.
- **Inspection:** Periodically inspect the fixture for any signs of damage, loose wiring, or corrosion. Address any issues promptly to ensure safe operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power to fixture; Loose wiring; Faulty bulb; Faulty switch	Check circuit breaker/fuse; Ensure all wire connections are secure; Replace bulb; Test/replace switch
Light flickers	Loose bulb; Loose wiring; Incorrect bulb type/wattage	Tighten bulb; Check wire connections; Ensure correct bulb type and wattage are used

If you experience issues not listed here or if troubleshooting steps do not resolve the problem, consult a qualified electrician.

SPECIFICATIONS

- **Model:** 6334900
- **Brand:** Westinghouse
- **Dimensions (H x W x D):** 14-5/16 inches x 7-1/16 inches x 6 inches (extends from wall)
- **Back Plate Dimensions (H x W):** 8-1/4 inches x 7 inches
- **Weight:** Approximately 5.51 pounds
- **Material:** Cast Aluminum, Glass

- **Finish:** Matte Black with Washed Copper Accents
- **Glass Type:** Clear Seeded Glass
- **Light Source:** 2 x Candelabra-base bulbs (not included)
- **Max Wattage:** 40 watts per bulb
- **Voltage:** 120 Volts
- **Indoor/Outdoor Usage:** Outdoor
- **Certifications:** ETL/CETL listed for safety

WARRANTY INFORMATION

This Westinghouse outdoor wall fixture is backed by a **five-year limited warranty** against defects in materials and workmanship. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the official Westinghouse website or contact customer support.

SUPPORT

For technical assistance, replacement parts, or further information, please contact Westinghouse customer support. It is recommended to have your model number (6334900) available when contacting support.

If you are unsure about any part of the installation process, it is always best to consult a qualified, licensed electrician.