

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price SpaceSaver Baby to Toddler High Chair and Booster Seat Instruction Manual

Fisher-Price FLG95

Fisher-Price SpaceSaver Baby to Toddler High Chair and Booster Seat Instruction Manual

Model: FLG95

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Fisher-Price SpaceSaver High Chair. This product is designed to adapt from an infant high chair to a toddler booster seat, offering a compact and versatile feeding solution. Please read all instructions carefully before use and retain this manual for future reference.



Image: The Fisher-Price SpaceSaver High Chair in its complete high chair configuration, featuring a vibrant geometric pattern on the seat pad and a removable white feeding tray.

SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always secure your child in the restraint system.
- Always use the chair straps to secure the high chair to an adult chair.
- Never leave child unattended.
- Do not use this product in motor vehicles.
- Use the upright position only with a child who has enough upper body control to sit up unassisted.
- Maximum weight recommendation: 40 pounds (18 kg).

COMPONENTS

Before assembly, ensure all parts are present. Refer to the diagram below for identification.



Image: All primary components of the high chair laid out, showing the main seat, the base, the large feeding tray, and the smaller removable tray insert.

- Main Seat Unit
- Base
- Removable Tray
- Tray Insert
- Seat Pad (with 5-point harness)
- Chair Straps (for securing to adult chair)

SETUP AND INSTALLATION

1. Assembling the High Chair

1. **Attach Seat to Base:** Align the main seat unit with the base. Press firmly until it clicks into place, ensuring a secure connection.
2. **Install Seat Pad:** Place the seat pad onto the main seat unit. Thread the harness straps through the designated slots in the seat pad.
3. **Attach Tray:** Slide the removable tray onto the front of the seat unit until it locks securely. The tray can be adjusted to different positions.

2. Securing to an Adult Chair

The SpaceSaver High Chair is designed to be securely attached to most standard adult dining chairs.

1. Place the assembled high chair on the seat of a sturdy adult dining chair.
2. Locate the two chair straps on the high chair base.
3. Wrap the lower strap around the back of the adult chair and secure the buckle. Pull the strap tight to eliminate slack.
4. Wrap the upper strap around the backrest of the adult chair and secure the buckle. Pull the strap tight.
5. Verify that the high chair is firmly attached and does not wobble or slide on the adult chair.





Image: A person demonstrates how to attach the high chair to a standard dining chair by fastening the securing straps around the chair's back and seat.

OPERATING INSTRUCTIONS

1. Using as a High Chair (Infant Mode)

For infants who can sit up unassisted, up to 40 lbs (18 kg).

1. **Place Child:** Carefully place your child into the seat.
2. **Secure Harness:** Fasten the 5-point harness around your child. Adjust the straps for a snug, secure fit. Ensure the crotch strap is positioned correctly.
3. **Adjust Recline:** The seat offers three recline positions. Use the recline adjustment mechanism (typically a lever or button on the side/back) to select the desired angle for your child's comfort and developmental stage.
4. **Adjust Tray:** Slide the tray forward or backward to fit snugly against your child's torso, preventing food from falling into their lap. The tray insert can be placed on top of the main tray for easier cleaning.



Image: A baby is comfortably seated in the high chair, wearing the harness, with a bowl on the tray, ready for feeding.

2. Converting to a Toddler Booster Seat

For toddlers who no longer require the full high chair setup, up to 40 lbs (18 kg).

1. **Remove Tray:** Detach the feeding tray from the seat unit.
2. **Remove Seat Pad:** Carefully unthread the harness straps and remove the fabric seat pad.
3. **Adjust Height (if applicable):** The SpaceSaver model features two height adjustments. Use the adjustment mechanism to lower the seat to the booster height.
4. **Secure to Adult Chair:** Place the booster seat (without the tray and seat pad) on an adult dining chair. Use the integrated chair straps to securely fasten the booster to the adult chair, following the steps outlined in the 'Securing to an Adult Chair' section.
5. **Child Restraint:** The booster seat still utilizes the 5-point harness for securing your toddler. Ensure it is properly fastened and adjusted.



Image: A toddler is seated in the booster seat configuration, which is securely strapped to a dining chair, participating in mealtime at the table.

MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the product's lifespan.

- **Seat Pad and Harness:** The fabric seat pad and 5-point harness are machine washable. Remove them from the seat unit and wash according to the care label instructions, typically on a gentle cycle with cold water. Air dry or tumble dry on low heat.
- **Tray and Tray Insert:** The removable tray and tray insert are dishwasher safe. Place them on the top rack of your dishwasher for thorough cleaning.
- **Seat Unit and Base:** Wipe down the plastic seat unit and base with a damp cloth and mild soap. Rinse thoroughly and dry completely before reassembly.



Image: The removable tray and the main plastic seat component of the high chair are shown inside a dishwasher, illustrating their dishwasher-safe feature.

TROUBLESHOOTING

- **High Chair Wobbles:** Ensure all chair straps are pulled tight and securely buckled around the adult dining chair. Check that the high chair base is fully seated on the adult chair.
- **Tray Not Attaching/Detaching Smoothly:** Verify that no food debris or obstructions are in the tray tracks. Apply gentle, even pressure when sliding the tray.
- **Harness Difficult to Buckle/Unbuckle:** Check for any twists in the straps or debris in the buckle mechanism. Ensure the buckle components are aligned correctly.
- **Recline Adjustment Not Working:** Ensure the child is not putting excessive weight on the backrest during adjustment. Check for any obstructions in the recline mechanism.

SPECIFICATIONS

Feature	Detail
Model Number	FLG95
Product Dimensions	24.02 x 20.47 x 21.65 inches (L x W x H)
Item Weight	8 pounds
Maximum Weight Recommendation	40 Pounds (18 kg)
Material Type	Plastic
Care Instructions	Machine washable (seat pad), Dishwasher safe (tray)
Recline Positions	3
Height Adjustments	2



Image: A visual representation of the high chair's dimensions, indicating its length, width, and height for reference.

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the product packaging or contact Fisher-Price customer service directly. Specific warranty details are not provided in this manual.

For further assistance, parts replacement, or to report any issues, please contact Fisher-Price customer support through their official website or the contact information provided with your purchase.

Online Support: [Fisher-Price Customer Service](#)

