

Amkette 833BK

Amkette Pocket FM Radio Portable Multimedia Speaker User Manual

Model: 833BK

INTRODUCTION

The Amkette Pocket FM Radio Portable Multimedia Speaker is a versatile device designed for audio playback and utility. It combines a portable FM radio with a multimedia speaker, supporting various input options, and features a powerful integrated torch. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance.



Image: The Amkette Pocket FM Radio Portable Multimedia Speaker, showcasing its compact design, speaker grille, digital display, and integrated torch.

WHAT'S IN THE BOX

Upon unboxing your Amkette Pocket FM Radio, please ensure all the following components are present:

- Amkette Pocket FM Radio Portable Multimedia Speaker
- Rechargeable Battery (1800mAh Li-Ion)
- Charging Cable (USB)
- Owner's Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Amkette Pocket FM Radio:

1. **Telescopic FM Antenna:** Extendable antenna for improved FM reception.

- 2. Digital Display:** Shows FM frequency, time, and battery status.
- 3. Speaker Grille:** Front-facing speaker for audio output.
- 4. Numeric Keypad:** For direct frequency input and track selection.
- 5. Function Buttons:** Play/Pause, Mode, Next/Previous Track, Torch activation.
- 6. Integrated Torch:** Powerful LED light for illumination.
- 7. USB Port:** For USB drive playback and charging.
- 8. Micro SD Card Slot:** For Micro SD card playback.
- 9. AUX Input:** For connecting external audio devices.
- 10. Volume Control/Power Knob:** Rotary knob to turn on/off and adjust volume.



Image: Front view of the Amkette Pocket FM Radio, highlighting the speaker, keypad, and display.

POWERFUL LED TORCH WITH BACKLIT BUTTONS



Image: The Amkette Pocket FM Radio with its powerful LED torch illuminated, showing the backlit buttons.

SETUP

1. Battery Installation and Charging

1. Locate the battery compartment on the back of the device.
2. Insert the provided 1800mAh Li-Ion battery, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port.
5. The charging indicator will illuminate. A full charge typically takes approximately 3-4 hours.
6. For optimal battery life, fully charge the device before first use.

POWERFUL 1800mAh BATTERY



12H
OF FM RADIO

OR

8H
OF LED TORCH

OR

6H
OF USB PLAY

Image: Diagram illustrating the powerful 1800mAh battery and its estimated playback times for FM radio, LED torch, and USB play.

OPERATING INSTRUCTIONS

1. Power On/Off and Volume Control

- To power on the device, rotate the volume knob clockwise until you hear a click and the display illuminates.
- To power off, rotate the volume knob counter-clockwise until it clicks off.
- Adjust the volume by rotating the same knob clockwise to increase and counter-clockwise to decrease.

2. FM Radio Operation

- Extend the telescopic FM antenna fully for best reception.
- Press the "Mode" button until "FM" is displayed.
- To auto-scan and save stations, press and hold the "Play/Pause" button. The radio will scan and store available FM frequencies.
- To manually tune, use the numeric keypad to enter the desired frequency directly.

- Use the "Next/Previous" buttons to navigate between saved stations.



***FM Reception varies from places to places**

Image: Close-up view of the Amkette Pocket FM Radio highlighting the high diversity external FM antenna and its importance for reception.

3. Multimedia Playback (USB/Micro SD Card)

- Insert a USB drive or Micro SD card (up to 32GB, formatted to FAT32) containing MP3 audio files into the respective slot.
- The device will automatically switch to USB or SD card mode and begin playing. If not, press the "Mode" button to select the correct input.
- Use the "Play/Pause" button to pause or resume playback.
- Use the "Next/Previous" buttons to skip tracks.
- The numeric keypad can be used for direct track selection if supported by the file system.

MULTIMEDIA SPEAKER

USB / MICRO SD CARD PLAYBACK



Image: The Amkette Pocket FM Radio demonstrating its multimedia speaker capabilities with USB and Micro SD card playback options.

4. AUX Input

- Connect an external audio device (e.g., smartphone, laptop) to the speaker's AUX input using a 3.5mm audio cable (not included).
- Press the "Mode" button until "AUX" is displayed.
- Control playback and volume from your connected external device.

5. Torch Function

- Press the dedicated "Torch" button (often indicated by a flashlight icon) to turn the powerful LED torch on or off.
- The torch can be used independently of the audio functions.

POWERFUL LED TORCH WITH BACKLIT BUTTONS



Image: The Amkette Pocket FM Radio with its powerful LED torch illuminated, showing the backlit buttons for ease of use in low light.

MAINTENANCE

- Keep the device dry. Avoid exposure to water or high humidity.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the device in a cool, dry place when not in use for extended periods.
- Avoid dropping the device or subjecting it to strong impacts.
- If the battery is not used for a long time, charge it at least once every three months to maintain its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not power on.	Battery is low or depleted; Power knob is off.	Charge the battery; Rotate the power knob clockwise to turn on.
Poor FM reception.	Antenna not extended; Weak signal area.	Fully extend the telescopic antenna; Try moving the device to a different location (e.g., near a window).
No sound from USB/SD card.	Incorrect mode selected; Corrupt files; Incompatible format; USB/SD card not inserted correctly.	Press "Mode" button to select correct input; Ensure files are MP3 format; Re-insert USB/SD card; Try a different USB/SD card.
Torch not working.	Battery is low; Torch button not pressed correctly.	Charge the battery; Press the torch button firmly.

SPECIFICATIONS

Feature	Detail
Model Number	833BK
Product Dimensions	12.3 x 3.3 x 6.8 cm
Item Weight	264 g
Battery Type	1800mAh Li-Ion (Rechargeable, Replaceable)
Playback Time (FM Radio)	Up to 12 Hours
Playback Time (USB/SD)	Up to 6 Hours
Torch Backup Time	Up to 8 Hours
Connectivity	USB, MicroSD, AUX
Special Features	Built-In Flashlight, High Diversity Antenna, Backlit Buttons
Color	Black



Image: Diagram showing the physical dimensions of the Amkette Pocket FM Radio: 12.3cm length, 3.3cm width, and 6.8cm height.


WARRANTY AND SUPPORT

Your Amkette Pocket FM Radio Portable Multimedia Speaker comes with a **1 Year Manufacturing Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures peace of mind regarding the product's quality. For warranty claims, technical support, or any inquiries, please contact Amkette customer service. Refer to the contact information provided on the product packaging or the official Amkette website.

Legal Disclaimer: FM reception can vary from place to place due to environmental factors and signal strength.

© 2024 Amkette. All rights reserved.

Documents - Amkette – 833BK

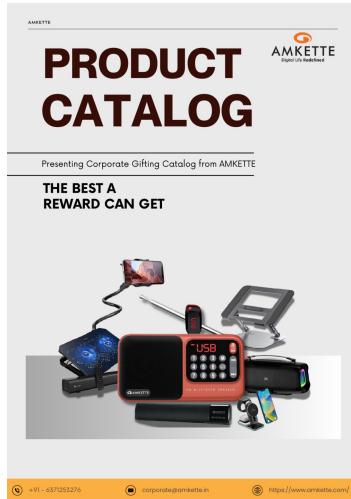

[pdf] Accessories Borchure Catalog

Amkette Catalogue 2024 DAGNQCdEbjY BAGNJv3dENA Subrat Kumar Nayak Download Brochure

►Corporate Gifting AmketteAmkette 1cdn shopify s files 1 0676 1273 7846 v 1726810940 |||

AMKETTE PRODUCT CATALOG Presenting Corporate Gifting Catalog from AMKETTE THE BEST A REWARD CAN GET ... Receiver Hidden FM Antenna Voice Recording MRP - 1,399 COLORS BLACK EMERGENCY TORCH LONG BATTERY **833BK** Trubeats Pocket FM Multimedia FM Speaker FEATURES True Multimedia Speaker Powerful LED Torch ...

lang:en score:29 filesize: 10.18 M page_count: 24 document date: 2024-09-19