

[Manuals.plus](#) /

› [Mixpresso](#) /

› Mixpresso Single Serve Coffee Maker K4DGR00 Instruction Manual

Mixpresso K4DGR00

Mixpresso Single Serve Coffee Maker K4DGR00 Instruction Manual

Model: K4DGR00

INTRODUCTION

Thank you for choosing the Mixpresso Single Serve Coffee Maker. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new coffee machine. Please read it thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Mixpresso Single Serve Coffee Maker:

- Water Reservoir Lid
- K-Cup/Ground Coffee Holder
- Brewing Head
- Water Tank (12 oz capacity)
- Power Button / Brew Button
- Drip Tray (removable)
- Power Cord

SMART & COMPACT DESIGN

Designed for Everyday Convenience



Compact Size
Fits small spaces easily



Removable Drip Tray
Designed for easy maintenance



Quick Heating System
Brews in seconds



DIMENSIONS (COMPACT SIZE)

9.5" H | 8.2" D | 4.7" W



MiXPRESSO

Image: Dimensions of the Mixpresso Single Serve Coffee Maker. Height: 9.5 inches, Depth: 8.2 inches, Width: 4.7 inches.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and place the coffee maker on a stable, flat surface.
2. **Clean:** Before first use, clean the removable parts (K-Cup holder, drip tray) with warm, soapy water. Wipe the exterior of the machine with a damp cloth.

3. Rinse Cycle:

- Fill the water tank with clean water (up to 12 oz).
- Place a large mug or container on the drip tray.
- Close the lid without inserting a K-cup or ground coffee.
- Plug in the coffee maker. The power button will illuminate.
- Press the power button to start a brewing cycle. This will flush the internal components.
- Discard the water. Repeat this process 2-3 times to ensure thorough cleaning.



Image: A hand pouring water into the easy-fill water tank of the coffee maker. The image also shows various mug sizes (6 oz, 8 oz, 10 oz, 12 oz) for reference.

OPERATING INSTRUCTIONS

Brewing with K-Cups:

1. **Fill Water Tank:** Open the water reservoir lid and pour fresh water into the tank. Do not exceed the 12 oz maximum fill line.

2. **Insert K-Cup:** Lift the brewing head handle. Place a K-Cup pod into the K-Cup holder. Close the handle firmly until it clicks.
3. **Place Mug:** Position your coffee mug (up to 4 inches tall) on the drip tray.
4. **Start Brewing:** Plug in the coffee maker. The power button will illuminate. Press the power button to begin the brewing process.
5. **Auto Shut-Off:** The coffee maker will automatically shut off once brewing is complete.

Brewing with Ground Coffee (Reusable Filter Not Included):

1. **Fill Water Tank:** Open the water reservoir lid and pour fresh water into the tank. Do not exceed the 12 oz maximum fill line.
2. **Add Grounds:** If using a reusable filter (sold separately), fill it with your desired amount of ground coffee. Place the filled reusable filter into the K-Cup holder. Close the handle firmly.
3. **Place Mug:** Position your coffee mug on the drip tray.
4. **Start Brewing:** Plug in the coffee maker. The power button will illuminate. Press the power button to begin the brewing process.
5. **Auto Shut-Off:** The coffee maker will automatically shut off once brewing is complete.

ONE-TOUCH COFFEE IN 30 SECONDS

Perfect Coffee, Every Time



Auto Shut-Off for Safety & Energy Saving

MiXPRESSO

Image: A Mixpresso single serve coffee maker shown in two states: on the left, the lid is open with a K-cup inserted, and on the right, it is brewing coffee into a glass mug. Text indicates "One-Touch Coffee in 30 Seconds" and "800W Fast Heat-Up".

Your browser does not support the video tag.

Video: An official Mixpresso video demonstrating the simple steps to brew coffee using the single serve coffee maker. It shows filling water, inserting a K-cup, and pressing the brew button.

CARE AND MAINTENANCE

Daily Cleaning:

- Unplug the coffee maker and allow it to cool completely.
- Remove the drip tray and K-Cup holder. Wash them in warm, soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a damp, soft cloth. Do not immerse the appliance in water.
- To clean the internal reservoir, hold the brew button down to drain any remaining water.



Image: A diagram showing the Mixpresso coffee maker with its removable water filter, removable drip tray, and the reservoir that cleans with one click, emphasizing easy cleaning features.

Descaling (Monthly or as needed):

Mineral deposits from water can affect performance. Descale your coffee maker regularly:

1. **Prepare Solution:** Fill the water tank with a mixture of 1 part white vinegar and 2 parts water.
2. **Start Cycle:** Place a large mug on the drip tray. Close the lid (without a K-cup). Press the brew button to start a cycle.
3. **Pause and Soak:** Once about half of the solution has brewed, press the brew button again to stop the cycle. Let the machine sit for 30 minutes to allow the vinegar to work.
4. **Complete Cycle:** After 30 minutes, press the brew button to complete the brewing cycle. Discard the solution.
5. **Rinse Cycles:** Fill the water tank with fresh, clean water. Run 2-3 full brewing cycles with only water to rinse out any remaining vinegar taste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in tank; machine not plugged in; lid not closed properly.	Fill water tank; ensure power cord is securely plugged in; close lid firmly until it clicks.
Coffee tastes weak or watery.	Insufficient coffee grounds; K-cup punctured incorrectly; machine needs descaling.	Use more coffee grounds or a stronger K-cup; ensure K-cup is properly seated; perform descaling procedure.
Water leaks from the machine.	Water tank overfilled; K-cup not seated correctly; drip tray full.	Do not exceed max fill line; ensure K-cup is properly inserted; empty and clean drip tray.
Machine makes unusual noise.	Air in pump; machine needs descaling.	Run a few water-only cycles to clear air; perform descaling procedure.

SPECIFICATIONS

- **Brand:** Mixpresso
- **Model Number:** K4DGR00
- **Capacity:** 12 ounces
- **Product Dimensions (D x W x H):** 8.2" x 4.7" x 9.5"

- **Wattage:** 800 watts
- **Voltage:** 110 volts
- **Operation Mode:** Fully Automatic
- **Compatible Coffee Pods:** K-Cup, K-Cup 2.0
- **Special Features:** Auto Shut-Off, Removable Tank, Single Cup Brew
- **Material:** Plastic
- **Color:** Dark Grey

WARRANTY AND SUPPORT

Your Mixpresso coffee maker is covered under our manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or contact Mixpresso customer support.

For customer support, technical assistance, or to inquire about replacement parts, please visit the official Mixpresso website or contact their customer service department directly. Contact information can typically be found on the product packaging or the official brand website.

You can also visit the [Mixpresso Store on Amazon](#) for more information and product offerings.

© 2023 Mixpresso. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

