

[Manuals.plus](#) /

› [Bicycle](#) /

› Bicycle Playing Cards User Manual

Bicycle B075NG4NMN

Bicycle Playing Cards User Manual

Model: B075NG4NMN

INTRODUCTION

Welcome to the user manual for your Bicycle Playing Cards. This set includes two Standard decks and two Supreme Line decks, designed for various card games, magic, and cardistry. This manual provides essential information on the product's components, setup, general use, maintenance, and specifications to ensure you get the most out of your playing cards.

PRODUCT OVERVIEW

Your Bicycle Playing Cards set contains a total of four decks:

- **Two (2) Bicycle Standard Decks:** One blue-backed and one red-backed. These are classic decks suitable for a wide range of card games.
- **Two (2) Bicycle Supreme Line Decks:** One blue-backed and one red-backed. These decks are specifically designed for magicians and cardists, offering enhanced handling and durability.



SETUP

Setting up your new Bicycle playing cards is straightforward:

1. **Unpack:** Carefully remove the decks from their packaging.
2. **Open Tuck Box:** Slide open the tuck box of the desired deck.
3. **Remove Seal:** If present, gently break the seal on the deck.
4. **Initial Shuffle:** Perform a thorough shuffle to mix the cards and remove any initial stiffness from being factory-packed. This also helps to break in the cards for smoother handling.

OPERATING (GENERAL USE)

Bicycle playing cards are versatile and can be used for a multitude of purposes.

For Card Games:

- **Shuffling:** Use standard shuffling techniques such as riffle shuffles, overhand shuffles, or Hindu shuffles to ensure random distribution of cards.
- **Dealing:** Deal cards according to the rules of your chosen game.
- **Handling:** Handle cards by their edges to prevent bending or creasing.

For Magic and Cardistry (Supreme Line):

The Supreme Line decks are optimized for advanced handling:

- **Fanning:** The smooth finish allows for effortless fanning and spreading of cards.
- **Flourishes:** Practice various cardistry flourishes, such as springs, cuts, and shuffles, to enhance your dexterity.
- **Durability:** While designed for performance, consistent practice with proper technique will extend the life of your decks.

MAINTENANCE

Proper care will significantly extend the lifespan and maintain the quality of your Bicycle playing cards.

- **Keep Dry:** Store cards in a dry environment to prevent warping or damage from moisture.
- **Clean Hands:** Always ensure your hands are clean and dry before handling the cards to avoid transferring oils or dirt.
- **Store in Tuck Box:** When not in use, keep the cards in their original tuck boxes to protect them from dust, light, and physical damage.
- **Avoid Bending:** Do not intentionally bend or crease cards, as this can permanently damage their integrity and make them unsuitable for play or performance.
- **Rotate Decks:** If you use cards frequently, consider rotating between decks to distribute wear evenly.

TROUBLESHOOTING

While Bicycle playing cards are durable, minor issues can arise. Here are some common concerns and solutions:

- **Cards feel sticky or clumpy:** This is often due to accumulated oils or dirt from hands. Ensure hands are clean before use. For minor stickiness, fanning the cards out and gently wiping them with a dry, lint-free cloth may help.

- **Cards are bent or creased:** Unfortunately, significant bends or creases are usually permanent. To prevent this, handle cards carefully and store them properly in their tuck boxes.
- **Cards are warped from moisture:** If cards are exposed to high humidity or liquid, they may warp. Try placing them under a heavy, flat object in a dry environment for a few days. Prevention is key; avoid humid conditions.
- **Lost cards:** If a card is lost, the deck is incomplete and may not be suitable for all games or magic tricks. Replacement individual cards are generally not available; a new deck would be required.

SPECIFICATIONS

Brand	Bicycle
Model Number (ASIN)	B075NG4NMN
Product Dimensions	13.21 x 9.4 x 3.81 cm (Package)
Item Weight	420 grams
Material	Cardboard
Color	Blue-red (for the set)
Recommended Age	14 years and up
Included Components	4 Decks of Playing Cards (2 Standard, 2 Supreme Line)

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For any product-related inquiries or support, please refer to the retailer or manufacturer's official website.

© 2024 Bicycle Playing Cards. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B075NG4NMN>

More documents and user manuals: <https://manuals.plus/>