

[Manuals.plus](#) /

› [Magic Sing](#) /

› Magic Sing Karaoke MP30 Bluetooth Microphone and Speaker User Manual

Magic Sing MP30

Magic Sing Karaoke MP30 Bluetooth Microphone and Speaker User Manual

Model: MP30 (10786989)

INTRODUCTION

This manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your Magic Sing Karaoke MP30 Bluetooth Microphone and Speaker. Please read this manual thoroughly before using the device to ensure proper function and longevity.

The Magic Sing MP30 is a portable microphone and speaker combo system designed for karaoke. It connects to your smartphone via Bluetooth, allowing you to view lyrics and manage songs through the dedicated MagicSing Karaoke app.

PACKAGE CONTENTS



The image displays the Magic Sing MP30 Bluetooth Microphone and Speaker, along with its accessories, neatly organized within its protective carrying case. The microphone itself is black with silver accents, and the case is black with a red zipper. A small instruction manual and charging cables are visible in mesh pockets.

- One (1) Wireless Microphone with built-in speakers
- USB charging cable

- Audio cable (3.5mm to Micro USB)
- USB flash drive
- Carrying case
- User Manual



This image shows the two white cables included with the Magic Sing MP30: a USB charging cable (USB-A to Micro USB) and an audio cable (3.5mm jack to Micro USB). These cables are essential for charging the device and connecting it to other audio sources if needed.

SETUP

Charging the Device

Before first use, fully charge the Magic Sing MP30 microphone. Connect the USB charging cable to the microphone's charging port and to a USB power adapter (not included) or a computer's USB port.

- **Charge time:** Approximately 2 hours
- **Useful time (battery life):** Up to 8 hours

Downloading the MagicSing App

The Magic Sing MP30 requires the official MagicSing Karaoke app for full functionality. This app provides access to the song library and displays lyrics.

1. Open the app store on your smartphone (Google Play Store for Android or Apple App Store for iOS).
2. Search for "MagicSing Karaoke".
3. Download and install the free application.

Bluetooth Pairing

To use the microphone, it must be paired with your smartphone via Bluetooth.

1. Ensure the Magic Sing MP30 is powered on.
2. Enable Bluetooth on your smartphone.
3. In your smartphone's Bluetooth settings, search for available devices.
4. Select "Magic Sing MP30" (or similar name) from the list to pair.
5. Once paired, the microphone will indicate a successful connection (e.g., an audible prompt or indicator light).

OPERATING INSTRUCTIONS

Basic Controls



This image provides a close-up view of the control panel on the Magic Sing MP30 microphone. Visible controls include buttons for Treble, Bass, Echo, and Music volume adjustments, as well as microphone volume and mute buttons. A power button is also centrally located.

- **Power Button:** Press and hold to turn the microphone on or off.
- **Volume Controls:** Adjust microphone volume, music volume, treble, bass, and echo levels using the dedicated buttons.
- **Mute Button:** Mute or unmute the microphone output.

Using the MagicSing App

The app is your primary interface for selecting songs and managing your karaoke experience.

1. Launch the MagicSing Karaoke app on your paired smartphone.
2. Browse the extensive song library. Note that a subscription is required to access the full catalog of 220,000+ songs in various languages (English, Tagalog, Korean, Chinese, Japanese, Hindi, Spanish, Vietnamese, etc.).
3. Select a song to begin. Lyrics will display on your smartphone screen.
4. Adjust microphone and music levels directly on the MP30 or through the app for optimal sound.
5. New songs are updated weekly within the app.

Customization Features

The Magic Sing MP30 allows for various sound customizations:

- **Melody:** Adjust the melody volume.
- **Tone:** Modify the vocal tone.
- **Echo:** Control the echo effect for vocals.
- **Tempo:** Adjust the song tempo.
- Other karaoke functions can be customized via the app.

MAINTENANCE

Cleaning

- Wipe the microphone body with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials.

- Keep the microphone dry and away from moisture.

Storage

- Store the microphone in its protective carrying case when not in use.
- Store in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Microphone does not turn on.	Battery is depleted.	Charge the microphone for at least 2 hours.
Cannot connect via Bluetooth.	Bluetooth is off on smartphone; microphone not in pairing mode; interference.	Ensure Bluetooth is enabled on your phone. Restart both the microphone and your phone. Move closer to the microphone.
No sound from microphone.	Microphone volume is too low or muted; app settings.	Increase microphone volume on the device and in the app. Check if the microphone is muted.
Lyrics not displaying in app.	No active subscription; internet connectivity issues.	Ensure you have an active MagicSing subscription. Check your Wi-Fi or mobile data connection.
Sound distortion.	Volume too high; microphone too close to speaker; interference.	Reduce volume levels. Maintain a reasonable distance from the speaker. Reduce environmental interference.

SPECIFICATIONS

Feature	Detail
Model Number	10786989 (MP30)
Dimensions (Microphone)	9.5" x 3.5" x 2.5" (approximate)
Dimensions (Bag)	11" x 4" x 3" (approximate)
Weight	2 lbs
Connectivity	Bluetooth 4.0, Wi-Fi (for app), USB
Power Source	Battery Powered
Charge Time	2 hours
Useful Time (Battery)	8 hours
Compatible Devices	Smartphones (iOS and Android)

Feature	Detail
Song Library Access	Requires MagicSing app subscription for full access (220,000+ songs)
Microphone Form Factor	Handheld
Polar Pattern	Bidirectional

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Magic Sing website or contact their customer service directly. Details are typically provided on the product packaging or within the MagicSing app's help section.

Consumer Alert: Most users do not need a license to operate this wireless microphone system. Nevertheless, operating this microphone system without a license is subject to certain restrictions: the system may not cause harmful interference; it must operate at a low power level (not in excess of 50 milliwatts); and it has no protection from interference received from any other device.

© 2024 Magic Sing. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B075NSKBJP>

More documents and user manuals: <https://manuals.plus/>