

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Kubota](#) /
- › [Kubota Z700 Zero Turn Lawn Mower \(1/64 Scale\) - Instruction Manual](#)

Kubota Z700

Kubota Z700 Zero Turn Lawn Mower (1/64 Scale) - Instruction Manual

INTRODUCTION

This manual provides instructions for the 1/64 scale Kubota Z700 Zero Turn Lawn Mower toy. This model is designed for play and display, featuring a pull-back action mechanism. Please read these instructions carefully to ensure proper use and enjoyment of your toy.



Image: The 1/64 scale Kubota Z700 Zero Turn Lawn Mower toy, showcasing its design and features.

SAFETY INFORMATION

This product is a toy and is not intended for children under 3 years of age due to small parts that may pose a choking hazard. Adult supervision is recommended during play. Do not attempt to disassemble the toy beyond normal maintenance as this may damage the product and void any implied warranty.

- Keep away from open flames or extreme heat.
- Avoid contact with water to prevent damage to internal mechanisms.
- Do not throw or strike the toy against hard surfaces.

SETUP

The Kubota Z700 Zero Turn Lawn Mower toy comes pre-assembled and ready for use directly out of the packaging. No batteries are required for its operation.

1. Carefully remove the toy from its packaging.
2. Inspect the toy for any visible damage or loose parts.
3. Ensure all wheels are securely attached and move freely.

OPERATING INSTRUCTIONS

This toy features a pull-back action mechanism for movement.

1. Place the toy on a flat, smooth surface.
2. Gently pull the toy backward along the surface. You will feel a slight resistance as the internal spring mechanism winds up.
3. Release the toy. It will propel forward on its own.
4. Repeat the process for continuous play.

Note: The distance and speed of travel may vary depending on the surface and how far the toy is pulled back.

MAINTENANCE

- **Cleaning:** Wipe the toy with a soft, dry cloth to remove dust and dirt. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight and extreme temperatures to preserve its material integrity and color.
- **Inspection:** Periodically check the wheels and pull-back mechanism for any debris or obstructions that might hinder movement.

TROUBLESHOOTING

- **Toy does not move after pull-back:**
 - Ensure the toy is placed on a smooth, flat surface.
 - Verify that the toy was pulled back sufficiently to engage the mechanism.
 - Check for any obstructions (e.g., hair, lint) in the wheels or pull-back mechanism.
- **Wheels are stiff or do not turn freely:**

- Inspect the axles for any debris. Gently remove any foreign material.
- Avoid excessive force when playing, as this can damage the wheel axles.

SPECIFICATIONS

Brand	Kubota
Model	Z700 (1/64 Scale)
Action Type	Pull Back Action
Material	Rubber, Diecast, Plastic
Color	Orange, Black
Product Dimensions (Approx.)	3.5"D x 2"W x 2.5"H
Item Weight (Approx.)	3.04 ounces
Assembly Required	No
Power Source	Manual (Pull-back mechanism)

WARRANTY AND SUPPORT

As a collectible toy item, this product typically does not come with an extended manufacturer's warranty. For any issues regarding manufacturing defects upon initial receipt, please contact the retailer or point of purchase within their specified return period.

For further assistance or inquiries, please refer to the contact information provided by the original seller or manufacturer, New Ray.