

[Manuals.plus](#) /

› [Eureka](#) /

› Eureka Blaze NES210 Stick Vacuum Cleaner Instruction Manual

Eureka NES210

Eureka Blaze NES210 Stick Vacuum Cleaner

Model: NES210 | **Brand:** Eureka

INTRODUCTION

The Eureka Blaze Stick Vacuum Cleaner is designed to provide efficient and versatile cleaning for your home. Its lightweight and 3-in-1 design allows for easy conversion between a stick vacuum, hand vacuum, and stair vacuum, making it suitable for various cleaning tasks on multiple surfaces, including hard floors and tiles. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your Eureka Blaze NES210 vacuum cleaner.

PRODUCT FEATURES

- **3-in-1 Design:** Easily converts from a stick vacuum to a hand vacuum with an onboard crevice tool, offering versatile cleaning options.
- **Lightweight:** Weighing only 3.97 pounds, this vacuum is highly portable and easy to maneuver.
- **Swivel Steering:** Eureka's signature swivel steering enhances maneuverability, allowing for efficient cleaning around furniture and obstacles.
- **Capture Nozzle:** Designed to pick up larger debris with ease, preventing particles from being pushed around.
- **Powerful Suction:** Equipped with a 2-amp motor for effective pickup of dust, pollen, and other particles.
- **Washable Filtration System:** Captures debris and helps improve air quality. The filter is reusable and easy to maintain.
- **X-Large Dust Cup:** Features a 0.6-liter capacity dust cup, reducing the frequency of emptying.
- **18-Foot Power Cord:** Provides ample reach for cleaning larger areas without frequent outlet changes.





The Eureka Blaze NES210 can be used as an upright stick vacuum or a compact handheld unit.

Eureka NES210


EASY.CLEAN.DONE.



Demonstration of the vacuum's 3-in-1 versatility for different cleaning needs.

Capture Nozzle


Large particles are no match for the Eureka Blaze. Watch as the Capture nozzle sucks them all up through the large particle channel. No more snowplowing them across the room.

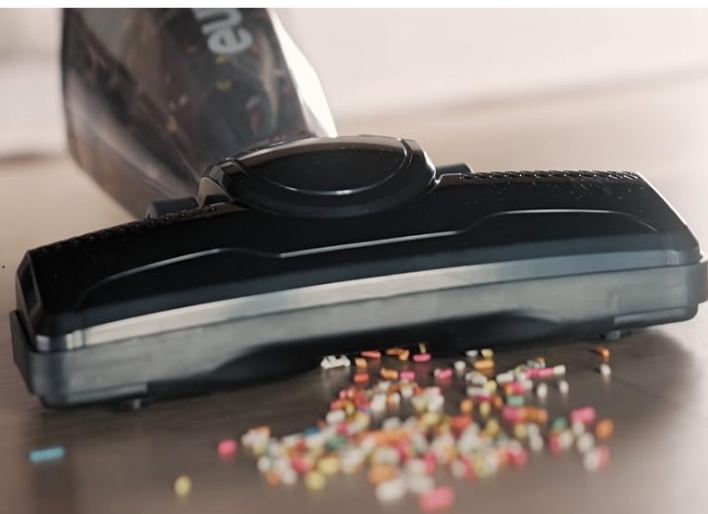

The swivel steering allows for easy navigation around furniture and obstacles.

3-in-1 Versatility

Transform the Eureka Blaze from a stick vacuum, to a hand vacuum, to a stair vacuum, and back again. This highly customizable vacuum is perfect for all your cleaning needs.

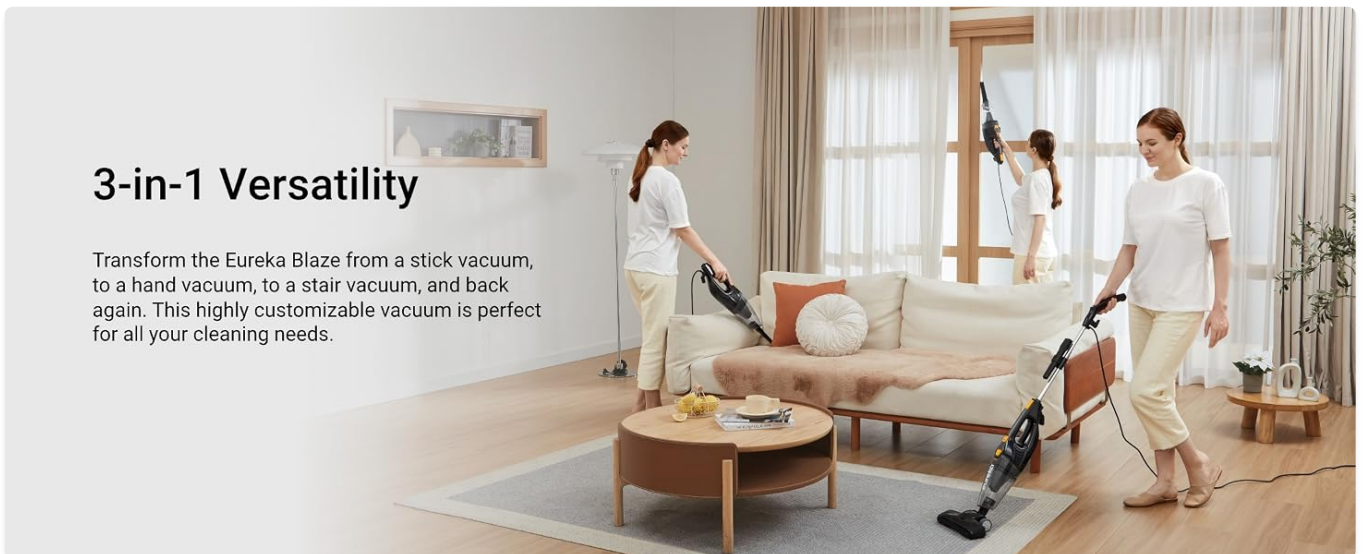


The capture nozzle is designed to effectively pick up larger debris.

WHAT'S IN THE BOX

Your Eureka Blaze NES210 package should contain the following components:

- Main Hand Vacuum Unit
- Removable Motorized Floor Nozzle
- Handle/Extension Wand
- Crevice Tool
- HEPA Filter (pre-installed)

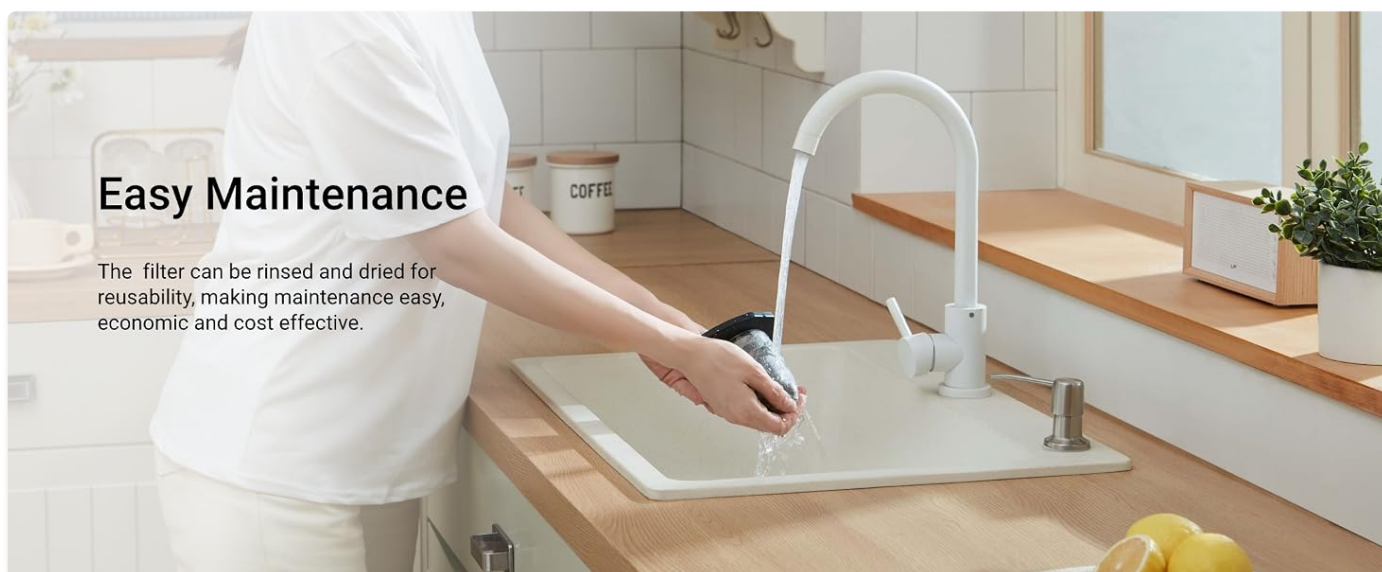

All components included in the Eureka Blaze NES210 package.

SETUP

The Eureka Blaze NES210 is designed for quick and easy assembly. Follow these steps to set up your vacuum cleaner:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all listed components are present.
2. **Assemble Stick Vacuum:**
 - Attach the handle/extension wand to the main hand vacuum unit until it clicks securely into place.
 - Connect the motorized floor nozzle to the bottom of the hand vacuum unit. Ensure it is firmly attached.
3. **Hand Vacuum Configuration:** For handheld use, detach the handle/extension wand and the floor nozzle from the main unit. You can then attach the crevice tool directly to the hand vacuum unit.
4. **Power Cord:** Unwind the 18-foot power cord before plugging the vacuum into a suitable electrical outlet.

OPERATING INSTRUCTIONS

The Eureka Blaze NES210 offers versatile cleaning modes. Always ensure the vacuum is plugged into a power outlet before operation.

Stick Vacuum Mode

Use this mode for general floor cleaning on hard surfaces and low-pile carpets.

- Ensure the handle and floor nozzle are securely attached.
- Plug the power cord into an electrical outlet.
- Press the power button located on the hand vacuum unit to turn on the vacuum.
- Guide the vacuum across the floor using the swivel steering for easy maneuverability.
- When finished, press the power button again to turn off the vacuum and unplug the cord.

Swivel Steering

Speed and efficiency is the name of the game when it comes to quick pickups. Eureka's signature swivel steering makes the BLAZE highly maneuverable and easy to use.



Utilize the stick vacuum mode for efficient floor cleaning.

Hand Vacuum Mode

Ideal for cleaning above-floor surfaces, upholstery, and tight spaces.

- Detach the handle and floor nozzle from the main unit.
- Attach the crevice tool directly to the hand vacuum unit for narrow areas.
- Plug in the power cord and turn on the vacuum.
- Use the hand vacuum to clean car interiors, furniture, pet beds, or other hard-to-reach spots.

Stair Vacuum

Use the hand vac and Capture nozzle to make cleaning your stairs a breeze.



The hand vacuum mode is perfect for cleaning counters and small spills.

Stair Vacuum Mode

For effective cleaning of stairs and elevated surfaces.

- Use the hand vacuum unit with the capture nozzle attached.
- Plug in the power cord and turn on the vacuum.
- Carefully clean each stair tread, utilizing the nozzle's design for efficient debris pickup.

Stick Vacuum

Use the Eureka Blaze in its fully assembled form to keep your living area clean and tidy. Surface dirt and dust from multi-surfaces - the Blaze can handle it all!



Carpet



Hard Floor



Clean stairs easily using the hand vac with the capture nozzle.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Eureka Blaze NES210 vacuum cleaner.

Emptying the Dust Cup

The dust cup has a maximum fill capacity of 0.6 liters. Empty it regularly to maintain suction power.

1. Ensure the vacuum is turned off and unplugged.
2. Locate the dust cup release button and detach the dust cup from the main unit.
3. Position the dust cup over a trash can.
4. Open the dust cup lid and shake out the debris.
5. Reattach the dust cup to the vacuum until it clicks into place.

18 ft. Power Cord

The 18ft long power cord allows you to clean from wall to wall. No more outlet hopping.



Empty the dust cup regularly to maintain optimal performance.

Cleaning the Washable Filter

The filter should be cleaned regularly to prevent loss of suction and maintain air quality. It is recommended to clean the filter after each use or when suction noticeably decreases.

1. Turn off and unplug the vacuum.

2. Remove the dust cup.
3. Carefully remove the filter from the dust cup.
4. Rinse the filter under cool running water until the water runs clear.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dust cup. Do not use the vacuum with a wet filter.

Easy Empty Dust Cup

Take off the cover of the dust cup and turn it over, the debris immediately falls into the bin, no fuss - and more importantly no mess. Emptying into the trash without having to touch anything.



Rinse the filter under cool water and allow it to air dry completely.

Cleaning the Roller Brush and Belt

Warning: When using the vacuum cleaner, the floor brush may become clogged by hairs and dirt. It is recommended to clean the roller brush and the belt every 2 weeks. Long-term failure to clean may cause malfunction, or even risk of smoke and belt breakage.

1. Ensure the vacuum is turned off and unplugged.
2. Flip the floor nozzle over to access the roller brush.
3. Use scissors or a brush to carefully remove any tangled hair, string, or debris from the roller brush.
4. Inspect the belt for any damage or wear. Replace if necessary.
5. Ensure the roller brush spins freely after cleaning.

TROUBLESHOOTING

If you encounter issues with your Eureka Blaze NES210, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; no power at outlet; power cord damaged.	Check power cord connection; test outlet with another appliance; inspect power cord for damage.
Loss of suction.	Dust cup full; filter clogged; nozzle/hose clogged; roller brush tangled.	Empty dust cup; clean/dry filter; check for and remove clogs in nozzle/hose; clean roller brush.
Unusual noise or smell.	Clogged roller brush/belt; motor overheating.	Turn off and unplug immediately. Clean roller brush and inspect belt. Allow motor to cool down if overheated.
Debris not picked up effectively.	Nozzle clogged; suction issue; incorrect usage.	Check nozzle for obstructions; refer to 'Loss of suction' solutions; ensure proper contact with surface.

If the problem persists after attempting these solutions, please contact Eureka customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Corded Stick Vacuum Cleaner for Home Pet Hair
Model Number	NES210
Brand	Eureka
Color	Blaze Black
Form Factor	Handheld, Stick, Upright
Special Feature	Lightweight, Swivel Steering, Washable Filter
Filter Type	HEPA Filter
Capacity	0.6 Liters (Dust Cup)
Wattage	240 watts
Amperage	2 Amps
Hose Length	18 Feet (Power Cord)
Product Dimensions	9.8"L x 5.6"W x 44"H
Item Weight	3.97 pounds
Noise Level	84 dB
Recommended Uses	Bare Floor, Hardwood, Tile Floor
UPC	839724016383

WARRANTY & SUPPORT

Warranty Information

The Eureka Blaze NES210 Stick Vacuum Cleaner comes with a **One-year limited warranty**. This warranty covers defects in material or workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official Eureka website or contact their customer service department. You can also refer to the official User Manual PDF for more detailed information:

Download User Manual
(PDF)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B075P7J8BB>

More documents and user manuals: <https://manuals.plus/>