

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karaoke USA](#) /

› [Karaoke USA Karaoke System - Portable, Black \(GF844\) User Manual](#)

## Karaoke USA GF844

# Karaoke USA Karaoke System User Manual

Model: GF844

Brand: Karaoke USA

## INTRODUCTION

Thank you for choosing the Karaoke USA GF844 Karaoke System. This portable, all-in-one system is designed to provide hours of entertainment with its versatile media playback options and powerful audio output. Enjoy singing your favorite songs wirelessly via Bluetooth, or play from a variety of physical and digital media.

Key features include:

- 35W Peak Digital Power Amplifier (25W RMS) for clear and powerful sound.
- 7-inch TFT Digital Color Screen for displaying lyrics and video content.
- Bluetooth connectivity for wireless audio streaming.
- Compatibility with CDG, DVD, MP3G, USB Flash drives, and SD cards.
- Record Voice and Music Mix function to capture your performances.
- Digital Key Control for adjusting song pitch to match your vocal range.
- Includes two wired microphones for duets and group performances.



The Karaoke USA GF844 Karaoke System, showcasing its main unit, two wired microphones, and two MP3G song discs.

## WHAT'S IN THE BOX

Upon opening your Karaoke USA GF844 package, please ensure all the following components are present:

- Karaoke Machine (Main Unit)
- AC Adapter (110V/50Hz~AC 240V/60Hz, UL Approved)
- Remote Control
- AV RCA Cables
- 2 x Wired Microphones
- 2 x MP3G Karaoke Discs (300 songs total)
- Docking Cradle (for mobile devices)
- 3.5mm to RCA Audio Cable
- User Manual

## INCLUDED IN PACKAGE

KaraokeUSA

- Karaoke Machine
- AC Adapter
- Remote Control
- AV RCA Cables
- 2 x Wired Microphones
- 2 x MP3G Karaoke Discs
- Docking Cradle
- 3.5mm to RCA Cable



A visual representation of all items included with your Karaoke USA GF844 system.

## SETUP

Follow these steps to set up your Karaoke USA GF844 system:

1. **Power Connection:** Connect the AC adapter to the DC IN jack on the back of the unit and plug the other end into a standard electrical outlet.
2. **Microphone Connection:** Plug the wired microphones into the MIC 1 and MIC 2 jacks on the front of the unit.
3. **Audio/Video Output (Optional):** To display lyrics on an external TV or monitor, connect the AV RCA cables from the unit's VIDEO OUT and AUDIO OUT jacks to the corresponding input jacks on your TV.
4. **External Audio Input (Optional):** To play music from an external device (e.g., smartphone, tablet), connect the 3.5mm to RCA audio cable from your device's headphone jack to the AUX IN jacks on the unit.
5. **Power On:** Press the POWER button to turn on the unit. The 7-inch TFT screen will illuminate.

## OPERATING INSTRUCTIONS

### Media Playback

The GF844 supports various media formats for your karaoke and entertainment needs.

# EASY TO USE COMPATIBLE WITH

KaraokeUSA

All trademarks are property of their respective owners



The GF844 offers broad compatibility with various media types, including Bluetooth, discs, and digital storage.

## Playing Discs (CDG, DVD, MP3G, Audio CD)

1. Open the disc tray located below the screen.
2. Carefully place your desired disc onto the tray with the label side facing up.
3. Close the disc tray. The unit will automatically detect the disc type and begin playback.
4. Use the PLAY/PAUSE, STOP, NEXT, and PREVIOUS buttons on the unit or remote control to manage playback.

# WATCH YOUR FAVORITE DVD MOVIE!

Karaoke USA



The 7-inch integrated screen allows for watching DVD movies directly on the unit.

## Bluetooth Streaming

1. Press the SOURCE button until "Bluetooth" mode is selected.
2. On your mobile device (smartphone, tablet), enable Bluetooth and search for "Karaoke USA GF844".
3. Select the unit from the list to pair. Once paired, you can stream audio wirelessly from your device.

## USB Flash Drive / SD Card Playback


1. Insert a USB flash drive into the USB port or an SD card into the SD card slot. Ensure no disc is in the tray for proper recognition.
2. Press the SOURCE button until "USB" or "SD" mode is selected.
3. Navigate through your files using the navigation buttons and select the desired song or video.

## Microphone and Vocal Controls

- **Microphone Volume:** Adjust the MIC VOL knobs on the top panel to control the volume of each microphone.
- **Echo Control:** Use the ECHO knob to add an echo effect to your vocals for a more professional sound.
- **Digital Key Control:** Press the KEY+ or KEY- buttons to adjust the musical key of the song to better suit your vocal range. This feature is particularly useful for karaoke tracks.

# RECORD YOUR VOICE DIGITAL KEY CONTROL

KaraokeUSA

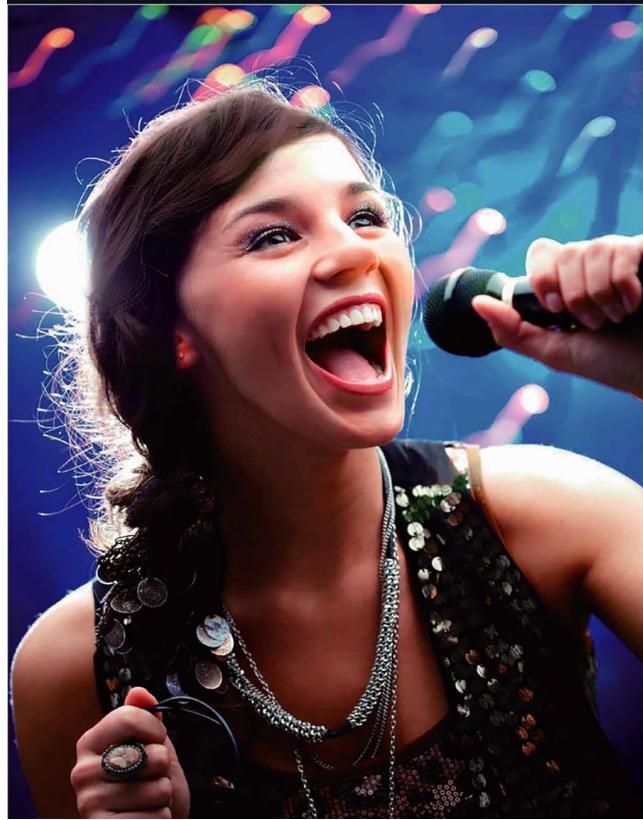

EASILY RECORD YOUR  
VOICE! MIX WITH  
MUSIC  
AND INSTANTLY  
PLAYBACK AND LISTEN  
TO!

ALWAYS SING IN TUNE  
USING THE DIGITAL KEY  
CONTROL!!!

The recording feature allows you to mix your voice with music, and the digital key control helps you sing in tune.

## Recording Your Performance

The GF844 allows you to record your singing performance directly to a connected USB flash drive or SD card.

1. Ensure a USB flash drive or SD card is inserted into the corresponding slot.
2. Start playing your desired karaoke track.
3. Press the RECORD button. The recording indicator will light up.
4. Sing into the microphone. Your voice will be mixed with the music and recorded.
5. Press the RECORD button again to stop recording. Your recorded file will be saved to the USB drive or SD card.

## MAINTENANCE

To ensure the longevity and optimal performance of your Karaoke USA GF844 system, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. For the screen, use a screen-specific cleaning solution and a microfiber cloth. Avoid abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Ventilation:** Ensure the unit has adequate ventilation. Do not block any ventilation openings.
- **Storage:** When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Power Off:** Always power off the unit and unplug it from the power source before cleaning or when not in use for a long time.

## TROUBLESHOOTING

If you encounter any issues with your Karaoke USA GF844 system, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not active.	Ensure AC adapter is securely plugged into the unit and a working power outlet.
No sound from speakers	Volume too low; incorrect source selected; mute activated.	Increase MASTER VOLUME. Press SOURCE button to select correct input. Check if MUTE is active.
No sound from microphones	Microphone volume too low; microphone not connected properly.	Increase MIC VOL knobs. Ensure microphones are fully plugged into their respective jacks.
Disc not playing/reading	Disc is dirty or scratched; incorrect disc type; disc inserted incorrectly.	Clean the disc. Ensure it's a compatible format (CDG, DVD, MP3G, Audio CD). Reinsert the disc correctly.
Bluetooth not connecting	Unit not in Bluetooth mode; device too far; device already paired.	Select Bluetooth mode on the unit. Ensure your device is within range. Unpair from other devices if necessary.
No video on external TV	AV cables not connected properly; TV input not selected correctly.	Check AV cable connections. Select the correct AV input on your TV.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

- **Model:** GF844
- **Brand:** Karaoke USA
- **Item Weight:** 10.3 pounds
- **Product Dimensions:** 13 x 10 x 17.8 inches
- **Screen Size:** 7 Inches (TFT Digital Color Screen)
- **Power Output:** 35W Peak Digital Power Amplifier (25W RMS)
- **Power Source:** Plug In Electric (AC Adaptor - 110V/50Hz~AC 240V/60Hz, UL Approved)
- **Connectivity:** Bluetooth, USB, SD Card, RCA (Audio/Video), 3.5mm AUX
- **Compatible Devices:** Personal Computer, Headphone (via AUX)
- **Included Components:** Karaoke Machine, AC Adapter, Remote Control, AV RCA Cables, 2 Wired Microphones, 2 MP3G Karaoke Discs, Docking Cradle, 3.5mm to RCA Audio Cable, User Manual.
- **Country of Origin:** China


## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Karaoke USA website or the contact details provided in your product packaging. Keep your purchase receipt as proof of purchase for any warranty claims.

For additional assistance, you may visit the [Karaoke USA Store on Amazon](#).

No official product videos from the seller were available for embedding in this manual.

## Related Documents - GF844

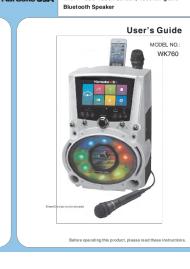
 <p>Karaoke USA <b>DVD / MP3G / CDG KARAOKE &amp; BLUETOOTH MEDIA PLAYER</b> User's Guide MODEL: GF844 • English • Español • Français Before operating the product, please read these instructions.</p>	<p><a href="#">Karaoke USA GF844 DVD/MP3G/CDG Karaoke &amp; Bluetooth Media Player User's Guide</a> User's guide for the Karaoke USA GF844, a DVD/MP3G/CDG Karaoke &amp; Bluetooth Media Player. Covers features, setup, operation, troubleshooting, and safety instructions.</p>
 <p>Karaoke USA <b>PROFESSIONAL DVD/CD+G KARAOKE PLAYER</b> User's Guide MODEL: GP978 • Bluetooth® • HDMI Before operating the product, please read these instructions.</p>	<p><a href="#">Karaoke USA GP978 Professional DVD/CD+G/MP3+G Karaoke Player User's Guide</a> Comprehensive user's guide for the Karaoke USA GP978, detailing features, setup, operation, troubleshooting, and specifications for this professional DVD/CD+G/MP3+G karaoke player. Learn how to connect, play discs, use Bluetooth, record, and access various system settings.</p>
 <p>Karaoke USA <b>ALL-IN-ONE WI-FI MULTIMEDIA KARAOKE SYSTEM WITH 7" LCD TOUCH SCREEN, RECORDING AND BLUETOOTH SPEAKER</b> User's Guide MODEL: WK760 Before operating the product, please read these instructions.</p>	<p><a href="#">Karaoke USA WK760 User's Guide: All-In-One Wi-Fi Multimedia Karaoke System</a> User's guide for the Karaoke USA WK760 All-In-One Wi-Fi Multimedia Karaoke System with a 7" LCD Touch Screen, Recording, and Bluetooth Speaker. Learn about setup, features, operation, and troubleshooting.</p>
 <p>Karaoke USA <b>DVD / MP3G / CDG KARAOKE &amp; BLUETOOTH MEDIA PLAYER</b> User's Guide MODEL: GF846 • English • Español • Français Before operating the product, please read these instructions.</p>	<p><a href="#">Karaoke USA GF846 DVD/MP3G/CDG Karaoke &amp; Bluetooth Media Player User's Guide</a> User's guide for the Karaoke USA GF846, a DVD/MP3G/CDG Karaoke &amp; Bluetooth Media Player. This guide covers setup, operation, features, troubleshooting, and specifications.</p>
 <p>Karaoke USA <b>DVD / MP3G / CDG KARAOKE &amp; BLUETOOTH MEDIA PLAYER</b> User's Guide MODEL: GF845 • English • Español • Français Before operating the product, please read these instructions.</p>	<p><a href="#">Karaoke USA GF845 DVD/MP3G/CDG Karaoke &amp; Bluetooth Media Player User's Guide</a> Comprehensive user guide for the Karaoke USA GF845, detailing setup, operation, features, and troubleshooting for this DVD/MP3G/CDG karaoke and Bluetooth media player.</p>



[Karaoke USA SD520 Portable MP3+G Karaoke Media Player with Bluetooth User's Guide](#)


Comprehensive user's guide for the Karaoke USA SD520 portable MP3+G karaoke media player with Bluetooth. Learn about features, setup, operation, recording, connectivity, specifications, and troubleshooting.

## Documents - Karaoke USA – GF844

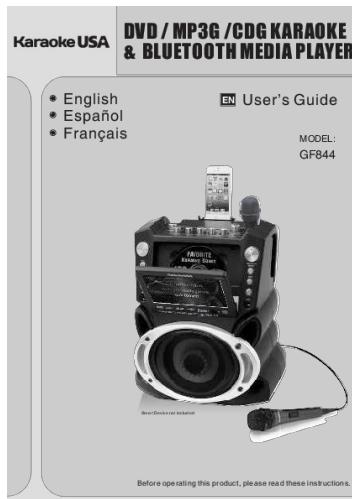

### [\[pdf\] User Manual Instructions Guide](#)

GF844 KARAOKEUSA EN MANUAL 20170311 cdr Administrator Karaoke USA System Portable Black User Manual B1tqCqp 4IL m media amazon images I ||| DVD / MP3G /CDG KARAOKE BLUETOOTH MEDIA PLAYER English Espaol Franais EN User s Guide MODEL: **GF844** Smart Device not included Before operating this product, please read these instructions. Contents Warnings and Precautions.....  
lang:en score:40 filesize: 2.01 M page\_count: 32 document date: 2022-03-24

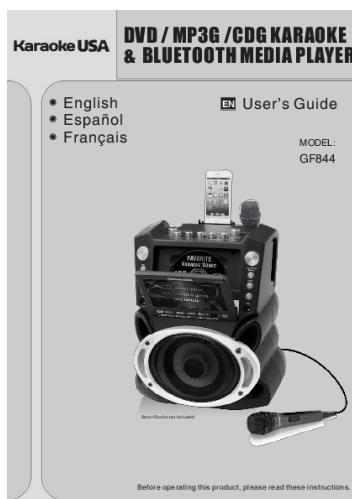

### [\[pdf\] User Manual Instructions Guide](#)


GF844 KARAOKEUSA EN MANUAL 20170311 cdr Administrator SP FR Manual doksolution files manuals DVD / MP3G /CDG KARAOKE BLUETOOTH MEDIA PLAYER English Espaol Franais EN User s Guide MODEL: **GF844** Smart Device not included Before operating this product, please read these instructions. Contents Warnings and Precautions.....  
lang:en score:38 filesize: 5.96 M page\_count: 96 document date: 2017-05-19



### [\[pdf\] User Manual Instructions Guide](#)

User's guide for the Karaoke USA GF844, a DVD/MP3G/CDG Karaoke & Bluetooth Media Player. Covers features, setup, operation, troubleshooting, and safety instructions.

lang:en score:32 filesize: 2.01 M page\_count: 32 document date: 2017-05-19

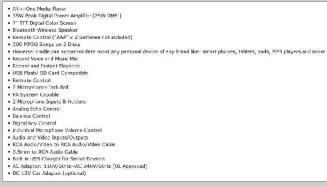

## [pdf] Specifications

Karaoke USA System Portable Black GF844 Specification Sheet 51PkzzNrPfL m media amazon images I

|||

...

lang:en score:17 filesize: 48.02 K page\_count: 1 document date: 2020-03-11