

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Marea](#) /
- › [Marea Women's Watch B41204/12 Instruction Manual](#)

## Marea B41204/12

# Marea Women's Watch B41204/12 Instruction Manual

Model: B41204/12

## INTRODUCTION

---

Thank you for choosing the Marea Women's Watch Model B41204/12. This manual provides essential information for the proper setup, operation, and maintenance of your new timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.



Image: The Marea Women's Watch B41204/12, featuring a round case, blue dial with chronograph sub-dials, and a metallic bracelet. The watch is designed for a modern, trendy aesthetic.

## SETUP

---

### 1. Setting the Time

1. Pull the crown (the small knob on the side of the watch) out to the second click position.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its normal position.

### 2. Adjusting the Bracelet

The bracelet can be adjusted by removing or adding links. This procedure typically requires specialized tools and is best performed by a qualified watch technician or jeweler to avoid damage to the watch or bracelet.

## OPERATING THE CHRONOGRAPH

---

Your Marea B41204/12 watch features a chronograph function for measuring elapsed time.

1. **Start/Stop:** Press the upper pusher button (typically at the 2 o'clock position) to start the chronograph. Press it again to stop the measurement.
2. **Reset:** While the chronograph is stopped, press the lower pusher button (typically at the 4 o'clock position) to reset all chronograph hands to their zero positions.

*Note:* Avoid operating the chronograph pushers underwater to maintain water resistance.

## MAINTENANCE

---

### Cleaning Your Watch

- Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dust and dirt.
- For more thorough cleaning, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

### Water Resistance

This watch has a water resistance rating of 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Ensure the crown is fully pushed in before any contact with water.

### Battery Replacement

The watch is powered by a battery. When the watch stops running, it indicates that the battery needs to be replaced. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

## TROUBLESHOOTING

---

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Incorrect time:** Re-set the time as described in the "Setting the Time" section.
- **Chronograph hands not resetting to zero:** This may indicate a need for calibration or service. Consult a watch technician.

For issues not covered here, please contact customer support.

## SPECIFICATIONS

---

| Feature                | Detail                 |
|------------------------|------------------------|
| Model Number           | B41204/12              |
| Display Type           | Analog (Analog)        |
| Case Diameter          | 36 Millimeters (36 mm) |
| Water Resistance Depth | 30 Meters (3 ATM)      |
| Power Source           | Battery Powered        |
| Special Features       | Chronograph            |

|            |       |
|------------|-------|
| Dial Color | Blue  |
| Item Shape | Round |

## WARRANTY AND SUPPORT

---

Marea watches are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Marea website. For technical support or service inquiries, please contact your authorized Marea dealer or customer service.

Keep your proof of purchase for warranty claims.

