

Tekswamp TeK-312067

Tekswamp Replacement Remote Control for Aiwa NSX-A888 User Manual

INTRODUCTION

This manual provides comprehensive instructions for the Tekswamp Replacement Remote Control, designed for use with the Aiwa NSX-A888 audio system. This remote offers most of the original commands for your device, ensuring functionality such as power on/off, menu access, navigation, and input signal selection. It is designed for ease of use with comfortable, accessible buttons and a durable construction.

The remote control operates using infrared (IR) technology and requires two AAA batteries (not included). No additional programming is required for compatibility with the specified Aiwa NSX-A888 model.

SETUP

Battery Installation

To begin using your remote control, you must install two AAA batteries. Follow these steps:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely. The remote features a security screw to prevent unauthorized access to the battery compartment, enhancing child safety.



Figure 1: Battery compartment with cover removed, showing AAA battery slots.

After battery installation, the remote is ready for use. The ON indicator light will illuminate briefly when any active button is pressed, confirming the remote is functioning and sending an IR signal.

OPERATING INSTRUCTIONS

Basic Functions

The Tekswamp replacement remote control provides essential functions for your Aiwa NSX-A888 audio system. Point the remote directly at the infrared receiver on your device for optimal performance.

- **Power On/Off:** Use the dedicated power button (often red) to turn your device on or off.
- **Menu Navigation:** Utilize the directional arrow buttons (up, down, left, right) and the 'OK' or 'Enter' button to navigate through menus and confirm selections.
- **Input Selection:** Use the 'SRC' or 'Input' button to cycle through available audio inputs on your system.
- **Volume Control:** Adjust the volume using the 'V+' and 'V-' buttons.



Figure 2: Front view of the remote control, highlighting button layout.

Specific Functions and Limitations

While this remote provides most original commands, some specific functions may not work properly with all devices or may not be available. These include, but are not limited to, page flip, keystone correction, video adjustment, and certain number pad functions. This remote does not include a laser pointer function.



Figure 3: Angled view of the remote control, illustrating button accessibility.

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality, clean it periodically. Use a soft, dry cloth to wipe the surface. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace the AAA batteries when the remote's response becomes inconsistent or the ON indicator light no longer illuminates. Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**

- Ensure the remote is pointed directly at the device's IR receiver.
- Check if the ON indicator light illuminates when a button is pressed. If not, replace the batteries.
- Verify that the batteries are inserted with correct polarity (+/-).

- **Limited functionality:**

- As noted in the 'Specific Functions and Limitations' section, some advanced or device-specific functions may not be fully supported by this replacement remote. This is normal operation.

- **Intermittent operation:**

- Ensure there are no obstructions between the remote and the device.
- Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the IR signal.
- Replace batteries if they are low, even if the indicator light still flickers.

SPECIFICATIONS

Feature	Specification
Brand	Tekswamp
Model Number	TeK-312067
Compatible Devices	Aiwa NSX-A888 (Home Audio)
Connectivity Technology	Infrared (IR)
Maximum Range	7 Meters
Battery Type	AAA
Number of Batteries Required	2 (not included)
Item Weight	2 Ounces
Button Quantity	31
Color	Black

WARRANTY AND SUPPORT

For any product support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact the seller, Tekswamp, directly through your purchase platform. Please have your product model number (TeK-312067) and purchase details available when contacting support.