

hofstein H3021545

Hofstein Koppom 3-Light Ceiling Spotlight

Model: H3021545

INTRODUCTION

Thank you for choosing the Hofstein Koppom 3-Light Ceiling Spotlight. This fixture is designed for indoor use, providing adjustable illumination with its three E14 spotlights. Please read this instruction manual carefully before installation and use to ensure safe operation and optimal performance.

SAFETY INFORMATION

- **Electrical Safety:** Always disconnect the main power supply before installation, maintenance, or bulb replacement. Installation should be performed by a qualified electrician if you are unsure.
- **Indoor Use Only:** This fixture is rated IP20, meaning it is protected against solid objects larger than 12.5mm but has no protection against water. Do not use in bathrooms or other areas where it may be exposed to moisture.
- **Bulb Compatibility:** Use only E14 bulbs with a maximum wattage of 40W per bulb. Exceeding this limit can cause overheating and damage to the fixture or create a fire hazard.
- **Insulation Class I:** This product must be connected to an earthed electrical supply.
- **Non-Dimmable:** This fixture is not designed for dimming. Using dimmable bulbs with a non-dimmable circuit may cause flickering or damage.
- **Cleaning:** Clean only with a dry, soft cloth. Do not use abrasive cleaners or solvents.

PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning installation.

- 1x Hofstein Koppom Ceiling Spotlight Fixture (main body with spiral arm and 3 spotlight holders)
- 3x Metal Shades
- 1x Mounting Bracket
- Mounting Hardware (screws, wall plugs, washers)

- Wiring Terminal Block



Image: Exploded view of the ceiling spotlight components, showing the main fixture, individual shades, mounting bracket, and electrical connectors.

INSTALLATION (SETUP)

Tools Required: Screwdriver, drill, pencil, wire strippers, voltage tester.

1. **Disconnect Power:** Before starting, ensure the main power supply to the installation area is switched off at the circuit breaker.
2. **Mark Drilling Points:** Hold the mounting bracket against the ceiling at the desired installation location. Use a pencil to mark the drilling points.
3. **Drill Holes:** Drill holes at the marked points suitable for the provided wall plugs. Insert the wall plugs.
4. **Attach Mounting Bracket:** Secure the mounting bracket to the ceiling using the provided screws.
5. **Wire Connection:** Connect the household electrical wires to the terminal block on the fixture. Ensure correct polarity: Live (L), Neutral (N), and Earth (E). Double-check all connections are secure.
6. **Attach Fixture:** Carefully align the main fixture body with the mounting bracket and secure it with the provided screws.
7. **Install Shades:** Attach the three metal shades to the spotlight holders.

8. **Insert Bulbs:** Screw E14 bulbs (not included) into each of the three spotlight sockets. Do not exceed 40W per bulb.

9. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.



Image: Product dimensions for planning installation space.

OPERATING INSTRUCTIONS

The Hofstein Koppom ceiling spotlight does not feature an integrated on/off switch. It is designed to be controlled by an external wall switch connected to your household electrical circuit.

- **Turning On/Off:** Use your standard wall switch to turn the light fixture on or off.
- **Adjusting Spotlights:** Each of the three spotlights can be individually adjusted to direct light where needed. Gently pivot and rotate the spotlight heads to achieve the desired illumination angle.

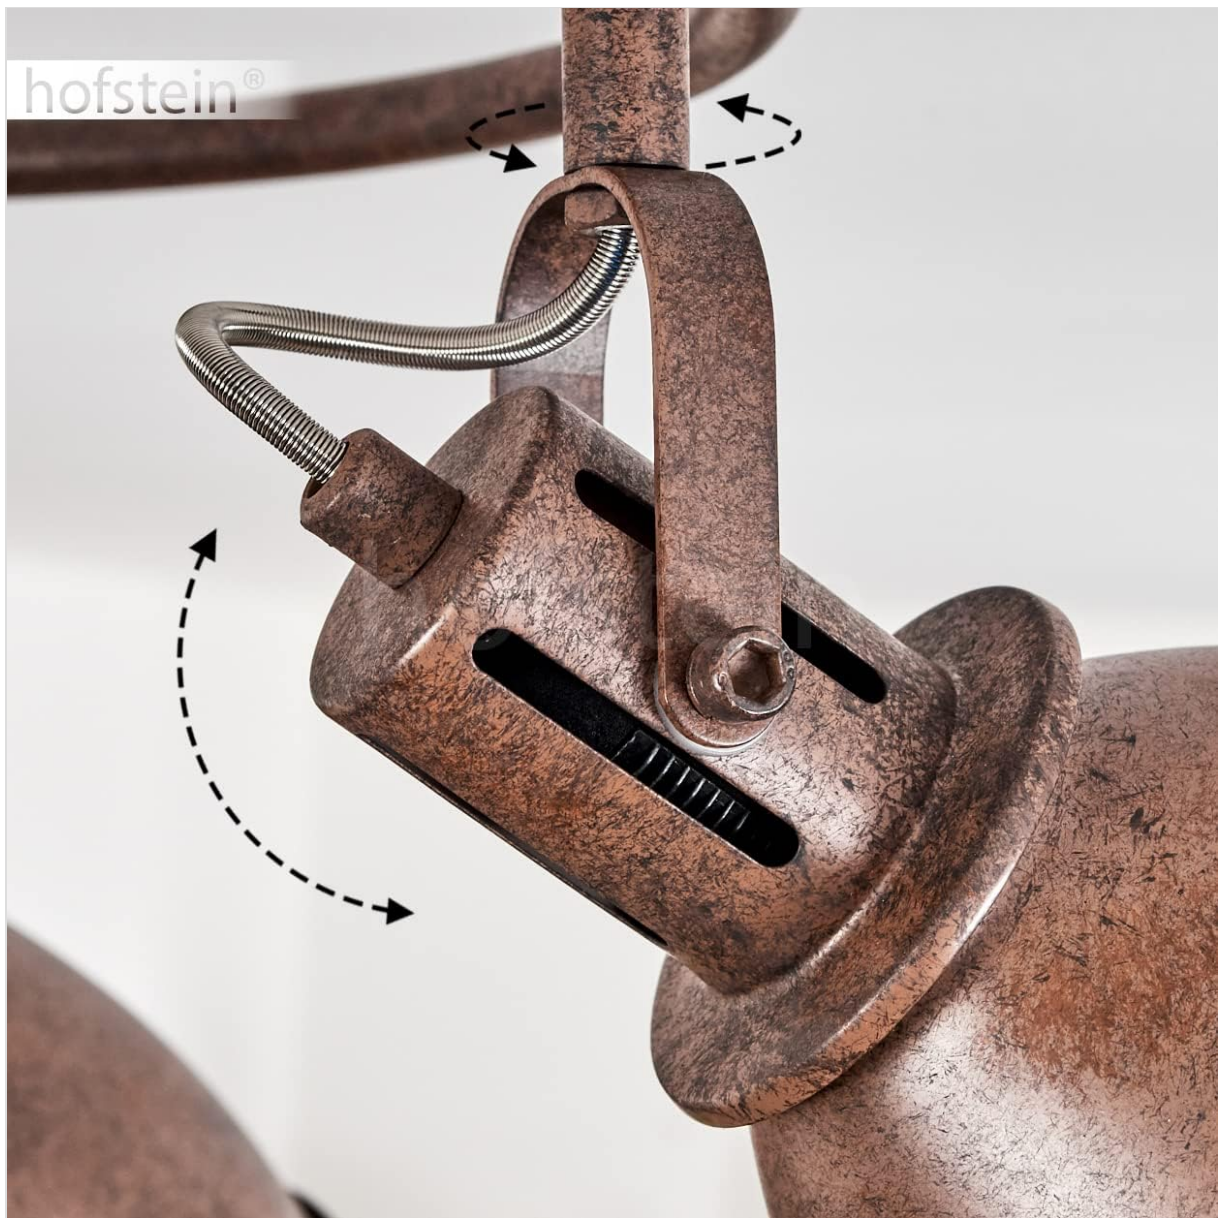


Image: Detail of the adjustable spotlight mechanism.

MAINTENANCE

- **Cleaning:** To clean the fixture, ensure the power is off. Wipe the surface with a soft, dry cloth. Do not use liquid or abrasive cleaners, as they may damage the finish.
- **Bulb Replacement:** Always disconnect power before replacing bulbs. Allow old bulbs to cool completely before removal. Screw in new E14 bulbs, ensuring they do not exceed 40W.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power supply Loose wiring Faulty bulb	Check circuit breaker and wall switch. Ensure all wire connections are secure (power off first). Replace bulb.

Problem	Possible Cause	Solution
Light flickers	Loose bulb Incorrect bulb type Unstable power supply	Tighten bulb. Ensure E14, non-dimmable bulbs are used. Consult an electrician if power supply is suspected.
Overheating	Bulb wattage too high	Replace with E14 bulbs not exceeding 40W.

SPECIFICATIONS

Brand	hofstein
Model Number	H3021545
ASIN	B075RDL5YP
Item Type	Ceiling Spotlight, Ceiling Light
Color	Brown (Rust finish)
Material	Metal
Dimensions (L x W x H)	28L x 33W x 28H cm
Number of Lights	3
Bulb Base	E14
Max Wattage per Bulb	40 Watt
Bulbs Included	No
Voltage	230 Volt (AC)
Luminous Flux (Max)	1560 Lumen (with compatible bulbs)
Protection Class	IP20
Insulation Class	I
Dimmable	No
Indoor/Outdoor Use	Indoor
Assembly Required	Minimal (for installation)

WARRANTY AND SUPPORT

This Hofstein product is covered by a manufacturer's warranty. For specific terms and conditions, please refer to your purchase documentation or contact Hofstein customer support directly. For technical assistance or inquiries, please visit the official Hofstein website or contact your retailer.

