Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Hyperkin /
- > Hyperkin SNES Controller Adapter M07232 User Manual

Hyperkin M07232

Hyperkin SNES Controller Adapter M07232 User Manual

Brand: Hyperkin

INTRODUCTION

The Hyperkin SNES Controller Adapter (Model M07232) allows users to connect their original SNES controllers to modern gaming systems. This adapter is designed for compatibility with the SNES Classic Edition, Wii U, and Wii consoles, enabling a classic gaming experience with your preferred SNES peripherals.



Image: The Hyperkin SNES Controller Adapter displayed alongside its retail packaging, showing the product's design and branding.

PRODUCT FEATURES

- **SNES Controller Compatibility:** Use your original SNES controllers, including joysticks, with supported systems.
- Multi-System Support: Compatible with SNES Classic Edition, Wii U, and Wii consoles.
- Compact Design: Features a 6-inch cable for flexible connection.

SETUP INSTRUCTIONS

1. Connect SNES Controller: Insert your SNES controller's plug into the SNES port on the Hyperkin

adapter. Ensure a secure connection.

2. Connect Adapter to Console/Wiimote:

- For SNES Classic Edition: Plug the adapter's output connector into one of the controller ports on your SNES Classic Edition console.
- For Wii/Wii U: Plug the adapter's output connector into the expansion port at the bottom of your Wii Remote (Wiimote).
- 3. Power On Console: Turn on your SNES Classic Edition, Wii, or Wii U console.
- 4. **Verify Connection:** The system should automatically detect the adapter and connected SNES controller. Test controller functionality in a game or system menu.



Image: The Hyperkin SNES Controller Adapter connected to an SNES Classic Edition console, with an SNES controller plugged into the adapter. This illustrates the typical setup for the SNES Classic Edition.

OPERATING INSTRUCTIONS

Once the Hyperkin SNES Controller Adapter is correctly connected and recognized by your console, your

SNES controller will function as the primary input device. The button mapping generally corresponds to the original SNES layout for games designed for it.

- SNES Classic Edition: The adapter allows direct use of SNES controllers for all compatible games.
- Wii/Wii U: When connected to a Wii Remote, the SNES controller acts as a Classic Controller or Classic Controller Pro, depending on the game's support. Ensure the game you are playing supports the Classic Controller input.

Note: Functionality with certain joysticks or third-party SNES controllers may vary.

TROUBLESHOOTING

Controller not responding:

- Ensure all connections are secure between the SNES controller, the adapter, and the console/Wiimote.
- Try disconnecting and reconnecting the adapter and controller.
- Verify that the console is powered on and functioning correctly.
- If using with Wii/Wii U, confirm the game supports Classic Controller input.
- Test with a different SNES controller if available to rule out controller issues.

Lag or input delay:

- While the adapter is designed for minimal latency, ensure your display settings (e.g., game mode on TV) are optimized for gaming.
- Ensure no other wireless interference is present if using a wireless Wii Remote.

Certain buttons not working:

- Some joysticks or third-party controllers may have limited functionality. Test with an official SNES controller if possible.
- Verify the game's control scheme and ensure the buttons are mapped as expected.

SPECIFICATIONS

Model Number:	M07232
Brand:	Hyperkin
Compatibility:	SNES Classic Edition, Wii U, Wii (via Wiimote)
Cable Length:	6 inches
Product Dimensions:	1.73 x 1.26 x 6.73 inches
Item Weight:	0.71 ounces

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Hyperkin website or contact their customer service directly. Keep your purchase receipt for warranty claims.

Online Resources: www.hyperkin.com

© 2024 Hyperkin. All rights reserved.

Related Documents - M07232



Hyperkin ProCube Controller Instruction Manual for Wii U

Official instruction manual for the Hyperkin ProCube Controller, detailing setup, syncing with Wii U consoles, and FCC compliance information. Learn how to connect your controller and understand its features.



SupaRetroN HD Instruction Manual: Setup and Usage Guide

Comprehensive instruction manual for the Hyperkin SupaRetroN HD, a premium retro gaming console for SNES and SFC. Learn how to set up, connect controllers, and play your favorite classic games.



RetroN 5 Instruction Manual - Hyperkin - Setup, Features, and Operation Guide

Get the most out of your Hyperkin RetroN 5 retro gaming console. This comprehensive manual covers setup, connecting controllers, system and video settings, firmware updates, and troubleshooting for playing classic games from multiple systems.



Hyperkin Controller Adapter for N64 Controller Quick Start Guide

A quick start guide for the Hyperkin Controller Adapter, which allows N64 controllers to be used with Nintendo Switch and PC/Mac systems. Includes setup instructions for both console and PC/Mac modes, and information on button remapping.





Hyperkin HDTV Cable for PSP 2000 & 3000: Quick Start Guide

Comprehensive quick start guide for the Hyperkin HDTV Cable, designed for PSP 2000 and 3000 models. Learn how to connect your handheld to an HDTV, use the zoom function, understand cable status lights, and find troubleshooting information. Includes EU compliance details.



PREMIUM WIRELESS BT CONTROLLER FOR N64*

Hyperkin Admiral Premium Wireless BT Controller for N64 Quick User Guide

This guide provides instructions for setting up and using the Hyperkin Admiral Premium Wireless BT Controller for N64, including syncing, connecting to devices, transferring save data, and charging.