

[Manuals.plus](#) /

› [Krüger&Matz](#) /

› Kruger&Matz GHOST 2.0 Soundbar User Manual

Krüger&Matz KM0543

Kruger&Matz GHOST 2.0 Soundbar

Model: KM0543 - User Manual

INTRODUCTION

Thank you for purchasing the Kruger&Matz GHOST 2.0 Soundbar. This manual provides essential information for the safe and efficient use of your device. Please read it carefully before use and retain it for future reference.

SAFETY INFORMATION

- Do not expose the device to rain, moisture, or extreme temperatures.
- Do not open the casing. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the soundbar.
- Use only the power adapter supplied with the device.
- Keep the soundbar away from heat sources and direct sunlight.

PACKAGE CONTENTS

Please check that all items are present in the package:

- Kruger&Matz GHOST 2.0 Soundbar (main unit, potentially separable)
- Remote Control
- Power Adapter
- User Manual
- Stands for split configuration (if applicable)



Image: Product packaging for the Krüger&Matz GHOST 2.0 Soundbar, showing the soundbar and its accessories.

PRODUCT OVERVIEW

Soundbar Controls



Image: Close-up view of the control buttons located on the soundbar unit, including Power, Source, Volume Up, and Volume Down.

- **Power Button:** Turns the soundbar on or off.
- **Source Button:** Cycles through input sources (Bluetooth, AUX, Optical).
- **Volume Up (+):** Increases the volume.
- **Volume Down (-):** Decreases the volume.

Rear Panel Connections



Image: Rear view of the soundbar, showing the input ports: Optical, AUX, and the AC power input. A label with model and power specifications is also visible.

- **OPTICAL Input:** For connecting to devices with an optical audio output.
- **AUX Input:** For connecting to devices with a 3.5mm audio output.
- **AC Power Input:** Connect the power adapter here.

Remote Control





Image: The remote control for the Krüger&Matz GHOST 2.0 Soundbar, featuring buttons for power, mute, source selection (AUX, Optical, BT), volume control, playback controls, and sound modes (News, Movie, Music).

The remote control provides full functionality for your soundbar, including power, volume, source selection, and sound modes.

SETUP

Physical Placement

The Krüger&Matz GHOST 2.0 Soundbar offers versatile placement options:

- **Horizontal Placement:** Place the soundbar horizontally directly under your television.
- **Wall Mounting:** The soundbar can be mounted on a wall to save space. (Mounting hardware not included, refer to a professional for installation).
- **Split Configuration:** The soundbar can be separated into two individual tower speakers and placed on stands on either side of your television.



Image: The Kruger&Matz GHOST 2.0 Soundbar configured as two separate vertical tower speakers, each on its base.



Image: A close-up view showing the connection point where the soundbar can be separated into two units, along with the integrated control panel on one section.

Connecting to Power

1. Connect the power adapter to the AC Power Input port on the rear of the soundbar.
2. Plug the power adapter into a suitable wall outlet.

Audio Connections

Choose one of the following methods to connect your audio source:

Bluetooth Connection

1. Ensure the soundbar is powered on.
2. Press the **Source** button on the soundbar or the **BT** button on the remote control to select Bluetooth mode. The indicator light will flash.
3. On your device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
4. Select "Kruger&Matz GHOST 2.0" from the list.
5. Once paired, the indicator light will stop flashing, and you can play audio wirelessly.

AUX (3.5mm Jack) Connection

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input on the soundbar.
2. Connect the other end of the cable to the audio output of your device (e.g., TV, MP3 player).
3. Press the **Source** button on the soundbar or the **AUX** button on the remote control to select AUX mode.

Optical Connection

1. Connect one end of an optical audio cable (not included) to the OPTICAL input on the soundbar.
2. Connect the other end of the cable to the optical audio output of your television or other audio source.
3. Press the **Source** button on the soundbar or the **OPTICAL** button on the remote control to select Optical mode.

OPERATING

Power On/Off

Press the **Power** button on the soundbar or the remote control to turn the unit on or off.

Selecting Input Source

Press the **Source** button on the soundbar repeatedly or use the dedicated **AUX**, **OPTICAL**, or **BT** buttons on the remote control to switch between input sources.

Volume Control

Press the **VOL+** button to increase the volume and the **VOL-** button to decrease the volume, either on the soundbar or the remote control.

Mute Function

Press the **MUTE** button on the remote control to temporarily silence the sound. Press it again to restore the volume.

Sound Modes (Remote Control Only)

Use the dedicated buttons on the remote control to select different sound equalization modes:

- **NEWS:** Optimizes audio for clear dialogue.
- **MOVIE:** Enhances audio for cinematic experiences.
- **MUSIC:** Provides a balanced sound profile for music playback.

Bluetooth Playback Controls (Remote Control Only)

When in Bluetooth mode, use the following buttons on the remote:

- **Play/Pause (▶▶/PAIR):** Plays or pauses the current track. Long press to enter Bluetooth pairing mode.
- **Previous Track (◀◀):** Skips to the beginning of the current track or the previous track.
- **Next Track (▶▶):** Skips to the next track.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Ensure power cable is securely connected. Check power outlet with another device.
No sound	Incorrect input source selected; Volume too low; Audio cable not connected properly	Select the correct input source. Increase volume. Check audio cable connections. Ensure TV/source volume is not muted or too low.
Bluetooth pairing fails	Soundbar not in pairing mode; Device too far; Interference	Ensure soundbar is in Bluetooth pairing mode (flashing indicator). Move device closer to soundbar. Avoid strong electromagnetic interference.

Problem	Possible Cause	Solution
Remote control not working	Batteries depleted; Obstruction between remote and soundbar	Replace remote control batteries. Ensure no objects block the line of sight to the soundbar's sensor.

SPECIFICATIONS

- **Model:** KM0543
- **Audio Channels:** 2.0
- **Drivers:** 2 x 2-inch full-range drivers
- **Output Power:** 2 x 25W
- **Connectivity:** Bluetooth, AUX (3.5mm Jack), Optical
- **Dimensions (combined):** Approximately 80 cm (length) x 9.4 cm (depth) x 6.2 cm (height)
- **Weight:** Approximately 1.84 kg
- **Power Supply:** 220-240V ~ 50/60Hz, max 1.5A
- **Power Consumption:** 30W

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact your local Kruger&Matz dealer or customer service. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B075S11ZB4>

More documents and user manuals: <https://manuals.plus/>