

## Utilitech FZ-8A

# Utilitech 28-inch 3-Speed Oscillation Tower Fan Instruction Manual

Model: FZ-8A

## INTRODUCTION

---

Thank you for purchasing the Utilitech 28-inch 3-Speed Oscillation Tower Fan. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.



Image: The Utilitech 28-inch 3-Speed Oscillation Tower Fan, featuring a sleek black design and a round base, shown standing upright.

# IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using this fan.
- Do not operate any fan with a damaged cord or plug.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as it may cause an electric shock or fire, or damage the fan.
- Do not use outdoors. This fan is designed for indoor use only.
- Unplug the fan from the outlet when not in use or when moving from one location to another.

# SETUP AND ASSEMBLY

Your Utilitech Tower Fan comes almost fully assembled, requiring minimal setup.

1. **Unpack:** Carefully remove the fan from its packaging. Ensure all components are present: the main fan unit and the base.
2. **Attach Base:** Align the base with the bottom of the fan unit. Secure the base using the provided screws (if any, typically pre-attached or integrated).
3. **Placement:** Place the fan on a firm, level surface. Ensure it is away from curtains or other objects that could be drawn into the fan.
4. **Power Connection:** Plug the fan into a standard household electrical outlet.



Image: A hand pointing to the stable, low-profile base of the Utilitech tower fan, highlighting its compact design suitable for various room settings.

# OPERATING INSTRUCTIONS

The Utilitech Tower Fan features simple controls located on the top of the unit.

## Controls Overview:

- **Speed Dial:** A rotary dial with settings 0 (Off), 1 (Low), 2 (Medium), and 3 (High).
- **Oscillation Button:** A push-button to activate or deactivate the oscillation feature.

## Fan Speed Adjustment:

1. To turn the fan **ON**, rotate the speed dial clockwise from '0' to your desired speed setting (1, 2, or 3).

2. To increase the fan speed, rotate the dial to a higher number.
3. To decrease the fan speed, rotate the dial to a lower number.
4. To turn the fan **OFF**, rotate the dial counter-clockwise to '0'.



Image: A detailed view of the fan's top control panel, illustrating the rotary dial for speed selection (0, 1, 2, 3) and the separate push-button for oscillation control.

### Oscillation Feature:

1. To activate oscillation, press the oscillation button located on the top of the fan. The fan head will begin to rotate from side to side.
2. To stop oscillation and direct airflow in a fixed position, press the oscillation button again. The button will pop out, and the fan will stop rotating.

## MAINTENANCE AND CARE

---

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Dust Removal:** Use a vacuum cleaner with a brush attachment or compressed air to remove dust from the air intake and exhaust grilles.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original box to protect it from dust.

## TROUBLESHOOTING GUIDE

---

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Ensure the fan is securely plugged into a working electrical outlet. Check the circuit breaker.
Weak airflow.	Dust accumulation on grilles.	Unplug the fan and clean the air intake and exhaust grilles as described in the Maintenance section.
Fan makes unusual noise.	Obstruction or loose parts.	Unplug the fan and inspect for any obstructions. Ensure the base is securely attached. If noise persists, contact customer support.
Oscillation not working.	Oscillation button not fully engaged.	Press the oscillation button firmly until it clicks into place.

## PRODUCT SPECIFICATIONS

**Brand:** Utilitech

**Model Name:** FZ-8A

**Electric Fan Design:** Floor Fan

**Color:** Black

**Special Feature:** Oscillating

**Number of Power Levels:** 3

**Control Method:** Rotary Dial, Push Button

**Indoor/Outdoor Usage:** Outdoor (Note: Product description states "Outdoor", but general fan safety usually implies indoor use unless specified for outdoor environments. User should verify for specific outdoor ratings if intended for prolonged outdoor exposure.)

**Included Components:** Cord

**Blade Material:** Plastic

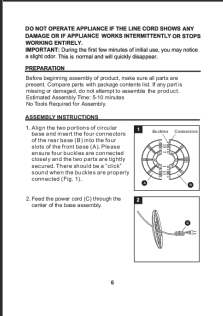
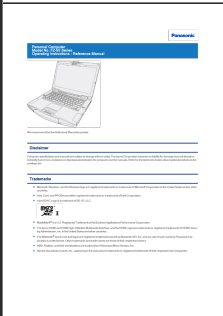
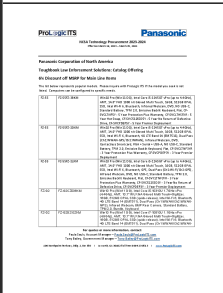
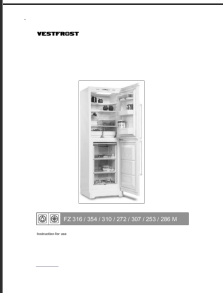
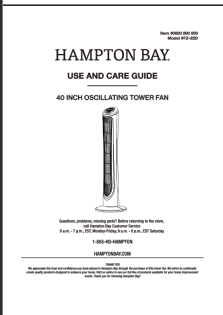
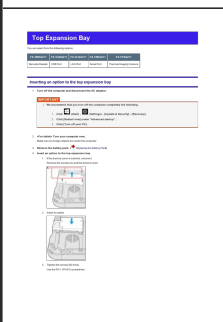
**Power Connector Type:** Standard Household Plug (Type A or Type B)

## WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Utilitech website. You may also contact customer service at the number provided on your product packaging.

For additional assistance, please visit the [product page on Amazon](#).

Related Documents - FZ-8A

 <p>DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE MOVES INTENSIVELY OR STOPS MOVING ENTIRELY. IMPORTANT: During the first few minutes of initial use, you may notice a slight odor. This is normal and will quickly dissipate.</p> <p><b>PREPARATION</b></p> <p>Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any parts missing or damaged, do not attempt to assemble the product. For Troubleshooting or Assembly.</p> <p><b>ASSEMBLY INSTRUCTIONS</b></p> <p>1. Align the two portions of circular base and insert the four connectors of the rear base (B) into the four slots of the front base (A). Press down on the four corners of the connectors until the two parts are tightly secured. There should be a "click" sound when the two parts are properly connected (Fig. 1).</p> <p>2. Place the power cord (C) through the center of the base assembly.</p>	<p><a href="#">Utilitech FZ-8A Tower Fan Assembly and Operating Instructions</a></p> <p>This document provides assembly and operating instructions for the Utilitech FZ-8A Tower Fan. It includes preparation steps, detailed assembly instructions with diagrams described textually, and operating instructions for controlling fan speed.</p>
 <p><b>Panasonic</b></p> <p><b>TOUGHBOOK 55 Series</b></p> <p><b>Operating Instructions and Reference Manual</b></p> <p><b>Disclaimer</b></p> <p><b>Trademarks</b></p>	<p><a href="#">Panasonic TOUGHBOOK 55 Series: Operating Instructions and Reference Manual</a></p> <p>Comprehensive guide for the Panasonic TOUGHBOOK 55 Series, covering operating instructions, system features, software licenses, and procedures for attaching/detaching components and expanding functionality with various bay options.</p>
 <p><b>Panasonic</b></p> <p><b>TOUGHBOOK</b></p> <p><b>Law Enforcement Catalog and Service Guide</b></p> <p><b>Product Comparison of Tough Series</b></p> <p><b>For efficient use of information, please refer to the following:</b></p> <p><b>For detailed information on the Tough Series:</b></p> <p><b>For detailed information on the Tough Series:</b></p>	<p><a href="#">Panasonic TOUGHBOOK Law Enforcement Catalog and Service Guide</a></p> <p>Catalog of Panasonic TOUGHBOOK rugged laptops and accessories for law enforcement, including detailed specifications, expansion options, and service/warranty plans. Features models like FZ-55, FZ-G2, FZ-40, and CF-33.</p>
 <p><b>VESTFROST</b></p> <p><b>FZ 316 / 354 / 310 / 272 / 307 / 253 / 286 M</b></p>	<p><a href="#">Vestfrost FZ Series Fridge Freezer User Manual and Instructions</a></p> <p>Comprehensive user manual for Vestfrost FZ 316, FZ 354, FZ 310, FZ 272, FZ 307, FZ 253, FZ 286 M fridge freezers. Covers installation, operation, maintenance, troubleshooting, and warranty.</p>
 <p><b>HAMPTON BAY</b></p> <p><b>USE AND CARE GUIDE</b></p> <p><b>40 INCH OSCILLATING TOWER FAN</b></p> <p><b>FZ-25D</b></p>	<p><a href="#">Hampton Bay 40-Inch Oscillating Tower Fan (FZ-25D) Use and Care Guide</a></p> <p>A comprehensive use and care guide for the Hampton Bay 40-Inch Oscillating Tower Fan, model FZ-25D. Includes safety information, assembly instructions, operating instructions, care and maintenance tips, and warranty details.</p>
 <p><b>Panasonic</b></p> <p><b>Toughbook G2 Mk1</b></p> <p><b>Top Expansion Bay</b></p> <p><b>Installation Guide</b></p> <p><b>Hardware and Software</b></p> <p><b>Installation</b></p>	<p><a href="#">Panasonic Toughbook G2 Mk1 Top Expansion Bay Installation Guide</a></p> <p>Step-by-step instructions for installing various expansion options (Barcode Reader, USB Port, LAN Port, Serial Port, Thermal Imaging Camera) into the top expansion bay of the Panasonic Toughbook G2 Mk1.</p>

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**  
**IMPORTANT:** During the first few minutes of initial use, you may notice a slight odor. This is normal and will quickly disappear.



**PREPARATION**

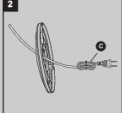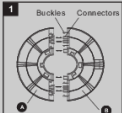Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 5-10 minutes  
No Tools Required for Assembly.

**ASSEMBLY INSTRUCTIONS**

1. Align the two portions of circular base and insert the four connectors of the rear base (B) into the four slots of the front base (A). Please ensure four buckles are connected closely and the two parts are tightly secured. There should be a "click" sound when the buckles are properly connected (Fig. 1).

2. Feed the power cord (C) through the center of the base assembly.



[Utilitech FZ-8A Tower Fan Assembly and Operating Instructions](#)

This document provides assembly and operating instructions for the Utilitech FZ-8A Tower Fan. It includes preparation steps, detailed assembly instructions with diagrams described textually, and operating instructions for controlling fan speed.

lang:en score:18 filesize: 488.99 K page\_count: 2 document date: 2019-09-24




3. Align the groove and arrow at the bottom of the fan housing (D) to the arrow on the base assembly (which is near the central hole edge of the base assembly) (Fig. 3). Push the base assembly into the fan body until a "click" is heard. Please make sure the three buckles at the bottom of the fan body connected closely to the base and all connections between the fan body and the base are tight and secure (Fig. 4).

4. Locate the power cord holding bracket at the bottom of the base assembly. Gently pull any slack out of the power cord, place the power cord securely in the holding bracket and secure the power cord bracket over the power cord. Then thread the power cord through the "U" locating notch on the edge of the base assembly (Fig. 5). Stand the fan in an upright position.

**Note:** Do not operate the tower fan unless it is in its proper, upright position.

**OPERATING INSTRUCTIONS**

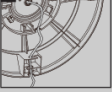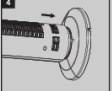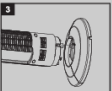**Controlling the Fan Speed**  
Once fan is fully assembled (see Assembly Instructions section), place fan on a dry, level surface. Plug it into a 120V AC electrical outlet. To operate, turn the rotary knob switch to the appropriate speed control option. There are four available settings: 0=Off, 3=High, 2=Medium, 1=Low.



[\[pdf\] User Manual Instructions](#)

FZ 8A      LOWE S pmsjy Utilitech Use and Care Manual 28 in 3 Speed Indoor Black Plastic Injection Color Oscillating Tower Fan 6922097903191 48559191 lowes productdocuments 6f8e4be8 6347 4bf5 8d85 82df8bd1eaf7 |||

3. Align the groove and arrow at the bottom of the fan housing D to the arrow on the base assembly which is near the central hole edge of the base assembly Fig. 3 . Push the base assembly into the fan body until a click is heard. Please make sure the three buckles at the bottom of the fan bod...

lang:en score:17 filesize: 446.27 K page\_count: 2 document date: 2019-09-24