

[Manuals.plus](#) /

› [ENJOY-UNIQUE](#) /

› ENJOY-UNIQUE EJ842 Wireless Retro Telephone Handset User Manual

ENJOY-UNIQUE EJ842

ENJOY-UNIQUE EJ842 Wireless Retro Telephone Handset User Manual

Model: EJ842

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your ENJOY-UNIQUE EJ842 Wireless Retro Telephone Handset. This device is designed to connect wirelessly to your mobile phone, tablet, or laptop via Bluetooth, offering a comfortable and clear communication experience with its HD speaker and microphone.



Image: The ENJOY-UNIQUE EJ842 Wireless Retro Telephone Handset in black, positioned next to a modern smartphone, illustrating its use as an external receiver.

PACKAGE CONTENTS

- 1 x ENJOY-UNIQUE EJ842 Wireless Retro Telephone Handset
- 1 x USB Charging Cable
- 1 x User Manual

SETUP

1. Charging the Handset

Before first use, fully charge the handset. Connect the provided USB charging cable to the charging interface on the handset and plug the other end into a compatible USB power source. The indicator light will illuminate during charging. A full charge typically takes approximately 4 hours and provides up to 12 hours of talk time.



Image: A detailed view of the handset, highlighting the volume control buttons and the USB charging port located at the base.

2. Bluetooth Pairing

1. Ensure the handset is charged.
2. Long press the main button on the handset to power it on. The indicator light will flash red and blue, indicating it is in pairing mode.
3. On your mobile phone, tablet, or laptop, navigate to the Bluetooth settings.
4. Enable Bluetooth and search for available devices.
5. Select "EJ842" or a similar device name from the list to connect.
6. Once successfully paired, the indicator light on the handset will turn solid blue or stop flashing, depending on the model.

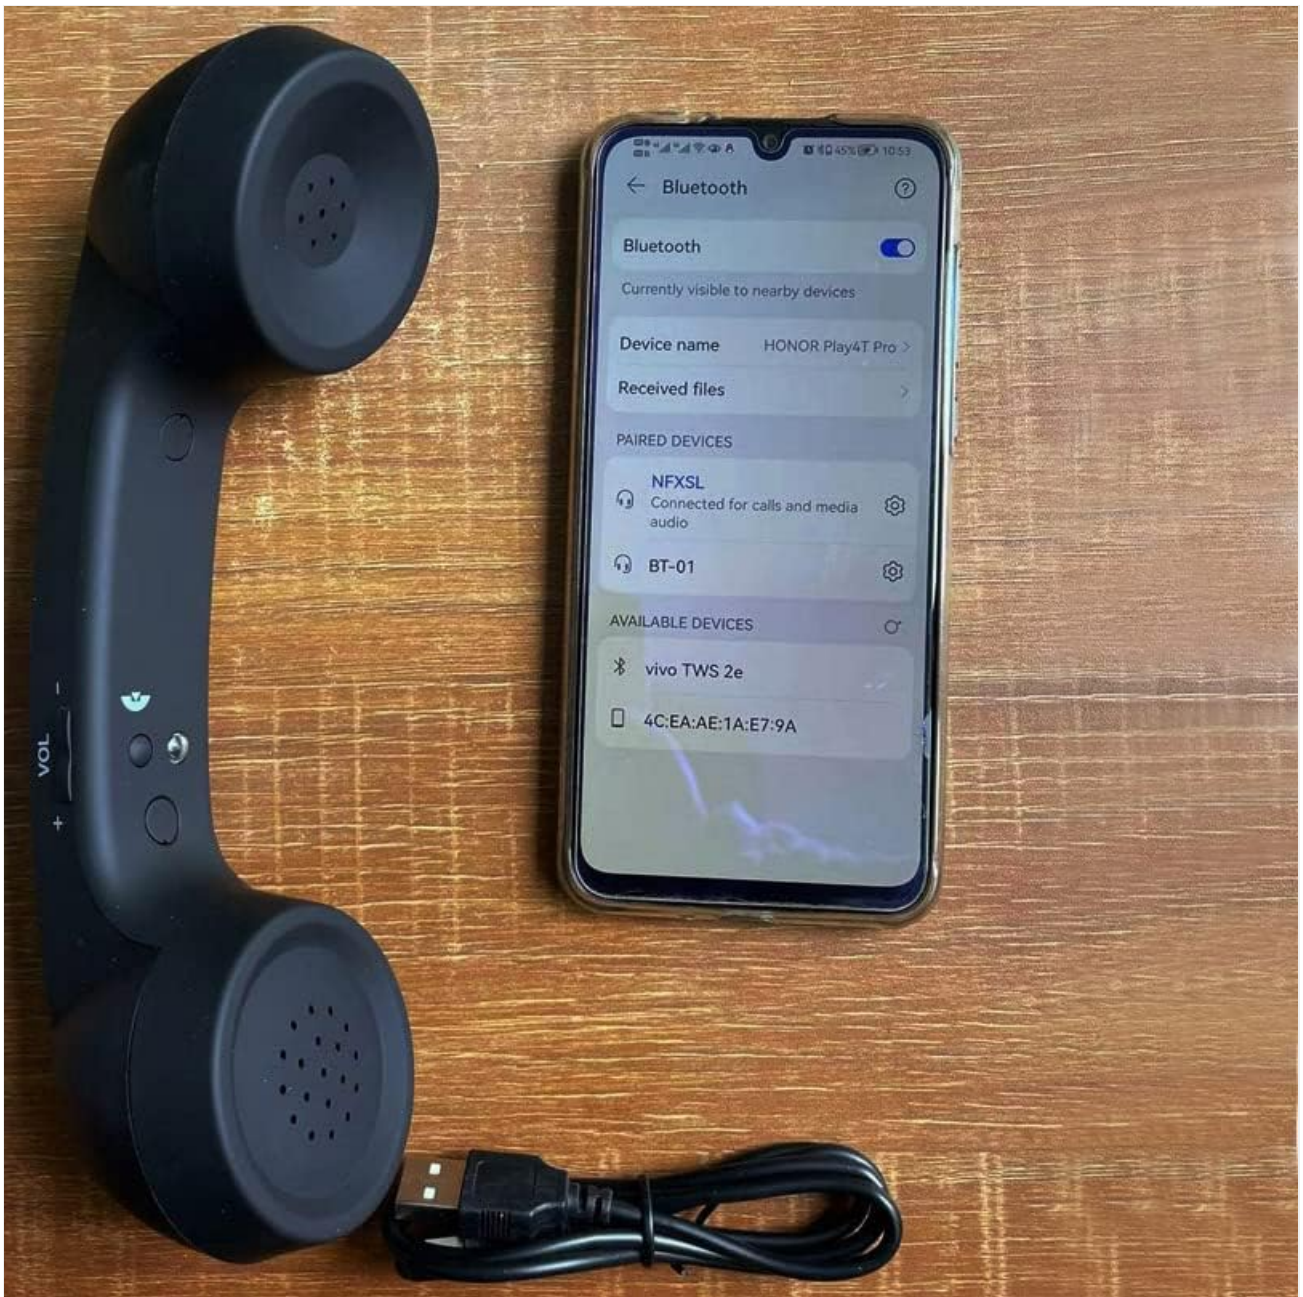


Image: The black retro handset positioned beside a smartphone displaying its Bluetooth settings menu, showing available devices for connection.

The handset has a Bluetooth range of up to 10 meters (33 feet).

Your browser does not support the video tag.

Video: Demonstrates the Bluetooth pairing process and basic call functions of the Wireless Retro Telephone Handset.

OPERATING INSTRUCTIONS

Making and Receiving Calls

- **To Answer a Call:** When your paired device receives a call, press the "Pick up / hang up" button on the handset.
- **To End a Call:** During a call, press the "Pick up / hang up" button on the handset to disconnect.
- **To Make a Call:** Initiate the call from your paired mobile phone, tablet, or laptop. The audio will automatically route to the handset once connected.

When long press to turn on the handset
the indicator light will flash red and blue



Image: A close-up of the handset's side, indicating the location of the answer/hang up buttons, the indicator light, and the built-in microphone.

Volume Control

Use the "Voice +/-" buttons on the side of the handset to adjust the call volume during a conversation.

Device Compatibility

The ENJOY-UNIQUE EJ842 handset is compatible with most Bluetooth-enabled smartphones, tablets, and laptops.



Image: The black retro handset resting on a tablet device, demonstrating its compatibility with various smart devices.

MAINTENANCE

- **Cleaning:** Wipe the handset with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the handset in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The handset is water resistant. However, avoid submerging it in water or exposing it to heavy rain to prevent damage.

TROUBLESHOOTING

Problem	Solution
Handset does not power on.	Ensure the handset is fully charged. Connect it to a power source using the provided USB cable.
Cannot pair with a device.	Ensure the handset is in pairing mode (indicator light flashing red and blue). Verify Bluetooth is enabled on your device. Make sure the handset is within 10 meters of your device. Try restarting both the handset and your device.
No audio during calls.	Check the volume level on both the handset and your paired device. Ensure the handset is successfully connected via Bluetooth. Verify that the audio output on your device is set to the Bluetooth handset.

SPECIFICATIONS

Feature	Detail
Model Number	EJ842
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	3.0
Bluetooth Range	Up to 10 meters (33 feet)

Feature	Detail
Charging Time	Approximately 4 hours
Battery Life (Talk Time)	Up to 12 hours
Control Type	Call Control, Push Button
Material	Plastic
Included Components	Handset, USB Charging Cable
Item Weight	200 Grams (7.1 ounces)
Product Dimensions	0.01 x 2.36 x 1.97 inches
Water Resistance Level	Water Resistant

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official ENJOY-UNIQUE website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

