

Jocel JMO011404

JOCEL JMO011404 Microwave Oven User Manual

Model: JMO011404 | Brand: Jocel

1. INTRODUCTION

Thank you for choosing the JOCEL JMO011404 Microwave Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before use and keep them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils suitable for microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Do not overcook food.

- Do not use the oven for storage purposes. Do not leave paper products, cooking utensils, or food in the oven when not in use.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens as they may explode, even after microwave heating has ended.
- Always ensure proper ventilation around the appliance.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your JOCEL JMO011404 Microwave Oven.



Figure 1: Front view of the JOCEL JMO011404 Microwave Oven, showing the door, control panel with two rotary knobs, and the JOCEL logo.

Components:

- **Oven Door:** Features a viewing window and a handle for opening.
- **Control Panel:** Located on the right side, containing two rotary knobs for setting time and function/power.
- **Turntable:** A glass tray that rotates to ensure even cooking. This rests on a rotating ring.
- **Oven Cavity:** The interior space where food is placed.
- **Ventilation Openings:** Located on the sides and back to ensure proper airflow.

Control Panel:

1. **Timer Knob:** Used to set the cooking time, up to 30 minutes.
2. **Function/Power Knob:** Used to select the desired cooking function (e.g., Defrost, Microwave Power Levels 1-5) or Grill modes.

4. SETUP

1. **Unpacking:** Carefully remove the microwave oven and all packing materials. Check for any damage. Do not remove the light brown mica sheet that is attached to the oven cavity to protect the magnetron.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight (approximately 12 kg). Ensure there is adequate ventilation space: at least 20 cm above, 10 cm at the rear, and 5 cm on each side. Do not block any ventilation openings.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet (230V AC). Ensure the outlet is easily accessible.
4. **Turntable Assembly:** Place the rotating ring in the center of the oven cavity. Then, place the glass turntable tray securely on top of the rotating ring.

5. OPERATING INSTRUCTIONS

This section details how to use your microwave oven for various cooking tasks.

5.1. Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable. Close the oven door securely.
2. Turn the **Function/Power Knob** to select the desired microwave power level (P1 to P5, with P5 being the highest at 800W).
3. Turn the **Timer Knob** to set the desired cooking time. The oven will start automatically.
4. When the set time expires, the oven will emit an audible signal and stop cooking.



Figure 2: Interior view of the microwave oven, showing a dish with food on the turntable during operation.

5.2. Defrost Function

The defrost function is ideal for thawing frozen foods.

1. Place the frozen food on the turntable.
2. Turn the **Function/Power Knob** to the "Defrost" setting.

3. Turn the **Timer Knob** to set the desired defrosting time. The time required will vary based on the type and weight of the food.
4. Midway through defrosting, it is recommended to turn the food over for more even thawing.

5.3. Grill and Combination Grill Functions

Your microwave oven includes a grill function and three combination grill modes for versatile cooking.

- **Grill Function:** Use for browning and crisping food. Place food on the grill rack (if included, otherwise directly on turntable in a heat-resistant dish). Select the "Grill" setting with the Function/Power Knob and set the time.
- **Combination Grill Modes (C1, C2, C3):** These modes combine microwave energy with grill heat for faster cooking and browning. Refer to a recipe guide for specific food types and recommended combination settings.

Note: When using grill or combination functions, ensure that all utensils and dishes are heat-resistant and suitable for grilling.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Before Cleaning:** Always unplug the oven from the power outlet before cleaning.
- **Oven Interior:** Wipe the inside of the oven with a damp cloth after each use. For stubborn food splatters, boil a cup of water with a few slices of lemon inside the oven for 5-10 minutes to loosen residue, then wipe clean. Do not use abrasive cleaners or harsh detergents.
- **Oven Exterior:** Clean the exterior surface with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Door and Door Seals:** Clean the door, door seals, and adjacent parts carefully with a damp cloth to remove any spills or splatters.
- **Turntable and Rotating Ring:** The glass turntable and rotating ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.

7. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Timer not set.	Ensure power cord is securely plugged in; Close the door firmly; Set the timer knob.
Food is not heating.	Power level set too low; Cooking time too short; Incorrect function selected.	Increase power level or cooking time; Ensure microwave or combination function is selected.

Problem	Possible Cause	Solution
Turntable is noisy or not rotating.	Turntable or rotating ring not positioned correctly; Debris under turntable.	Re-position the turntable and rotating ring; Clean the area beneath the turntable.
Smoke or sparks inside the oven.	Metal objects in the oven; Food overcooked; Food splatters.	Immediately turn off and unplug the oven. Remove any metal objects. Clean the interior thoroughly.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the JOCEL JMO011404 Microwave Oven.



Figure 3: Dimensions of the JOCEL JMO011404 Microwave Oven, illustrating its width, height, and depth.

Brand	Jocel
Model Number	JMO011404
Color	White
Capacity	20 Liters
Microwave Power	800 Watts
Voltage	230 Volts AC
Material	Steel

Product Dimensions (Width x Height x Depth)	47.8 x 37.8 x 28.8 cm
Item Weight	12 kg
Special Functions	Defrost, Grill, Combination Grill Modes
Control Type	Knob
Included Components	Rotating ring
Installation Type	Freestanding
Energy Efficiency Class	A
Automatic Shut-off	Yes

Note: Product specifications are subject to change without prior notice for product improvement.

9. WARRANTY AND SUPPORT

Joel products are manufactured to high-quality standards. For information regarding warranty coverage, service, or technical support, please refer to the warranty card included with your purchase or visit the official Joel website. Keep your proof of purchase for any warranty claims.

Related Documents - JMO011404

 JOCEL MICROONDAS DE ENCASTRE MICROONDAS ENCASTRABLE BUILT IN MICROWAVE JME009227 Por favor, lea atentamente as instruções deste Manual. Les est livré avec votre appareil de micro-ondes. Read the instructions Manual carefully.	Manual de Instruções JOCEL JME009227 - Forno Micro-ondas de Encastre Guia completo para o forno micro-ondas de encastre JOCEL JME009227, cobrindo instalação, operação, segurança, limpeza e manutenção. Inclui instruções em Português, Espanhol e Inglês.
 JOCEL • MICROONDAS • MICROWAVE JMO001399 MANUAL DE INSTRUÇÕES MANUAL DE INSTRUCCIONES INSTRUCTION MANUAL	JOCEL JMO001399 Microwave Instruction Manual Comprehensive user manual for the JOCEL JMO001399 microwave, covering safety precautions, installation, operation, cleaning, maintenance, cooking tips, warranty, and technical specifications.

 • MICROONDAS • MICROWAVE  JMO011145 MANUAL DE INSTRUÇÕES MANUAL DE INSTRUCCIONES INSTRUCTION MANUAL	Manual de Instruções JOCEL JMO011145 - Micro-ondas Este manual de instruções detalha a instalação, operação, segurança, limpeza e manutenção do micro-ondas JOCEL JMO011145. Inclui dicas para otimizar o desempenho e garantir o uso seguro do aparelho doméstico.
 CAMPANA EXTRACTORA COOKER HOOD EXHAUSTOR  JE901-007582 JE601-007544 MANUAL DE INSTRUCCIONES MANUAL DE INSTRUÇÕES INSTRUCTION MANUAL	Manual de Instruções Jocel JE901-007582 e JE601-007544 - Exaustor de Cozinha Guia completo de instruções para o exaustor de cozinha Jocel, modelos JE901-007582 e JE601-007544. Inclui informações de segurança, instalação, operação e manutenção.
 COMBINADO COMBI JC326PV  MANUAL DE INSTRUCCIONES MANUAL DE INSTRUÇÕES INSTRUCTION MANUAL	JOCEL JC326PV Combinado Combi: Manual de Instrucciones Manual de instrucciones completo para el frigorífico JOCEL JC326PV Combinado Combi, cubriendo instalación, uso diario, seguridad, mantenimiento y solución de problemas.
 FRIGORÍFICO FRIGORIFICO REFRIGERATOR JF211  MANUAL DE INSTRUCCIONES MANUAL DE INSTRUÇÕES INSTRUCTION MANUAL	Manual de Instruções JOCEL JF211: Guia Essencial Explore o manual completo do frigorífico JOCEL JF211. Aprenda sobre instalação, funções, armazenamento de alimentos, segurança e manutenção para otimizar o uso do seu eletrodoméstico.



[\[pdf\]](#) User Manual Owner's Manual

OWNER S MANUAL Paloma Acedo Rico Gonzalez Manual JOCEL Electrodomésticos jocel pt 2020 06 ||| MICROONDAS MICROWAVE **JMO011404** MANUAL DE INSTRUES MANUAL DE INSTRUCCIONES INSTRUCTION MANUAL PORTUGUS INSTALAO 1. Retire todos os vestgios do material da embalagem. Se estiver uma pelcula de segurana colocada no forno, retire-a antes de o utilizar. Confira, com cuidado, se existem vestgios de da...

lang:pt **score:37** filesize: 1.18 M page_count: 34 document date: 2017-09-01



[\[pdf\]](#)

MICROONDAS JMO011404 JOCEL Electrodomésticos jocel pt 2020 06 |||

MICROONDAS **JMO011404** EAN: 5601774011404 ESPECIFICAES: Dimenses exteriores do forno AxLxP 256.5 x 451 x 341 mm Dimenses interiores do forno AxLxP 192 x 300 x 303 mm Dimenses da caixa AxLxP 288 x 478 x 358 mm Indicador sonoro de fim de operao Peso liquido/bruto: 10.3 /11.5 kg Capacidade do forno ...

lang:es **score:32** filesize: 187.33 K page_count: 2 document date: 2022-01-19



[\[pdf\]](#)

MICROONDAS JMO011404 JOCEL Electrodomésticos jocel pt 2020 06 |||

MICROONDAS **JMO011404** EAN: 5601774011404 ESPECIFICACIONES: Dimensiones exteriores horno AxAxP 256.5 x 451 x 341 mm Dimensiones interiores horno AxAxP 192 x 300 x 303 mm Dimensiones embalaje AxAxP 288 x 478 x 358 mm Indicador sonoro de fin de operacin Consumo 230v-240v 50hz - 1150W Peso ne...

lang:it **score:31** filesize: 163.75 K page_count: 1 document date: 2023-03-22

INSTRUÇÕES DE SEGURANÇA

Devem ser seguidas, sempre, as seguintes precauções básicas quando se utilizam equipamentos elétricos

1. Leia todas as instruções antes de ser utilizado.
2. Certifique-se que a tensão da sua área de residência corresponde à que se indica na etiqueta de classificação do equipamento e que a tomada de parede está, corretamente, ligada à terra.
3. Para reduzir o risco de incêndio na cavidade do forno:
 - a. Não cozinhe a comida em excesso.
 - b. Retire os brócos de carne dos sacos de plástico ou de papel antes de os colocar dentro do forno.
 - c. Não aqueça óleo ou gordura, uma vez que a temperatura do óleo não pode ser controlada.
 - d. Depois de usar, limpe a tampa da grelha de vidro com um pano húmido e, depois, com um pano seco, a fim de remover quaisquer salpicos ou gordura. A gordura acumulada pode sobreaquecer e começar a produzir fumo ou incendiar-se.
 - e. Se os alimentos que se encontram no forno inflamam fumo ou se se incendiar, mantenha a porta do forno fechada, desligue o forno e desligue da rede elétrica.
 - f. Sempre que aquecer alimentos dentro de recipientes de plástico ou de papel, mantenha-se alerta, devido à possibilidade de incêndio.
4. A fim de reduzir o risco de explosão e lesura instantâneas:
 - a. **ALERTA:** os líquidos e outros alimentos não devem ser aquecidos em recipientes selados, uma vez que correm o risco de explosão. Os biberões com tampa de rosca ou tampa são considerados recipientes selados.
 - b. Utilize recipientes de boca larga para cozinhar líquidos, não devendo os líquidos cozinhados ser retirados, imediatamente. Deverá passar alguns minutos antes de os remover, a fim de evitar possíveis riscos causados por fumaça retardada escape de líquidos.
 - c. As batedas, colheres e colheres devem ser desenganchadas ou puxadas antes de cozinhar. Os ovos com casca, cozidos, não devem ser aquecidos dentro do microondas, uma vez que podem explodir, mesmo depois de formado o equipamento do mesmo.
 - d. O conteúdo dos biberões e dos frascos de comida para bebés deve ser, sempre, morno ou agitado e a temperatura deve ser controlada, antes do consumo, a fim de prevenir queimaduras.
5. Se o cabo de alimentação estiver danificado, o mesmo deve ser substituído pelo responsável Técnica, ou um técnico qualificado, a fim de evitar o risco de choque elétrico.
6. Depois de formado o conteúdo, o recipiente está muito quente. Utilize luvas para retirar os alimentos e para evitar queimaduras de vapor e afetar o vapor da cara e das mãos.
7. Lentamente, levante a extremidade mais afastada do tempo dos pratos e a embalagem de plástico do microondas e abra, com cuidado, os sacos de plástico de cozinha longe da cara.
8. Para evitar que o prato grilado se queime:
 - a. Deixe que o prato grilado arrefeça, antes de o limpar.
 - b. Não coloque alimentos nem utensílios quentes no prato grilado frito.
 - c. Não coloque alimentos nem utensílios congelados no prato grilado quente.
9. Certifique-se que os recipientes não tocam as paredes interiores da rede e o conteúdo.
10. Utilize, apenas, recipientes adequados para uso em fornos microondas.
11. Não guarde alimentos nem outros objetos dentro do forno.
12. Não utilize o microondas com quaisquer líquidos ou alimentos dentro do mesmo. Isto poderia provocar danos no forno.
13. Quando o equipamento estiver a funcionar em modo combinado, as crianças devem, apenas, utilizar o forno com a supervisão de adultos, devido às temperaturas geradas.

[\[pdf\]](#) User Manual

Instruções de Segurança JMO011404 Paloma Acedo Rico Gonzalez JOCEL Electrodomésticos

Instrucoes Seguranca jocel pt 2020 06 |||

INSTRUES DE SEGURANA Devem ser seguidas, sempre, as seguintes precaues bsicas quando se utilizam equipamentos eltricos: 1. Leia todas as instrues antes de ser utilizado. 2. Certifique-se que a tenso da sua rea de residncia corresponde que se indica na etiqueta de classificao do equipamento e que a ...

lang:pt score:16 filesize: 86.05 K page_count: 2 document date: 2024-12-02