

[Manuals.plus](#) /

› [Select Sound](#) /

› Select Sound Vintage Turntable with Bluetooth User Manual

Select Sound BT9245

Select Sound Vintage Turntable with Bluetooth

MODEL: BT9245

User Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Select Sound Vintage Turntable with Bluetooth. This versatile audio system combines classic aesthetics with modern functionality, allowing you to enjoy your vinyl records, CDs, MP3s, and radio, as well as stream music wirelessly via Bluetooth. Please read this manual carefully before operating the unit to ensure proper use and to maximize your listening experience.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury.

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings.
- Place the unit on a stable, flat surface.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Clean only with a dry cloth.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Select Sound Vintage Turntable Unit (Model BT9245)
- Power Adapter
- 45 RPM Adapter
- Instruction Manual

4. PRODUCT OVERVIEW

Front View



This image displays the front of the turntable, highlighting its vintage design, integrated speakers, and the central control panel.

Control Panel Detail



A detailed view of the control panel, featuring the AM/FM radio tuner, volume control, input selection buttons (AUX IN, USB, CD, Bluetooth, FM/AM), and the digital display.

Turntable Platter



This image shows the turntable platter, the central spindle, and the tonearm with its stylus, where vinyl records are placed for playback.

Rear View



The back of the unit, displaying the power input and RCA Line Out ports for connecting to external audio systems.

5. SETUP

1. **Unpacking:** Carefully remove the unit from its packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the turntable on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibration.
3. **Power Connection:** Connect the power adapter to the DC IN jack on the back of the unit, then plug the adapter into a standard wall outlet (AC 120V, 60Hz).
4. **Initial Power On:** Press the POWER button on the front panel to turn on the unit.

6. OPERATING INSTRUCTIONS

6.1. Vinyl Playback

**Reproduce tus playlists y
revive tus recuerdos**



This image illustrates the action of placing a vinyl record on the turntable, a key step in vinyl playback.

1. Lift the dust cover.
2. Place a vinyl record on the turntable platter. If playing a 45 RPM single, use the included 45 RPM adapter.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the speed selector switch.
4. Gently move the tonearm to the edge of the record. The turntable will start spinning automatically.
5. Lower the tonearm slowly onto the record using the cueing lever.
6. Adjust the volume using the VOLUME knob.
7. At the end of the record, the tonearm will automatically return to its rest position (auto-stop function). Lift the tonearm and return it to its rest.

6.2. Bluetooth Connection

1. Press the FUNCTION button repeatedly until "BT" or "Bluetooth" appears on the display. The unit will enter pairing mode, indicated by a flashing Bluetooth icon.
2. Enable Bluetooth on your smartphone or other device.
3. Search for "Select Sound" or "BT9245" in your device's Bluetooth list and select it to pair.

4. Once connected, the Bluetooth icon will stop flashing. You can now play music from your device through the turntable's speakers.

6.3. CD/MP3 Playback

1. Press the FUNCTION button to select "CD" mode.
2. Press the OPEN/CLOSE button to open the CD tray.
3. Place a CD or MP3 CD into the tray with the label side facing up.
4. Press the OPEN/CLOSE button again to close the tray. The unit will read the disc and begin playback automatically.
5. Use the SKIP/SEARCH buttons to navigate between tracks and the PLAY/PAUSE button to control playback.

6.4. AM/FM Radio

1. Press the FUNCTION button to select "FM" or "AM" mode.
2. Rotate the TUNING knob to manually tune to your desired radio station.
3. Extend the FM wire antenna (located at the back) for better FM reception. For AM, rotate the unit for optimal reception.

6.5. USB/SD Playback and Recording

The unit supports playback of MP3 files from USB drives and SD cards, and can record audio from vinyl, CD, or radio to USB/SD.

1. **Playback:** Insert a USB drive into the USB port or an SD card into the SD slot. Press the FUNCTION button to select "USB" or "SD" mode. The unit will automatically detect and play compatible audio files.
2. **Recording:** Select the desired source (Vinyl, CD, or Radio). Insert a USB drive or SD card. Press the RECORD button to begin recording. Press RECORD again to stop.

6.6. Auxiliary Input (AUX IN)

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX IN port using a 3.5mm audio cable (not included).
2. Press the FUNCTION button to select "AUX" mode.
3. Play audio from your connected device.

7. MAINTENANCE

- **Cleaning the Unit:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Stylus Care:** Handle the stylus carefully. Clean the stylus periodically with a soft brush, brushing from back to front.
- **Dust Cover:** Keep the dust cover closed when not in use to protect the turntable from dust.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and cover it to protect from dust.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Power cord not connected; Power outlet not active.	Ensure power cord is securely plugged in; Try a different outlet.
No Sound	Volume too low; Incorrect function selected; Stylus protector still on.	Increase volume; Select correct function (e.g., PHONO, BT); Remove stylus protector.

Problem	Possible Cause	Solution
Turntable not spinning	Auto-stop engaged; Belt dislodged.	Ensure tonearm is over the record; Contact support if belt issue suspected.
Bluetooth not connecting	Unit not in pairing mode; Device too far; Already connected to another device.	Ensure unit is in BT pairing mode; Move device closer; Disconnect from other devices.
CD not playing	Disc inserted incorrectly; Disc scratched/dirty; Incorrect function.	Reinsert disc correctly; Clean disc; Select CD function.

9. SPECIFICATIONS

Feature	Detail
Brand	Select Sound
Model	BT9245
Connectivity Technology	Bluetooth, USB, SD, AUX, AM/FM
Turntable Speeds	33 1/3, 45, 78 RPM
Motor Type	Belt Drive
Special Features	Volume Control, Integrated Speakers, CD/MP3 Playback, USB/SD Recording
Power Source	Corded Electric
Voltage	120 Volts
Product Dimensions	50 x 40 x 30 cm (19.7 x 15.7 x 11.8 inches)
Product Weight	8 kg (17.6 lbs)

10. WARRANTY AND SUPPORT

Select Sound products are designed for durability and quality. For warranty information and technical support, please refer to the warranty card included with your purchase or visit the official Select Sound website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Select Sound customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B075TF7M1R>

More documents and user manuals: <https://manuals.plus/>