

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Blaupunkt](#) /

› [Blaupunkt IR 25 Internet Radio User Manual](#)

Blaupunkt IR 25

Blaupunkt IR 25 Internet Radio User Manual

Model: IR 25 WH

1. INTRODUCTION

Thank you for choosing the Blaupunkt IR 25 Internet Radio. This device offers a wide range of listening options, including access to thousands of internet radio stations and FM radio. It also features an alarm clock, sleep timer, and weather forecast display. This manual provides detailed instructions for setting up, operating, and maintaining your radio to ensure optimal performance.

2. SAFETY INSTRUCTIONS

- Read all instructions carefully before use.
- Keep this manual for future reference.
- Do not expose the device to rain or moisture.
- Do not block any ventilation openings.
- Ensure the power adapter is compatible with your local power supply.
- Unplug the device during lightning storms or when unused for long periods.
- Do not attempt to repair the unit yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Blaupunkt IR 25 Internet Radio
- Power Adapter
- User Manual (English translation of original German manual)
- Warranty Card

4. PRODUCT OVERVIEW

Familiarize yourself with the controls and display of your Blaupunkt IR 25 Internet Radio.



Image 1: Front view of the Blaupunkt IR 25 Internet Radio. It features a central color LCD display, a large rotary knob with a blue LED ring on the right, and four control buttons below the knob. The display shows weather information, including temperature and a sun icon.

4.1. Front Panel Controls

- **Color LCD Display:** Shows station information, menus, weather forecasts, and settings.
- **Rotary Knob:** Used for volume control (rotate) and menu navigation/selection (press).
- **Power / Menu Button:** Turns the radio on/off and accesses the main menu.
- **Left Button:** Navigates left in menus or skips backward.
- **Right Button:** Navigates right in menus or skips forward.
- **FAV Button:** Accesses or saves favorite stations.

5. SETUP

5.1. Power Connection

1. Connect the power adapter to the DC IN port on the back of the radio.
2. Plug the power adapter into a standard wall outlet.
3. The radio will power on or enter standby mode.

5.2. Initial Setup and Wi-Fi Connection

Upon first power-on, the radio will guide you through an initial setup wizard.

1. **Language Selection:** Use the rotary knob to select your preferred language and press to confirm.
2. **Time and Date:** Set the current time and date. The radio can synchronize this automatically via the internet once connected.
3. **Network Connection:**
 - Select "Wi-Fi Network" from the options.
 - The radio will scan for available Wi-Fi networks.
 - Select your network from the list using the rotary knob.
 - Enter your Wi-Fi password using the on-screen keyboard and the rotary knob for character selection. Press the knob to confirm each character and again to confirm the entire password.
 - Once connected, the radio will display a confirmation message.

6. OPERATING INSTRUCTIONS

6.1. Internet Radio

1. Press the **Power / Menu** button to access the main menu.
2. Select "Internet Radio" using the rotary knob and press to confirm.
3. You can browse stations by location, genre, or search for specific stations.
4. Rotate the knob to navigate through the options and press to select a station.
5. To save a station as a favorite, tune into the station and press the **FAV** button. Follow the on-screen prompts to assign it to a preset number.
6. To recall a favorite, press the **FAV** button and select from your saved list.

6.2. FM Radio

The radio also supports traditional FM broadcasting.

1. From the main menu, select "FM Radio".
2. Use the **Left** and **Right** buttons to manually tune to a frequency.
3. Press and hold the **Left** or **Right** button for automatic scanning to the next available station.
4. To save an FM station as a favorite, tune into the station and press the **FAV** button.

6.3. Alarm Clock

The Blaupunkt IR 25 features two independent alarm settings.

1. From the main menu, navigate to "Alarm" or "System Settings" and then "Alarm".
2. Select "Alarm 1" or "Alarm 2".
3. Set the alarm time, duration, and frequency (e.g., daily, weekdays, once).
4. Choose your alarm source: Internet Radio, FM Radio, or Buzzer.
5. Adjust the alarm volume.
6. Ensure the alarm is set to "On".
7. When the alarm sounds, press any button (except Power) to snooze, or press the **Power / Menu** button to turn it off.

6.4. Sleep Timer

The sleep timer allows the radio to turn off automatically after a set period.

1. From the main menu, navigate to "Sleep Timer" or "System Settings" and then "Sleep Timer".
2. Select the desired duration (e.g., 15, 30, 60 minutes).
3. The radio will automatically switch to standby mode after the selected time.

6.5. Weather Forecast

The radio can display local weather forecasts.

1. From the main menu, select "Weather".
2. You may need to set your location or allow the radio to detect it via your network connection.
3. The display will show current weather conditions and forecasts.

6.6. Auxiliary Input (AUX-in)

Connect external audio devices like MP3 players using the AUX-in port.

1. Connect a 3.5mm audio cable (not included) from your external device's headphone jack to the AUX-in port on the radio.
2. From the main menu, select "AUX-in" mode.
3. Control playback from your external device. The radio's volume knob will control the output volume.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the radio's surface. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the radio for an extended period, unplug it from the power outlet and store it in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Check power adapter connection. Try a different outlet.
Cannot connect to Wi-Fi	Incorrect password, weak signal, or router issue.	Verify Wi-Fi password. Move radio closer to router. Restart router.
No sound	Volume too low, mute activated, or incorrect source selected.	Increase volume. Check if mute is active. Ensure correct input source (Internet Radio, FM, AUX) is selected.
Poor FM reception	Weak signal or interference.	Adjust the radio's position. Extend the antenna fully.

9. SPECIFICATIONS

- **Brand:** Blaupunkt
- **Model Number:** IR 25 WH
- **Color:** White
- **Connectivity Technology:** Wi-Fi, Auxiliary
- **Special Features:** Internet radio, Auxiliary input, Alarm clock, Sleep timer, Weather forecast
- **Compatible Devices:** MP3 Player (via AUX-in)
- **Product Dimensions:** 23 cm (L) x 14 cm (W) x 13 cm (H)
- **Tuner Technology:** Internet Radio, FM
- **Power Source:** AC (Alternating Current)
- **Supported Radio Bands:** Internet Radio, FM
- **Included Components:** Power Adapter, User Manual, Warranty Card
- **Manufacturer:** Blaupunkt
- **Country of Origin:** China

10. WARRANTY AND SUPPORT

Your Blaupunkt IR 25 Internet Radio comes with a warranty. Please refer to the included warranty card for detailed terms and conditions, including the warranty period and coverage.

For technical support, service, or inquiries regarding your product, please contact Blaupunkt customer service through their official website or the contact information provided on your warranty card.

