

Cloer 6080

Cloer 6080 Electronic Egg Cooker User Manual

Model: 6080

INTRODUCTION

Thank you for choosing the Cloer 6080 Electronic Egg Cooker. This appliance is designed to cook up to 6 eggs to your desired consistency, from soft to hard-boiled, with ease and precision. Please read this manual carefully before first use to ensure safe and optimal operation. Keep these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- The heating plate becomes very hot during operation. Avoid contact.
- Ensure the appliance is placed on a stable, heat-resistant surface.

PRODUCT OVERVIEW

The Cloer 6080 Egg Cooker consists of several key components:

- **Base Unit:** Contains the heating plate, on/off switch, control lamp, and acoustic signal.
- **Egg Holder:** Removable tray designed to hold up to 6 eggs.
- **Transparent Lid:** Covers the eggs during cooking.
- **Measuring Cup:** Used to measure the correct amount of water. Features an integrated egg piercer.



SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the egg holder, transparent lid, and measuring cup in warm soapy water. Wipe the base unit with a damp cloth. Ensure all parts are dry before assembly.
3. **Placement:** Place the egg cooker on a stable, flat, and heat-resistant surface, away from water sources.

OPERATING INSTRUCTIONS

Follow these steps to cook eggs to your desired consistency:

1. **Pierce Eggs:** Use the integrated egg piercer on the bottom of the measuring cup to carefully pierce the large end of each egg. This prevents cracking during cooking.
2. **Place Eggs:** Place up to 6 eggs into the removable egg holder.



Image: A hand placing an egg into the removable egg holder.

3. **Measure Water:** Fill the measuring cup with cold water according to the desired egg consistency (soft, medium, or hard-boiled). The measuring cup has markings for different consistencies and

number of eggs.

4. **Add Water:** Pour the measured water directly onto the stainless steel heating plate of the base unit.



Image: A hand pouring water into the egg cooker's heating plate.

5. **Assemble:** Place the egg holder with eggs onto the base unit, then cover with the transparent lid.
6. **Start Cooking:** Plug the appliance into a suitable power outlet. Turn the on/off switch to the "cook" position. The control lamp will illuminate, indicating the appliance is heating.
7. **Acoustic Signal:** Once the water has evaporated and the eggs are cooked, an acoustic signal will sound.
8. **Stop Cooking:** Turn the on/off switch to the "off" position and unplug the appliance.
9. **Serve:** Carefully remove the lid and egg holder. Rinse the cooked eggs under cold water to stop the cooking process and make them easier to peel.



Image: Example of perfectly cooked eggs, ready to serve.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your egg cooker.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The egg holder, transparent lid, and measuring cup can be washed by hand in warm, soapy water. Rinse thoroughly and dry. These parts are not dishwasher safe.
3. **Clean Heating Plate:** The stainless steel heating plate may develop mineral deposits (limescale) over time. To remove these, wipe the plate with a damp cloth. For stubborn deposits, use a small amount of vinegar or a descaling agent specifically designed for kitchen appliances. Rinse thoroughly with a damp cloth afterwards.



Image: A hand cleaning the heating plate of the egg cooker.

4. **Clean Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the base unit in water or any other liquid.
5. **Storage:** Store the clean and dry egg cooker in a safe place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs not cooked to desired consistency.	Incorrect water amount used. Eggs not pierced.	Ensure correct water level is used according to the measuring cup markings. Always pierce eggs before cooking.
Appliance does not turn on.	Not plugged in. Power outlet malfunction.	Check if the power cord is securely plugged into a working outlet. Test the outlet with another appliance.
Eggs crack during cooking.	Eggs not pierced.	Always use the integrated egg piercer to make a small hole in the large end of each egg.
Limescale buildup on heating plate.	Mineral deposits from water.	Clean the heating plate regularly with vinegar or a descaling agent as described in the Maintenance section.

SPECIFICATIONS

- **Model:** Cloer 6080
- **Capacity:** Up to 6 eggs
- **Power:** 350 W
- **Material:** Stainless steel heating plate
- **Color:** Black
- **Features:** Acoustic ready message, control lamp, on/off switch, removable egg holder, measuring cup with integrated egg piercer.
- **Dimensions (approximate):** 23 cm (length) x 11 cm (width) x 13.5 cm (height)



Image: Approximate dimensions of the Cloer 6080 Egg Cooker.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Cloer website. In case of product malfunction or damage, do not attempt to repair it yourself. Contact authorized service personnel.

You can find more information about Cloer products and support at the [Cloer Store on Amazon](#).