

## Severin KA 4811

# SEVERIN KA 4811 Coffee Machine User Manual

Model: KA 4811 | Brand: Severin

## 1. INTRODUCTION

Welcome to the user manual for your new SEVERIN KA 4811 Coffee Machine. This high-quality appliance is designed to provide you with aromatic coffee, whether from freshly ground beans or pre-ground filter coffee. Its integrated conical stainless steel grinder and compact design make it a convenient addition to any kitchen. This manual provides essential information on safe operation, setup, maintenance, and troubleshooting to ensure you get the best experience from your coffee machine.

Key features include:

- Integrated conical stainless steel grinder for fresh coffee.
- Suitable for both coffee beans and pre-ground filter coffee.
- Capacity for up to 6 cups of coffee.
- Adjustable grinding degree and coffee quantity.
- Two aroma levels for personalized taste.
- Illuminated control buttons for easy operation.
- Automatic stop function for safety and convenience.
- Removable water tank and swing-out filter for easy cleaning.

## 2. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance to prevent injury or damage. Keep this manual in a safe place for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the rating plate matches your mains voltage. Do not operate the appliance with a damaged cord or plug. Do not immerse the appliance, cord, or plug in water or other liquids.
- **Hot Surfaces:** The heating plate and parts of the coffee machine become very hot during operation and remain hot for some time after use. Always use the handle of the glass carafe. Avoid contact with hot surfaces.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- **Placement:** Place the appliance on a stable, heat-resistant, and level surface, away from edges and heat sources. Ensure adequate ventilation around the appliance.
- **Water:** Only fill the water tank with fresh, cold water. Do not operate the machine without water.
- **Grinder Safety:** Be cautious when cleaning the grinder. Ensure the appliance is unplugged before attempting to clean any internal parts.
- **Cleaning:** Always unplug the appliance before cleaning. Do not use abrasive cleaning agents or harsh chemicals.
- **Repairs:** Repairs to the appliance should only be carried out by authorized service personnel. Improper repairs can lead to considerable danger for the user.

### 3. PRODUCT OVERVIEW AND COMPONENTS

---

Familiarize yourself with the different parts of your SEVERIN KA 4811 coffee machine.



Figure 3.1: Overall view of the SEVERIN KA 4811 Coffee Machine, showing its sleek design, integrated grinder, and glass carafe.



Figure 3.2: Detailed view of the illuminated control panel, featuring buttons for power, coffee quantity (2, 4, 6 cups), grinding degree, and aroma settings.



Figure 3.3: The transparent coffee bean container with its adjustable lid, allowing for easy filling and monitoring of bean levels.



Figure 3.4: The glass carafe with handle, designed to hold up to 6 cups of brewed coffee.



Figure 3.5: The removable water tank, shown being detached from the side of the coffee machine for easy filling and cleaning.



Figure 3.6: A scoop of ground coffee being added to the swing-out filter holder, which accommodates a permanent filter or paper filter.



Figure 3.7: A paper filter (size 1x2) correctly placed within the removable filter insert, ready for coffee grounds.

## 4. SETUP AND FIRST USE

---

### 4.1 Unpacking

1. Carefully remove all packaging materials from the coffee machine.
2. Check that all components are present and undamaged. Refer to the "Product Overview" section for a list of parts.
3. Dispose of packaging materials responsibly.

### 4.2 Initial Cleaning

Before first use, clean all removable parts that come into contact with coffee or water.

1. Remove the glass carafe, filter holder, and removable filter insert.
2. Wash these parts in warm soapy water, then rinse thoroughly with clean water.

3. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.
4. Perform at least two brewing cycles with only water (no coffee) to flush the internal system. Discard the water after each cycle.

## 4.3 Placement

- Place the coffee machine on a stable, level, and heat-resistant surface.
- Ensure there is sufficient space around the appliance for ventilation.
- Keep the appliance away from direct sunlight, heat sources, and moisture.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Preparing for Brewing

1. **Fill Water Tank:** Remove the water tank (Figure 3.5) and fill it with fresh, cold water up to the desired number of cups (max 6 cups). Reinsert the water tank securely.
2. **Place Carafe:** Ensure the glass carafe (Figure 3.4) is correctly placed on the heating plate.
3. **Prepare Filter:** Open the swing-out filter holder. Insert the permanent filter or a paper filter (size 1x2) into the removable filter insert (Figure 3.7).

### 5.2 Brewing Coffee from Whole Beans

1. **Add Beans:** Open the lid of the bean container (Figure 3.3) and fill with fresh coffee beans (max 100g). Close the lid.
2. **Select Grinding Degree:** Use the control panel (Figure 3.2) to select your desired grinding degree. A finer grind is suitable for stronger coffee, while a coarser grind is for milder coffee.
3. **Select Coffee Quantity:** Press the corresponding button on the control panel to select the number of cups (2, 4, or 6).
4. **Select Aroma Level:** Choose between the two aroma levels for your preferred coffee strength.
5. **Start Brewing:** Press the "ON/OFF" button. The machine will start grinding the beans and then brew the coffee. The illuminated buttons will indicate operation.
6. **Automatic Stop:** The machine will automatically stop brewing once the cycle is complete. The heating plate will keep the coffee warm for a period.

### 5.3 Brewing Coffee from Pre-Ground Coffee

1. **Disable Grinder:** Ensure the grinder function is deactivated (refer to control panel instructions, usually indicated by a specific button or setting).
2. **Add Ground Coffee:** Add the desired amount of pre-ground coffee into the filter (Figure 3.6). Use approximately one level scoop per cup, adjusting to taste.
3. **Select Coffee Quantity:** Press the corresponding button on the control panel to select the number of cups (2, 4, or 6).
4. **Select Aroma Level:** Choose between the two aroma levels for your preferred coffee strength.
5. **Start Brewing:** Press the "ON/OFF" button. The machine will begin brewing.
6. **Automatic Stop:** The machine will automatically stop brewing once the cycle is complete.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will prolong the life of your coffee machine and ensure optimal coffee taste. Always unplug the appliance from the power outlet before cleaning.

## 6.1 Daily Cleaning

- **Glass Carafe and Filter Holder:** After each use, remove the glass carafe and filter holder. Wash them in warm soapy water and rinse thoroughly. These parts are generally dishwasher safe, but hand washing is recommended for longevity.
- **Removable Filter Insert:** Clean the permanent filter or discard the paper filter and rinse the insert.
- **Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Heating Plate:** Wipe the heating plate with a damp cloth once it has cooled down.

## 6.2 Cleaning the Grinder

The integrated grinder should be cleaned regularly to prevent blockages and ensure consistent grinding.

1. Ensure the machine is unplugged and completely cooled.
2. Remove any remaining coffee beans from the bean container.
3. Refer to the specific instructions in your full manual for removing and cleaning the conical burr grinder. Use a brush to remove coffee residues.
4. Reassemble the grinder components correctly.

## 6.3 Descaling

Depending on water hardness, limescale deposits can build up in the appliance, affecting performance and taste. Descale your machine regularly (e.g., every 2-3 months, or more frequently with hard water).

1. Use a commercially available descaling agent suitable for coffee machines, or a mixture of white vinegar and water (1:1 ratio).
2. Fill the water tank with the descaling solution according to the descaling agent's instructions.
3. Place the empty glass carafe on the heating plate.
4. Start a brewing cycle without coffee. Allow the solution to run through the machine.
5. After the cycle, run at least two full cycles with fresh, clean water to rinse out any descaling residue.

## 7. TROUBLESHOOTING

---

If you encounter issues with your coffee machine, consult the following table for common problems and their solutions.

Problem	Possible Cause	Solution
Coffee does not brew.	No water in tank; machine not plugged in; power outage.	Fill water tank; check power connection; check circuit breaker.
Coffee is too weak.	Insufficient coffee grounds/beans; incorrect aroma setting; coarse grind.	Add more coffee; select higher aroma level; adjust to finer grind setting.
Coffee is too strong.	Too much coffee grounds/beans; incorrect aroma setting; fine grind.	Reduce coffee amount; select lower aroma level; adjust to coarser grind setting.
Grinder is blocked or not working.	Beans jammed; grinder needs cleaning.	Unplug and carefully remove any jammed beans; clean the grinder as per instructions.
Water leaks from the machine.	Water tank not properly seated; filter holder overflowing.	Ensure water tank is securely in place; do not overfill filter holder.

If the problem persists after trying these solutions, please contact customer support.

## 8. SPECIFICATIONS

---

- **Model:** KA 4811
- **Brand:** Severin
- **Power:** Approximately 820 Watts
- **Voltage:** 230 Volts (AC)
- **Capacity:** Up to 6 cups
- **Bean Container Capacity:** Approximately 100g
- **Dimensions (L x W x H):** 16.5 x 27.5 x 40 cm (approximate product dimensions)
- **Weight:** Approximately 3.44 kg
- **Material:** Stainless steel / Plastic
- **Color:** Brushed Stainless Steel / Black
- **Special Features:** Integrated conical grinder, automatic stop, illuminated control buttons, removable water tank, swing-out filter.

## 9. WARRANTY AND CUSTOMER SUPPORT

---

Severin products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Severin website.

For technical assistance, spare parts, or any questions not covered in this manual, please contact Severin customer support. Contact details can typically be found on the official Severin website or on your product's packaging.

You can visit the official Severin store on Amazon for more information:[Severin Amazon Store](#).

© 2024 Severin. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.