

SKMEI 1268

SKMEI Digital Watch Model 1268 User Manual

Comprehensive instructions for your SKMEI Digital Watch.

1. INTRODUCTION

Thank you for choosing the SKMEI Digital Watch Model 1268. This manual provides detailed instructions on how to set up, operate, and maintain your watch to ensure optimal performance and longevity. Please read this manual thoroughly before using your watch.

2. PRODUCT OVERVIEW

The SKMEI Digital Watch Model 1268 is a robust timepiece designed for daily use, featuring a digital display, alarm, and backlight. Its durable construction includes a stainless steel case and a comfortable plastic band.

Key Features:

- Digital time display
- Alarm function
- Electro-Luminescent (EL) backlight for low-light visibility
- 50-meter water resistance
- Durable plastic band
- Stainless steel case

Watch Components:



Front view of the SKMEI Digital Watch Model 1268, showcasing its digital display, round case, and green plastic strap.



An angled perspective of the watch, illustrating the four buttons located on the sides of the case, used for mode selection, setting, and light activation.

The watch typically features four buttons: MODE, LIGHT, START/STOP, and RESET. Their exact positions and functions are detailed in the 'Operating Instructions' section.

3. SETUP

Setting Time and Date:

1. In normal time display mode, press the **MODE** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **RESET** button to select the digit or setting you wish to adjust (e.g., seconds, hour, minute, month, date, day).
3. Press the **START/STOP** button to increase the selected value. Hold it down for faster adjustment.
4. Once all settings are correct, press the **MODE** button again to return to normal time display.

Setting the Alarm:

1. From normal time display, press the **MODE** button until the alarm time is displayed.

2. Press the **RESET** button to select the hour or minute digits.
3. Use the **START/STOP** button to adjust the alarm hour and minute.
4. Press the **MODE** button to confirm and exit the alarm setting mode.
5. To activate/deactivate the alarm, typically press the **START/STOP** button while in alarm display mode. An alarm icon will appear/disappear.

4. OPERATING INSTRUCTIONS

Time Display Modes:

The watch displays time in either 12-hour (with AM/PM indicator) or 24-hour format. This setting is usually adjusted during the time setting process.

Using the Backlight (EL Light):



This image demonstrates the watch's display under normal conditions and when the Electro-Luminescent (EL) backlight is activated, providing clear visibility in low light.

Press the **LIGHT** button (typically located on the top left) to illuminate the display. The Electro-Luminescent (EL) backlight provides clear visibility in dark conditions. The light will remain on for a few seconds.

Stopwatch Function:

1. Press the **MODE** button until the stopwatch display appears (usually '00:00:00').
2. Press **START/STOP** to begin timing. Press again to pause.
3. Press **RESET** to clear the stopwatch to zero.
4. Press **MODE** to exit the stopwatch function.

Hourly Chime:

Some models include an hourly chime feature. To activate or deactivate, navigate to the alarm setting mode and look for an option to toggle the hourly chime (often indicated by a bell icon or 'SIG').

5. MAINTENANCE

Water Resistance:



Detailed view highlighting the watch's 50-meter water resistance capability and the durable, comfortable PU resin strap material.

The SKMEI Model 1268 watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for showering, swimming in shallow water, and general water exposure. However, it is **not recommended for diving or prolonged submersion**. Do not operate buttons while the watch is wet or submerged, as this can compromise the water seal.

Cleaning:

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or strap material.

Battery Replacement:

When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained. The watch uses a standard watch battery (e.g., CR2025 as indicated on the case back).

6. TROUBLESHOOTING

Display Issues (Dim or Missing Segments):

- **Cause:** Low battery or internal circuit issue.
- **Solution:** Replace the battery. If the issue persists after battery replacement, contact customer support.

Incorrect Time:

- **Cause:** Time was not set correctly or buttons were accidentally pressed.

- **Solution:** Re-set the time and date following the instructions in Section 3.

Buttons Not Responding:

- **Cause:** Watch may be in a locked mode, or internal issue.
- **Solution:** Try pressing all buttons firmly. If unresponsive, a battery reset (removing and reinserting the battery) might be necessary, but this should be done by a professional.

Water Damage:

- **Cause:** Exceeding water resistance limits or operating buttons underwater.
- **Solution:** Immediately dry the watch. If moisture is visible inside the display, seek professional repair to prevent further damage.

7. SPECIFICATIONS

Feature	Specification
Model Number	1268
Dial Color	Black
Case Shape	Round
Dial Glass Material	Mineral
Band Color	Green
Band Material	Plastic (PU Resin)
Watch Movement Type	Quartz
Watch Display Type	Digital
Case Material	Stainless Steel
Case Diameter	52 Millimeters
Water Resistance Depth	50 Meters (5 ATM)
Clasp Type	Buckle
Item Weight	70 Grams
Manufacturer	Guangzhou Skmei Watch Co.,LTD

8. WARRANTY INFORMATION


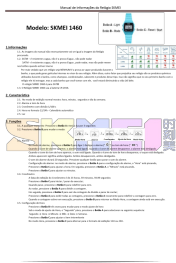

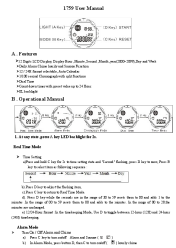
This SKMEI watch is covered by a manufacturer's warranty. For specific details regarding the warranty period and terms, please refer to the documentation included with your purchase or contact the retailer. The warranty typically covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized repairs.



9. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact the retailer where you purchased the watch or visit the official SKMEI website for support information. When contacting support, please have your watch model number (1268) and purchase details readily available.

SKMEI Digital Watch Model 1268 User Manual © 2023. All rights reserved.

Related Documents - 1268

	<p>SKMEI 1251 Digital Wrist Watch User Manual - Features & Operation</p> <p>Comprehensive user manual for the SKMEI 1251 digital wrist watch, detailing features like dual time, chronograph, alarm, countdown timer, and EL backlight. Includes operational instructions and specifications.</p>
	<p>SKMEI 1460 Digital Watch User Manual and Features</p> <p>Detailed user manual for the SKMEI 1460 digital watch, covering its functions, water resistance ratings (3ATM, 5ATM), alarm, stopwatch, time setting, and light features. Includes operational instructions and care advice.</p>
	<p>SKMEI 1429 Watch User Manual - Features and Operation</p> <p>Comprehensive user manual for the SKMEI 1429 watch. Learn about its features, how to adjust analogue time, use stopwatch and alarm modes, set date and time, and important care instructions. Includes button operations and water resistance details.</p>
	<p>Skmei 1759 User Manual: Features and Operation</p> <p>Comprehensive user manual for the Skmei 1759 digital watch, detailing features like alarm, chronograph, dual time, and countdown timer, along with step-by-step operational instructions.</p>

	<p>SKMEI 1429 Watch User Manual and Features</p> <p>User manual and features for the SKMEI 1429 watch, covering time setting, stopwatch, alarm, and usage instructions. Includes water resistance information and maintenance advice.</p>
	<p>SKMEI BANGKOK Watch User Manual: Features and Operation</p> <p>Comprehensive user guide for the SKMEI BANGKOK watch, detailing button functions, time setting, alarms, stopwatch, prayer times (Azan), calendar, and other features. Learn how to operate your SKMEI watch.</p>