



Manuals.plus /

› PROFOON /

› PROFOON PDX-1130 DECT Triple Cordless Phone Set User Manual

## PROFOON PDX-1130

# PROFOON PDX-1130 DECT Triple Cordless Phone Set User Manual

Model: PDX-1130

## 1. INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your PROFOON PDX-1130 DECT Triple Cordless Phone Set. This set includes three wireless handsets and their respective charging bases, designed for convenient communication within your home or office. Please read this manual thoroughly before using your new phone system.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are present in your package. If any items are missing or damaged, please contact your retailer.

- 3 x PROFOON PDX-1130 Cordless Handsets
- 3 x Handset Charging Bases
- 3 x Power Adapters for Charging Bases
- 3 x Rechargeable Li-Ion Batteries (pre-installed or separate)
- 1 x Telephone Line Cord
- 1 x User Manual (this document)

## 3. PRODUCT OVERVIEW

---

The PROFOON PDX-1130 system consists of three cordless handsets and their corresponding charging bases.

### 3.1 Handset and Base Station



**Image 3.1:** Overview of the PROFOON PDX-1130 DECT Triple Cordless Phone Set, showing three black handsets docked in their respective charging bases.

Each handset features a clear display, a numeric keypad, and dedicated function buttons for call management. The charging bases keep the handsets powered and ready for use.

### **3.2 Handset Controls**



**Image 3.2:** Detailed view of a single PROFOON PDX-1130 handset, highlighting the display, navigation buttons, call buttons, and numeric keypad.

Refer to the diagram above for the location of key controls:

- **Display:** Shows caller ID, menu options, and call status.
- **Navigation Buttons (Up/Down/OK):** Used to scroll through menus and confirm selections.
- **Call/Answer Button:** Initiates or answers a call.
- **End Call/Power Button:** Ends a call or powers the handset on/off.
- **Numeric Keypad:** For dialing numbers and entering text.
- **Mute Button:** Mutes the microphone during a call.
- **Redial Button:** Dials the last number called.
- **Phonebook Button:** Accesses the stored contacts.

## 4. SETUP

---

Follow these steps to set up your PROFOON PDX-1130 DECT phone system.

### 4.1 Battery Installation

1. Locate the battery compartment cover on the back of each handset.
2. Slide the cover off.
3. Insert the supplied Li-Ion battery, ensuring correct polarity (+ and -).

4. Replace the battery compartment cover.

## 4.2 Connecting the Base Stations

1. **Main Base Station:** Connect one of the charging bases to your telephone wall socket using the provided telephone line cord. Then, connect its power adapter to an electrical outlet.
2. **Satellite Charging Bases:** For the other two charging bases, simply connect their respective power adapters to electrical outlets. These do not require a telephone line connection.
3. Place each handset onto its charging base. The handset display should indicate charging. Allow the handsets to charge for at least 12-15 hours before initial use to ensure optimal battery performance.

## 4.3 Handset Registration (if necessary)

Your handsets are typically pre-registered to the main base station. If a handset displays "Unregistered" or similar, you may need to manually register it. Refer to the specific instructions in the full manual for your model, usually involving pressing a button on the base station and then a sequence on the handset. The PROFOON PDX-1130 supports GAP protocol, allowing additional compatible handsets to be registered.

# 5. OPERATING INSTRUCTIONS

---

## 5.1 Making and Receiving Calls

- **Making a Call:** Press the **Call/Answer** button, then dial the number using the numeric keypad. Press **Call/Answer** again to connect.
- **Receiving a Call:** When the phone rings, press the **Call/Answer** button.
- **Ending a Call:** Press the **End Call/Power** button or place the handset back on its charging base.
- **Adjusting Volume:** During a call, use the navigation buttons (Up/Down) to adjust the earpiece volume.

## 5.2 Phonebook

The phonebook can store up to 50 contacts.

- **Adding a Contact:** Press the **Phonebook** button, navigate to "Add New Entry", enter the name and number, then save.
- **Calling from Phonebook:** Press the **Phonebook** button, scroll to the desired contact, and press the **Call/Answer** button.

## 5.3 Internal Calls and Call Transfer

You can make internal calls between handsets and transfer external calls.

- **Internal Call:** Press the **Intercom** button (often represented by an icon or a specific key), then dial the number of the desired handset (e.g., 2 or 3).
- **Call Transfer:** During an external call, press the **Intercom** button, dial the target handset number, and once they answer, press the **End Call** button to transfer.

## 5.4 Caller ID and Redial

- **Caller ID:** The display will show the name and number of incoming callers (if subscribed to Caller ID service).
- **Redial:** Press the **Redial** button to call the last dialed number.

## 5.5 Mute Function

During a call, press the **Mute** button to temporarily disable your microphone. Press it again to unmute.

# 6. MAINTENANCE

---

To ensure the longevity and optimal performance of your PROFOON PDX-1130 phone system, follow these maintenance guidelines:

- **Cleaning:** Wipe the handsets and bases with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Always use the supplied rechargeable batteries. If the phone will not be used for an extended period, remove the batteries.
- **Environment:** Keep the phone system away from direct sunlight, heat sources, and moisture.

## 7. TROUBLESHOOTING

---

If you encounter issues with your phone system, try the following solutions:

Problem	Solution
No dial tone / Cannot make or receive calls.	Ensure the main base station is properly connected to the telephone line and power outlet. Check if the handset battery is charged. Verify the handset is registered to the base station.
Handset display is blank or shows "Unregistered".	Place the handset on its charging base to charge the battery. If still "Unregistered", follow the handset registration procedure (refer to section 4.3).
Poor call quality or static.	Move closer to the main base station. Ensure there are no large metal objects or other electronic devices interfering with the signal.
Caller ID not displayed.	Confirm you are subscribed to Caller ID service from your telephone provider. Ensure the phone line connection is secure.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	PDX-1130 (A003874)
Product Type	DECT Triple Cordless Phone Set
Color	Black
Material	Plastic
Number of Handsets	3 (Expandable up to 5)
Phonebook Capacity	50 entries
Battery Type	1 x Li-Ion (per handset, included)
Power Source	Battery Operated (with AC adapters for bases)
Special Features	Wireless, Caller ID, Internal Calls, Call Transfer, Mute, Redial, GAP Protocol Compatible
Answering System	Digital (Basic)
Product Weight	890 g (total package)
Package Dimensions	17.1 x 16.6 x 10.4 cm

# 9. WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the documentation provided with your purchase or contact your retailer. PROFOON, as part of the Hesdo Group, is committed to providing high-quality products.

