

[Manuals.plus](#) /

> [BOMAZ](#) /

> BOMAZ Universal Replacement Remote Control for Samsung Smart LED HDTV TV Models UN40EH5300, UN40EH5300F, UN50ES6150F, UN46EH5300, UN46EH5300F

BOMAZ 758232814604

BOMAZ Universal Replacement Remote Control Instruction Manual

Model: 758232814604

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your BOMAZ Universal Replacement Remote Control. This remote is designed to be compatible with various Samsung Smart LED HDTV models, including UN40EH5300, UN40EH5300F, UN50ES6150F, UN46EH5300, and UN46EH5300F.

The remote control offers a direct replacement experience, requiring no complex programming for immediate use with compatible televisions.

PACKAGE CONTENTS

- 1 x BOMAZ Universal Replacement Remote Control

SETUP

1. Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.



This image displays the BOMAZ Universal Replacement Remote Control. The front view shows all the buttons, including power, source, number pad, volume, channel, menu, and playback controls. The back view shows the smooth, ergonomic design and battery compartment cover.

2. Initial Use

This replacement remote control is designed for immediate use with compatible Samsung Smart LED HDTV models without requiring any programming. Once batteries are installed, point the remote towards your television and begin operation.

OPERATING INSTRUCTIONS

The remote control features a standard layout for intuitive navigation and control of your Samsung Smart LED HDTV. Below is a guide to the primary functions of each button:

Button	Function
Power ()	Turns the television On or Off.
SOURCE	Cycles through available input sources (e.g., HDMI, AV, Component).
Number Pad (0-9)	Directly selects television channels or enters numerical values.
PRE-CH	Returns to the previously viewed channel.
VOL (+/-)	Adjusts the volume level up or down.
MUTE ()	Mutes or unmutes the television audio.
CH (/)	Changes the television channel up or down.
CH LIST	Displays the channel list.
MENU (≡)	Opens the television's main menu.
SEARCH	Initiates the search function within the TV's interface.
TOOLS	Accesses quick settings or tools menu.
INFO (i)	Displays information about the current program or input.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and options.
Enter (↵)	Confirms a selection or enters a menu item.
RETURN (↶)	Goes back to the previous screen or menu.
EXIT ()	Exits the current menu or application.
Color Buttons (A, B, C, D)	Provides access to specific functions or interactive features, depending on the TV model or content.
Family Story	Accesses the Family Story feature on compatible Samsung Smart TVs.
MTS	Multi-channel Television Sound (MTS) selection.
SRS	Sound Retrieval System (SRS) audio enhancement.
SUPPORT	Accesses TV support features or help menu.
P.SIZE	Adjusts the picture size or aspect ratio.
CC	Activates or deactivates Closed Captions.
Playback Controls (, , ,)	Controls media playback (Rewind, Play/Pause, Stop, Fast Forward).

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure the remote is pointed directly at the TV.
- **Short operating distance:**
 - Replace batteries with new ones.
 - Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the signal.

SPECIFICATIONS

- **Model Number:** 758232814604
- **Compatible Devices:** Samsung Smart LED HDTVs (Specific models: UN40EH5300, UN40EH5300F, UN50ES6150F, UN46EH5300, UN46EH5300F)
- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** ABS Material
- **Operating Distance:** More than 8 meters
- **Dimensions:** Approximately 9.2 x 3 x 1.3 inches
- **Item Weight:** Approximately 3.98 ounces
- **Special Feature:** No Programming Required

WARRANTY INFORMATION

This BOMAZ Universal Replacement Remote Control comes with a 90-day warranty from the date of purchase. This warranty covers manufacturing defects. If you experience any issues with the remote control within this period, please refer to the Support section for assistance.

SUPPORT

For any questions, concerns, or troubleshooting assistance not covered in this manual, please contact the seller or manufacturer directly through your purchase platform. Provide your product model number (758232814604) and a detailed description of the issue for prompt support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question