

## Severin FR 2430

# SEVERIN Hot Air Fryer 1500 W

Model: FR 2430

## 1. INTRODUCTION

Thank you for choosing the SEVERIN Hot Air Fryer FR 2430. This appliance utilizes innovative hot air technology to cook, fry, grill, and simmer your favorite foods with little to no added oil, promoting healthier eating habits. Its compact design, intuitive controls, and versatile programs make it an essential addition to any kitchen.

This manual provides important information on the safe and efficient operation, maintenance, and troubleshooting of your new hot air fryer. Please read it thoroughly before first use and keep it for future reference.

## 2. SAFETY INSTRUCTIONS

**WARNING: To prevent electric shock, fire, or injury, always follow basic safety precautions.**

- Read all instructions before using the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep the appliance and its cord out of reach of children. Close supervision is necessary when the appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow sufficient air circulation.
- Do not cover the air inlet or outlet vents while the appliance is operating.
- Surfaces may become hot during use. Do not touch hot surfaces directly. Use handles or knobs.
- Always unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not use accessories not recommended by the manufacturer.

### 3. PRODUCT OVERVIEW

The SEVERIN Hot Air Fryer FR 2430 is designed for ease of use and efficient cooking. Familiarize yourself with its main components:

- **Main Unit:** The primary housing containing the heating element and fan.
- **Frying Basket:** The removable basket where food is placed for cooking. It features a ceramic non-stick coating.
- **Basket Handle:** For safely inserting and removing the frying basket.
- **Control Panel:** An intuitive LCD touch screen for setting temperature, time, and selecting programs.
- **Air Inlet/Outlet Vents:** Located on the top and back of the unit for proper air circulation.



Image 3.1: Main unit of the SEVERIN Hot Air Fryer FR 2430, showing its sleek black and stainless steel design.



Image 3.2: Close-up of the LCD touch control panel, displaying temperature, time, and program icons.

## 4. SETUP

- 1. Unpack:** Carefully remove the hot air fryer and all packaging materials. Keep packaging for storage or disposal.
- 2. Initial Cleaning:** Before first use, clean the frying basket and its support with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before use.
- 3. Placement:** Place the appliance on a stable, flat, heat-resistant surface. Ensure there is at least 10 cm of free space around the back and sides of the appliance to allow for proper air circulation. Do not place it near flammable materials.
- 4. Power Connection:** Plug the power cord into a grounded wall outlet.

## 5. OPERATING INSTRUCTIONS

The SEVERIN Hot Air Fryer FR 2430 features an intuitive LCD touch screen and 6 automatic programs for various cooking needs.

### 5.1. Control Panel Functions

- Power Button:** Turns the appliance on/off.
- Menu/Program Selection Button:** Cycles through the 6 preset cooking programs.
- Temperature Adjustment (+/-):** Increases or decreases the cooking temperature (80°C to 200°C).
- Time Adjustment (+/-):** Increases or decreases the cooking time (up to 60 minutes).

- **Start/Pause Button:** Starts or pauses the cooking process.

## 5.2. General Operation

1. **Prepare Food:** Place the ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks into place. The appliance will not operate if the basket is not correctly inserted.
3. **Turn On:** Press the Power button to turn on the appliance. The LCD screen will illuminate.
4. **Select Program or Manual Settings:**
  - **Using Preset Programs:** Press the Menu/Program Selection button repeatedly to cycle through the 6 automatic programs. Each program has a default temperature and time optimized for specific food types (e.g., fries, chicken, fish).
  - **Manual Settings:** Alternatively, use the Temperature (+/-) and Time (+/-) buttons to set your desired cooking temperature (80-200°C) and time (up to 60 minutes).
5. **Start Cooking:** Press the Start/Pause button to begin the cooking process. The fan and heating element will activate.
6. **Shake/Turn Food (Optional):** For some recipes, especially fries or smaller items, it is recommended to shake or turn the food halfway through the cooking time. The appliance may beep to remind you. Carefully pull out the basket, shake or turn the food, and reinsert the basket. The cooking will resume automatically.
7. **Automatic Shut-off:** The appliance will automatically shut off when the set cooking time has elapsed. A beep will sound, and the display will show 'OFF'.
8. **Remove Food:** Carefully pull out the frying basket using the handle. Empty the cooked food into a serving dish. Be cautious of hot steam.
9. **Cool Down:** Allow the appliance to cool down completely before cleaning or storing.

**Technologie à air chaud  
sans ajout de matière grasse**

**Résultats parfaits grâce  
aux 6 programmes automatiques  
de 80 à 200°C**



Image 5.1: The hot air fryer highlighting its oil-free hot air technology and 6 automatic programs for perfect results.



## Cuisson variée, saine et rapide économise en temps et en énergie

Image 5.2: The hot air fryer shown with a variety of cooked foods, emphasizing versatile, healthy, and fast cooking.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your hot air fryer.

- 1. Unplug and Cool:** Always unplug the appliance and allow it to cool down completely before cleaning.
- 2. Clean Frying Basket and Support:** The frying basket and its support have a ceramic non-stick coating, making them easy to clean. Wash them with warm water, a mild dishwashing detergent, and a non-abrasive sponge. For stubborn residue, soak them in warm water for a few minutes. They are also dishwasher safe.
- 3. Clean Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads, as they can damage the surface.
- 4. Clean Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove any food residue from the heating element.
- 5. Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.

## 7. TROUBLESHOOTING

If you encounter any issues with your hot air fryer, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Frying basket not inserted correctly.	Ensure the power cord is securely plugged into a working outlet; Push the frying basket fully into the main unit until it clicks.
Food is not cooked evenly.	Basket is overfilled; Food not shaken/turned.	Reduce the amount of food in the basket; Shake or turn the food halfway through cooking.
Food is not crispy.	Not enough oil (for certain foods); Temperature too low; Cooking time too short.	Lightly brush or spray food with oil; Increase temperature; Extend cooking time.
White smoke coming from the appliance.	Greasy residue from previous use; High fat content food.	Clean the frying basket and interior thoroughly; This is normal for high-fat foods, ensure proper ventilation.
Appliance emits a strange odor.	First use; Residue from packaging.	This is normal during first few uses and will dissipate; Ensure all packaging materials are removed.

## 8. SPECIFICATIONS

Technical details for the SEVERIN Hot Air Fryer FR 2430:

- **Brand:** Severin
- **Model Number:** FR 2430
- **Power:** 1500 Watts
- **Capacity:** 3.2 Liters
- **Voltage:** 230 Volts
- **Dimensions (L x W x H):** 29 x 40 x 34 cm
- **Weight:** 4.8 Kilograms
- **Temperature Range:** 80°C to 200°C
- **Timer:** Up to 60 minutes
- **Material:** Ceramic coated frying basket
- **Special Features:** Automatic shut-off, Overheat protection, LCD touch screen, 6 automatic programs.



Image 8.1: The hot air fryer illustrating its 3.2L capacity, LCD touch screen, 60-minute timer, ceramic coating, and 1500W power.

## 9. WARRANTY AND SUPPORT

SEVERIN products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official SEVERIN website. Keep your proof of purchase (receipt) as it will be required for any warranty claims. For technical support, spare parts, or service inquiries, please contact SEVERIN customer service. Contact details can typically be found on the SEVERIN website or in the packaging materials.

[Visit the Official SEVERIN Store](#)

© 2025 Severin. All rights reserved.

**SEVERIN** Friends for Life  ART.-NO. FR 2455						----	----------------------------	--------------------------------	----		DE	Gebrauchsanleitung	Heißluftfritteuse	4		GB	Instruction for use	Deep Fryer	11		FR	Instructions de use	Friteuse à l'air chaud	13		ES	Instructions de uso	Fritadora por aire caliente	14		NL	Gebruiksaanwijzing	Vlootfriteuse	15		IT	Manuale d'uso	Frittoforno a calore secco	16		PT	Manual de uso	Propriáteis sem grelha	18		DK	Brugsanvisning	Frøfritter	19		DE	Bedienungsanleitung	Varmfritur, Big Frittpatent	20		PT	Manual de utilização	Fritadeira por ar quente	21		ES	Manual de uso	Fritadora por aire caliente	22		FR	Instructions d'utilisation	Frittoforno per uso quotidiano	23		IT	Manuale d'uso	Frittoforno per uso quotidiano	24		PT	Manual de utilização	Fritadeira para uso diário	25		DK	Brugsaanvisning	Fritadeira por ar quente	26		DE	Bedienungsanleitung	Wandfritteuse	27		PT	Manual de utilização	Fritadeira de parede	28		ES	Manual de uso	Fritadora de parede	29		FR	Instructions d'utilisation	Frittoforno da parete	30		IT	Manuale d'uso	Frittoforno da parete	31		PT	Manual de utilização	Fritadeira de parede	32		DK	Brugsanvisning	Fritadeira de parede	33		DE	Bedienungsanleitung	Wandfritteuse	34		PT	Manual de utilização	Fritadeira de parede	35		ES	Manual de uso	Fritadora de parede	36		FR	Instructions d'utilisation	Frittoforno da parede	37		IT	Manuale d'uso	Frittoforno da parete	38		PT	Manual de utilização	Fritadeira da parede	39		DK	Brugsaanvisning	Fritadeira da parede	40		DE	Bedienungsanleitung	Wandfritteuse	41		PT	Manual de utilização	Fritadeira de parede	42		ES	Manual de uso	Fritadora de parede	43		FR	Instructions d'utilisation	Frittoforno da parete	44		IT	Manuale d'uso	Frittoforno da parete	45		PT	Manual de utilização	Fritadeira da parete	46		DK	Brugsaanvisning	Fritadeira da parede	47		DE	Bedienungsanleitung	Wandfritteuse	48		PT	Manual de utilização	Fritadeira de parede	49		ES	Manual de uso	Fritadora de parede	50		FR	Instructions d'utilisation	Frittoforno da parede	51		IT	Manuale d'uso	Frittoforno da parete	52		PT	Manual de utilização	Fritadeira da parede	53		DK	Brugsaanvisning	Fritadeira da parede	54		DE	Bedienungsanleitung	Wandfritteuse	55		PT	Manual de utilização	Fritadeira de parede	56		ES	Manual de uso	Fritadora de parede	57		FR	Instructions d'utilisation	Frittoforno da parete	58		IT	Manuale d'uso	Frittoforno da parete	59		PT	Manual de utilização	Fritadeira da parete	60		DK	Brugsaanvisning	Fritadeira da parete	61		DE	Bedienungsanleitung	Wandfritteuse	62		PT	Manual de utilização	Fritadeira de parede	63		ES	Manual de uso	Fritadora de parede	64		FR	Instructions d'utilisation	Frittoforno da parede	65		IT	Manuale d'uso	Frittoforno da parete	66		PT	Manual de utilização	Fritadeira da parede	67		DK	Brugsaanvisning	Fritadeira da parede	68		**SEVERIN FR 2455 Kompakt-Heißluftfritteuse Bedienungsanleitung**  Umfassende Bedienungsanleitung für die SEVERIN FR 2455 Kompakt-Heißluftfritteuse. Enthält Sicherheitshinweise, Gebrauchsanweisungen, Reinigungstipps und Garantieinformationen.
**SEVERIN** severin friends  www.severin.com  ART.-NO. FR 2431						----	----------------------------	-------------	----		DE	Gebrauchsanleitung	Fritteuse	4		GB	Instruction for use	Deep Fryer	11		FR	Instructions de use	Friteuse	13		ES	Instructions de uso	Fritadora	14		NL	Gebruiksaanwijzing	Frittoforno	15		IT	Manuale d'uso	Frittoforno	16		PT	Manual de uso	Fritadeira	18		DK	Brugsaanvisning	Fritadeira	19		DE	Bedienungsanleitung	Fritteuse	20		PT	Manual de utilização	Fritadeira	21		ES	Manual de uso	Fritadora	22		FR	Instructions d'utilisation	Frittoforno	23		IT	Manuale d'uso	Frittoforno	24		PT	Manual de utilização	Fritadeira	25		DK	Brugsaanvisning	Fritadeira	26		DE	Bedienungsanleitung	Fritteuse	27		PT	Manual de utilização	Fritadeira	28		ES	Manual de uso	Fritadora	29		FR	Instructions d'utilisation	Frittoforno	30		IT	Manuale d'uso	Frittoforno	31		PT	Manual de utilização	Fritadeira	32		DK	Brugsaanvisning	Fritadeira	33		DE	Bedienungsanleitung	Fritteuse	34		PT	Manual de utilização	Fritadeira	35		ES	Manual de uso	Fritadora	36		FR	Instructions d'utilisation	Frittoforno	37		IT	Manuale d'uso	Frittoforno	38		PT	Manual de utilização	Fritadeira	39		DK	Brugsaanvisning	Fritadeira	40		DE	Bedienungsanleitung	Fritteuse	41		PT	Manual de utilização	Fritadeira	42		ES	Manual de uso	Fritadora	43		FR	Instructions d'utilisation	Frittoforno	44		IT	Manuale d'uso	Frittoforno	45		PT	Manual de utilização	Fritadeira	46		DK	Brugsaanvisning	Fritadeira	47		DE	Bedienungsanleitung	Fritteuse	48		PT	Manual de utilização	Fritadeira	49		ES	Manual de uso	Fritadora	50		FR	Instructions d'utilisation	Frittoforno	51		IT	Manuale d'uso	Frittoforno	52		PT	Manual de utilização	Fritadeira	53		DK	Brugsaanvisning	Fritadeira	54		DE	Bedienungsanleitung	Fritteuse	55		PT	Manual de utilização	Fritadeira	56		ES	Manual de uso	Fritadora	57		FR	Instructions d'utilisation	Frittoforno	58		IT	Manuale d'uso	Frittoforno	59		PT	Manual de utilização	Fritadeira	60		DK	Brugsaanvisning	Fritadeira	61		**SEVERIN Fritteuse Gebrauchsanweisung & Bedienungsanleitung**  Umfassende Bedienungsanleitung für die SEVERIN Fritteuse (Modell FR 2431). Enthält detaillierte Informationen zu Anschluss, Aufbau, Sicherheitshinweisen, Bedienung, Reinigung und Garantie. Mehrsprachige Anleitung.																																			
**SEVERIN** severin friends  www.severin.com  ART.-NO. MW 7760						----	----------------------------	-----------------------	----		DE	Gebrauchsanleitung	Mikrowelle mit Grill	4		GB	Instruction for use	Microwave with Grill	11		FR	Instructions de use	Microwave 750 W Grill	13		ES	Instructions de uso	Microwave 750 W Grill	14		NL	Gebruiksaanwijzing	Microwave 750 W Grill	15		IT	Manuale d'uso	Microwave 750 W Grill	16		PT	Manual de uso	Microwave 750 W Grill	18		DK	Brugsaanvisning	Microwave 750 W Grill	19		DE	Bedienungsanleitung	Mikrowelle mit Grill	20		PT	Manual de utilização	Mikrowelle com Grill	21		ES	Manual de uso	Microwave con Grill	22		FR	Instructions d'utilisation	Microwave 750 W Grill	23		IT	Manuale d'uso	Microwave 750 W Grill	24		PT	Manual de utilização	Microwave 750 W Grill	25		DK	Brugsaanvisning	Microwave 750 W Grill	26		DE	Bedienungsanleitung	Mikrowelle mit Grill	27		PT	Manual de utilização	Mikrowelle com Grill	28		ES	Manual de uso	Microwave con Grill	29		FR	Instructions d'utilisation	Microwave 750 W Grill	30		IT	Manuale d'uso	Microwave 750 W Grill	31		PT	Manual de utilização	Microwave 750 W Grill	32		DK	Brugsaanvisning	Microwave 750 W Grill	33		DE	Bedienungsanleitung	Mikrowelle mit Grill	34		PT	Manual de utilização	Mikrowelle com Grill	35		ES	Manual de uso	Microwave con Grill	36		FR	Instructions d'utilisation	Microwave 750 W Grill	37		IT	Manuale d'uso	Microwave 750 W Grill	38		PT	Manual de utilização	Microwave 750 W Grill	39		DK	Brugsaanvisning	Microwave 750 W Grill	40		DE	Bedienungsanleitung	Mikrowelle mit Grill	41		PT	Manual de utilização	Mikrowelle com Grill	42		ES	Manual de uso	Microwave con Grill	43		FR	Instructions d'utilisation	Microwave 750 W Grill	44		IT	Manuale d'uso	Microwave 750 W Grill	45		PT	Manual de utilização	Microwave 750 W Grill	46		DK	Brugsaanvisning	Microwave 750 W Grill	47		DE	Bedienungsanleitung	Mikrowelle mit Grill	48		PT	Manual de utilização	Mikrowelle com Grill	49		ES	Manual de uso	Microwave con Grill	50		FR	Instructions d'utilisation	Microwave 750 W Grill	51		IT	Manuale d'uso	Microwave 750 W Grill	52		PT	Manual de utilização	Microwave 750 W Grill	53		DK	Brugsaanvisning	Microwave 750 W Grill	54		DE	Bedienungsanleitung	Mikrowelle mit Grill	55		PT	Manual de utilização	Mikrowelle com Grill	56		ES	Manual de uso	Microwave con Grill	57		FR	Instructions d'utilisation	Microwave 750 W Grill	58		IT	Manuale d'uso	Microwave 750 W Grill	59		PT	Manual de utilização	Microwave 750 W Grill	60		DK	Brugsaanvisning	Microwave 750 W Grill	61		**SEVERIN MW 7760 Mikrowelle mit Grill – Bedienungsanleitung**  Umfassende Bedienungsanleitung für die SEVERIN MW 7760 Mikrowelle mit Grill. Enthält Informationen zu Sicherheit, Bedienung, Funktionen und technischen Daten von SEVERIN.																																			
**SEVERIN** severin friends  www.severin.com  ART.-NO. FR 2408						----	----------------------------	---------------------------------	----		DE	Gebrauchsanleitung	Mini-Friteuse & Fondue	4		GB	Instruction for use	Mini Friteuse & Fondue	11		FR	Instructions de use	Mini Friteuse 750 W & fondue	13		ES	Instructions de uso	Mini Fritadeira 750 W & fondue	14		NL	Gebruiksaanwijzing	Mini Friteuse 750 W & fondue	15		IT	Manuale d'uso	Mini Frittoforno 750 W & fondue	16		PT	Manual de uso	Mini Fritadeira 750 W & fondue	18		DK	Brugsaanvisning	Mini Frittoforno 750 W & fondue	19		DE	Bedienungsanleitung	Mini-Friteuse & Fondue	20		PT	Manual de utilização	Mini-Friteuse & Fondue	21		ES	Manual de uso	Mini-Friteuse & Fondue	22		FR	Instructions d'utilisation	Mini-Friteuse & Fondue	23		IT	Manuale d'uso	Mini-Friteuse & Fondue	24		PT	Manual de utilização	Mini-Friteuse & Fondue	25		DK	Brugsaanvisning	Mini-Friteuse & Fondue	26		DE	Bedienungsanleitung	Mini-Friteuse & Fondue	27		PT	Manual de utilização	Mini-Friteuse & Fondue	28		ES	Manual de uso	Mini-Friteuse & Fondue	29		FR	Instructions d'utilisation	Mini-Friteuse & Fondue	30		IT	Manuale d'uso	Mini-Friteuse & Fondue	31		PT	Manual de utilização	Mini-Friteuse & Fondue	32		DK	Brugsaanvisning	Mini-Friteuse & Fondue	33		DE	Bedienungsanleitung	Mini-Friteuse & Fondue	34		PT	Manual de utilização	Mini-Friteuse & Fondue	35		ES	Manual de uso	Mini-Friteuse & Fondue	36		FR	Instructions d'utilisation	Mini-Friteuse & Fondue	37		IT	Manuale d'uso	Mini-Friteuse & Fondue	38		PT	Manual de utilização	Mini-Friteuse & Fondue	39		DK	Brugsaanvisning	Mini-Friteuse & Fondue	40		DE	Bedienungsanleitung	Mini-Friteuse & Fondue	41		PT	Manual de utilização	Mini-Friteuse & Fondue	42		ES	Manual de uso	Mini-Friteuse & Fondue	43		FR	Instructions d'utilisation	Mini-Friteuse & Fondue	44		IT	Manuale d'uso	Mini-Friteuse & Fondue	45		PT	Manual de utilização	Mini-Friteuse & Fondue	46		DK	Brugsaanvisning	Mini-Friteuse & Fondue	47		DE	Bedienungsanleitung	Mini-Friteuse & Fondue	48		PT	Manual de utilização	Mini-Friteuse & Fondue	49		ES	Manual de uso	Mini-Friteuse & Fondue	50		FR	Instructions d'utilisation	Mini-Friteuse & Fondue	51		IT	Manuale d'uso	Mini-Friteuse & Fondue	52		PT	Manual de utilização	Mini-Friteuse & Fondue	53		DK	Brugsaanvisning	Mini-Friteuse & Fondue	54		DE	Bedienungsanleitung	Mini-Friteuse & Fondue	55		PT	Manual de utilização	Mini-Friteuse & Fondue	56		ES	Manual de uso	Mini-Friteuse & Fondue	57		FR	Instructions d'utilisation	Mini-Friteuse & Fondue	58		IT	Manuale d'uso	Mini-Friteuse & Fondue	59		PT	Manual de utilização	Mini-Friteuse & Fondue	60		DK	Brugsaanvisning	Mini-Friteuse & Fondue	61		**SEVERIN FR 2408 Mini-Friteuse mit Fondue Bedienungsanleitung**  Umfassende Bedienungsanleitung für die SEVERIN FR 2408 Mini-Friteuse mit Fondue. Erfahren Sie alles über sichere Handhabung, Zubereitung und Pflege dieses vielseitigen Küchengeräts.																																			
**SEVERIN** severin friends  www.severin.com  ART.-NO. WK 3472						----	----------------------------	------------------------------	----		DE	Gebrauchsanleitung	Wasserkocher	4		GB	Instruction for use	Electric kettle	11		FR	Instructions de use	Boîte à thé électrique	13		ES	Instructions de uso	Boquilla para té eléctrica	14		NL	Gebruiksaanwijzing	Wasserkoker	15		IT	Manuale d'uso	Apparecchio per tè elettrico	16		PT	Manual de uso	Apparecchio per tè elettrico	18		DK	Brugsaanvisning	Wasserkoker	19		DE	Bedienungsanleitung	Wasserkocher	20		PT	Manual de utilização	Wasserkocher	21		ES	Manual de uso	Wasserkocher	22		FR	Instructions d'utilisation	Wasserkoker	23		IT	Manuale d'uso	Wasserkoker	24		PT	Manual de utilização	Wasserkoker	25		DK	Brugsaanvisning	Wasserkoker	26		DE	Bedienungsanleitung	Wasserkocher	27		PT	Manual de utilização	Wasserkocher	28		ES	Manual de uso	Wasserkocher	29		FR	Instructions d'utilisation	Wasserkoker	30		IT	Manuale d'uso	Wasserkoker	31		PT	Manual de utilização	Wasserkoker	32		DK	Brugsaanvisning	Wasserkoker	33		DE	Bedienungsanleitung	Wasserkocher	34		PT	Manual de utilização	Wasserkocher	35		ES	Manual de uso	Wasserkocher	36		FR	Instructions d'utilisation	Wasserkoker	37		IT	Manuale d'uso	Wasserkoker	38		PT	Manual de utilização	Wasserkoker	39		DK	Brugsaanvisning	Wasserkoker	40		DE	Bedienungsanleitung	Wasserkocher	41		PT	Manual de utilização	Wasserkocher	42		ES	Manual de uso	Wasserkocher	43		FR	Instructions d'utilisation	Wasserkoker	44		IT	Manuale d'uso	Wasserkoker	45		PT	Manual de utilização	Wasserkoker	46		DK	Brugsaanvisning	Wasserkoker	47		DE	Bedienungsanleitung	Wasserkocher	48		PT	Manual de utilização	Wasserkocher	49		ES	Manual de uso	Wasserkocher	50		FR	Instructions d'utilisation	Wasserkoker	51		IT	Manuale d'uso	Wasserkoker	52		PT	Manual de utilização	Wasserkoker	53		DK	Brugsaanvisning	Wasserkoker	54		DE	Bedienungsanleitung	Wasserkocher	55		PT	Manual de utilização	Wasserkocher	56		ES	Manual de uso	Wasserkocher	57		FR	Instructions d'utilisation	Wasserkoker	58		IT	Manuale d'uso	Wasserkoker	59		PT	Manual de utilização	Wasserkoker	60		DK	Brugsaanvisning	Wasserkoker	61		**SEVERIN WK 3472 - Bedienungsanleitung und Sicherheitshinweise**  Finden Sie detaillierte Anleitungen und wichtige Sicherheitshinweise für den SEVERIN Wasserkocher WK 3472. Erfahren Sie mehr über Anschluss, Bedienung, Reinigung und Wartung.																																			
**SEVERIN** severin friends  www.severin.com  ART.-NO. FKS 8841						----	---------------------	----------------------------	----		DE	Gebrauchsanleitung	Flaschenkühlschrank	3		GB	Instruction for use	Refrigerator for bottles	10		FR	Instructions de use	Réfrigérateur à bouteilles	11		ES	Instructions de uso	Refrigerador para botellas	12		NL	Gebruiksaanwijzing	Koelkast voor flessen	13		IT	Manuale d'uso	Frigo per bottiglie	14		PT	Manual de uso	Refrigerador para garrafas	15		DK	Brugsaanvisning</																																																																																																																																																																																																																																																									