

Roku Roku Ultra 4660R

Roku Ultra Streaming Player User Manual

Model: Roku Ultra 4660R

INTRODUCTION

The Roku Ultra is Roku's most powerful streaming player, designed for avid streamers and users of cable replacement services. It offers a premium streaming experience with a quad-core processor and enhanced wireless performance. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Roku Ultra device.

WHAT'S INCLUDED

- Roku Ultra streaming player
- Voice remote with TV controls and personal shortcuts
- Headphones for private listening
- Two AA batteries
- Power adapter
- Premium High-Speed HDMI® Cable

SETUP

Follow these steps to set up your Roku Ultra streaming player:

1. **Connect to TV:** Plug one end of the included Premium High-Speed HDMI® Cable into the HDMI port on your Roku Ultra and the other end into an available HDMI input on your TV.



Figure 1: Rear ports of the Roku Ultra player. Connect the HDMI cable here.

2. **Connect to Power:** Connect the power adapter to the DC IN port on the back of your Roku Ultra, then plug the

adapter into a wall outlet.

3. Connect to Internet:

- **Wireless:** The Roku Ultra supports enhanced wireless performance. During the on-screen setup, you will be prompted to connect to your Wi-Fi network.
- **Wired (Ethernet):** For a more stable connection, plug an Ethernet cable from your router into the Ethernet port on the back of your Roku Ultra.

4. Initial Setup:

Turn on your TV and select the HDMI input your Roku Ultra is connected to. Follow the on-screen instructions to complete the setup process, including connecting to the internet, creating or logging into your Roku account, and activating channels.



Figure 2: The Roku Ultra streaming player, remote, and included headphones.

OPERATING YOUR ROKU ULTRA

The Roku Ultra is designed for intuitive navigation and enhanced control. Here's how to get the most out of your device:

Using the Enhanced Voice Remote

The included voice remote offers convenient features for controlling your streaming experience and TV.



Figure 3: The Roku Ultra Enhanced Voice Remote.

- **Navigation:** Use the directional pad (purple cross) to navigate menus and select items. The "OK" button confirms selections.
- **Voice Search:** Press and hold the microphone button on the remote and speak your command or search query. This allows for quick content discovery across various channels.
- **TV Controls:** The remote includes buttons for TV power and volume, allowing you to control your TV directly without needing a separate remote.
- **Personal Shortcuts:** Utilize the customizable shortcut buttons (A and B) to quickly launch your favorite channels or perform specific actions.
- **Private Listening:** Plug the included headphones into the 3.5mm jack on the side of the remote for private listening.

The TV audio will automatically mute.



Figure 4: The Roku Ultra remote with headphones connected for private listening.

- **Lost Remote Finder:** If you misplace your remote, press the remote finder button on the Roku Ultra player itself (located on the top, near the Roku logo). The remote will emit an audible tone to help you locate it.



Figure 5: The Roku Ultra player with the remote finder button.

Streaming Content

The Roku Ultra provides access to thousands of free or paid channels, including popular services like Netflix, Amazon Video, HBO NOW, and PBS KIDS. You can browse channels, add them to your home screen, and enjoy a vast library of movies, TV episodes, music, sports, news, and more.

For a visual guide on setting up and using your Roku Ultra, watch the official product video below:

Your browser does not support the video tag.

Official Roku Ultra Product Overview: This video provides a comprehensive overview of the Roku Ultra, including its features, setup process, and how to navigate the interface. It highlights the 4K/HDR capabilities and the enhanced remote functions.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of your Roku Ultra player and remote. Avoid using liquid cleaners or aerosols.
- **Software Updates:** Your Roku Ultra will automatically download and install software updates when connected to the internet. Ensure your device remains connected to receive the latest features and performance improvements.
- **Remote Batteries:** The remote uses two AA batteries. Replace them when the remote's indicator light blinks or when the remote becomes unresponsive.

TROUBLESHOOTING

If you encounter issues with your Roku Ultra, try the following solutions:

- **No Power:** Ensure the power adapter is securely connected to both the Roku Ultra and a working wall outlet.
- **No Picture/Signal:**
 - Verify the HDMI cable is securely connected to both the Roku Ultra and your TV.
 - Ensure your TV is set to the correct HDMI input.
 - Try a different HDMI port on your TV or a different HDMI cable.
- **Remote Not Responding:**
 - Replace the batteries in the remote.
 - If the remote is paired via Wi-Fi Direct, try re-pairing it by holding the pairing button inside the battery compartment until the indicator light blinks.
 - Use the remote finder button on the player to confirm the remote is receiving power.
- **Buffering/Poor Streaming Quality:**
 - Check your internet connection speed.
 - Move your Roku Ultra closer to your wireless router or use an Ethernet cable for a wired connection.
 - Restart your router and modem.
 - Close other applications or devices that might be consuming bandwidth.
- **Factory Reset:** If problems persist, you may need to perform a factory reset. This will erase all settings and installed channels. To do this, locate the reset button (often a small pinhole) on the device and press it with a paperclip for about 10 seconds until the indicator light blinks rapidly.

SPECIFICATIONS

Feature	Detail
Brand	Roku
Model Number	Roku Ultra 4660R
Resolution	4K/HDR/HD
Connectivity	Wi-Fi, Ethernet
Ports	HDMI, USB, Ethernet, Micro SD
Remote Features	Voice control, Remote Finder, Headphone Jack, TV Power and Volume controls
Supported Services	Netflix, Vudu, Amazon Instant Video, Hulu Plus, YouTube, and more.
Dimensions	4.9 x 4.9 x 1 inches
Item Weight	1 pound (16 ounces)

Key Features:

- 2,000+ entertainment channels: Choose from the widest variety of streaming entertainment, including movies, TV shows, music, sports, news, and more.

- Stunning HD video quality: Immerse yourself in the action with crisp details and rich HDR color, streaming up to 4K.
- Quick and easy setup: Sets up wirelessly in minutes with just a few simple steps.
- Channel shortcut buttons: Jump straight to favorites with one push of the remote.
- One stop search: Find your favorite movies and shows in a flash from top channels.

WARRANTY AND SUPPORT

For warranty information and detailed support, please refer to the official Roku website or the comprehensive user guide available in PDF format. You can often find the latest support documents, FAQs, and contact information for customer service directly from the manufacturer.

A PDF version of the user guide is available [here](#).

© 2024 Roku. All rights reserved. Roku and the Roku logo are trademarks or registered trademarks of Roku, Inc.