



Manuals.plus /

› Skip Hop /

› Skip Hop Explore & More Activity Jumper Instruction Manual

Skip Hop 304350

Skip Hop Explore & More Activity Jumper Instruction Manual

Model: 304350

IMPORTANT SAFETY INFORMATION

WARNING: Never leave child unattended.

- Use only for a child who is able to hold their head upright unassisted and who is not able to walk or climb out of the product.
- Maximum weight recommendation: 15 kg (33 lbs).
- Always ensure the product is placed on a flat, level surface.
- Keep away from stairs, heat sources, and electrical cords.
- Regularly inspect the product for any damaged or missing parts. Discontinue use if any part is damaged.

PRODUCT FEATURES

The Skip Hop Explore & More Activity Jumper is designed to provide a stimulating and safe environment for your baby's development. Key features include:

- Light-up cloud bounce counter with music and applause at 100-jump milestones.
- 360-degree rotating seat for maximum exploration.
- 20+ developmental activities with clip-on, movable toys.
- Easily folds flat for storage and travel.
- Adjustable to five different heights to grow with your baby.
- Four spring capsules that reveal fun colors when baby jumps.



Image: A baby enjoying the Skip Hop Explore & More Activity Jumper, showcasing its various toys and interactive elements.

SETUP AND ASSEMBLY

While specific assembly steps are not provided, the jumper is designed for straightforward setup. Ensure all components are securely fastened before use.

1. **Unfold the Frame:** Carefully unfold the main frame of the jumper until it locks into place.
2. **Attach the Seat:** Securely attach the fabric seat to the central activity tray. Ensure all clips and fasteners are engaged.
3. **Adjust Height:** Locate the height adjustment mechanism on the support legs. Adjust to one of the five available heights, ensuring your baby's feet can comfortably touch the floor with a slight bend in

their knees.

4. **Attach Toys:** Clip the various developmental toys onto the activity tray as desired.
5. **Install Batteries:** Insert AAA batteries (not included) into the light-up cloud bounce counter.



Image: A hand demonstrating how to attach one of the clip-on toys to the activity tray, highlighting the customizable play experience.

OPERATING INSTRUCTIONS

To ensure your baby gets the most out of their activity jumper:

- **Placing Baby:** Gently place your baby into the seat, ensuring their legs are through the leg openings and they are comfortably supported.

- **Bouncing:** Encourage your baby to push off the floor with their feet to initiate bouncing. The spring capsules will respond with colors and the cloud counter will track jumps.
- **Rotating Seat:** The seat rotates 360 degrees, allowing your baby to easily access all toys around the activity tray.
- **Interactive Toys:**
 - **Light-Up Cloud:** Press the buttons on the cloud for music, lights, and to track jumps.
 - **Bee Toy:** Spin the bee toy for visual and tactile stimulation.
 - **Mirror Toy:** Encourage self-recognition and interaction with the mirror.
 - **Tree Toys:** Engage with the colorful, movable tree-shaped toys.



Image: A baby engaging with the light-up cloud, which features a digital jump counter and plays music and lights.

MAINTENANCE AND CARE

Proper care ensures the longevity and hygiene of your activity jumper:

- **Seat Cover:** The seat cover is machine washable. Remove it from the activity tray and wash according to the fabric care instructions (usually cold water, gentle cycle). Air dry.
- **Plastic Parts:** Wipe all plastic surfaces, including the activity tray and toys, with a mild soap and water solution. Air dry thoroughly.
- **Storage:** For compact storage, the jumper easily folds flat. Secure the folded jumper with the integrated strap.



Image: The activity jumper shown folded flat and stored discreetly under a couch, demonstrating its space-saving design.

TROUBLESHOOTING

If you encounter any issues with your activity jumper, please refer to the following common solutions:

- **Jumper not bouncing correctly:** Ensure the height adjustment is set appropriately for your child's height, allowing their feet to make full contact with the floor. Check that all support legs are securely locked.
- **Electronic cloud not working:** Verify that fresh AAA batteries are correctly installed. Check for any debris obstructing the buttons.
- **Toys not staying in place:** Ensure clip-on toys are fully engaged in their designated slots on the activity tray.

If problems persist, please contact Skip Hop customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	33.5"L x 28.75"W x 34.65"H
Item Model Number	304350
Maximum Weight Recommendation	15 Kilograms
Material Type	Polyester, tricot, plastic
Care Instructions	Machine washable seat cover; Plastic parts - wipe surfaces with mild soap & water. Air Dry
Batteries Required	Yes (AAA batteries)
Is Portable	Yes

WARRANTY AND SUPPORT

For warranty information or product support, please visit the official Skip Hop website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Contact Information:

- Visit the Skip Hop Store on Amazon
- Refer to product packaging for direct manufacturer contact details.