

[manuals.plus](#) /

› [VONLUCE](#) /

› [VONLUCE Semi Flush Mount Ceiling Light \(Model HCF-1303-BZ\) Instruction Manual](#)

VONLUCE HCF-1303-BZ

VONLUCE Semi Flush Mount Ceiling Light

Model: HCF-1303-BZ

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your VONLUCE Semi Flush Mount Ceiling Light, Model HCF-1303-BZ. Please read this manual thoroughly before installation and retain it for future reference.



Figure 1: VONLUCE Semi Flush Mount Ceiling Light (Model HCF-1303-BZ)

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or personal injury, always follow these basic safety precautions:

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Contact a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Do not install this fixture in wet locations.
- Ensure the fixture is securely mounted to a structural part of the building.
- Use only bulbs of the specified type and wattage. Exceeding the maximum wattage may cause overheating and damage the fixture.
- Do not look directly into the light source when the fixture is on.
- Keep combustible materials away from the light fixture.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Instruction Manual
- Mounting Hardware (screws, wire nuts, mounting bracket)
- Shade (White Linen Drum Shade)
- Fixture Body (Matte Black Canopy with 3-light structure)



**WHITE LINEN
DRUM SHADE**

**MATTE BLACK
CANOPY**



**3-LIGHT
STRUCTURE**

Figure 2: Main components of the light fixture

4. SPECIFICATIONS

Feature	Specification
Brand	VONLUCE
Model Number	HCF-1303-BZ
Product Dimensions	18" L x 13" W x 6" H (Fixture body: 18" diameter, 7.9" height; Canopy: 5.5" diameter, 11.4" total height from ceiling)

Feature	Specification
Material	Metal, Linen
Color	Black (Canopy), White (Shade)
Light Fixture Form	Close to Ceiling / Semi Flush Mount
Number of Light Sources	3
Bulb Base	E26 Standard
Max Wattage per Bulb	60W
Voltage	110 Volts
Dimmable	Yes (with compatible dimmer switch and dimmable bulbs)
Indoor/Outdoor Usage	Indoor



COMPATIBLE WITH E26 BASE BULBS



E26 Sockets



60W Max. Wattage



Dimmer Compatible



Bulbs Not Included

Figure 3: Product dimensions and bulb compatibility

5. INSTALLATION INSTRUCTIONS

Before You Begin:

- Turn off power at the circuit breaker or fuse box.
- Ensure you have all necessary tools (screwdriver, wire strippers, electrical tape, ladder).
- Unpack the fixture carefully and inspect for any damage.

Mounting the Fixture:

1. **Attach Mounting Bracket:** Secure the mounting bracket to the junction box in your ceiling using the provided screws. Ensure it is firmly attached.
2. **Wire Connections:** Connect the fixture's wires to your house wiring. Match the black wire from the fixture to the black (live) wire from the ceiling, the white wire from the fixture to the white (neutral) wire from the ceiling, and the ground wire (bare copper or green) from the fixture to the ground wire from the ceiling. Secure connections with wire nuts and electrical tape.



Figure 4: 3-light socket structure and wiring

3. **Mount Canopy:** Carefully push the wired fixture body up towards the ceiling, aligning the holes in the canopy with the screws on the mounting bracket. Secure the canopy using the decorative nuts or screws provided.



Figure 5: Matte black canopy detail

4. **Install Bulbs:** Screw E26 base bulbs (not included) into the sockets. Do not exceed the maximum wattage of 60W per bulb.
5. **Attach Shade:** Carefully place the white linen drum shade onto the fixture and secure it according to the design (typically by screwing it onto a threaded ring or using clips).



Figure 6: White linen drum shade detail

6. **Restore Power:** Once installation is complete, restore power at the circuit breaker and test the light fixture.

6. OPERATION

The VONLUCE Semi Flush Mount Ceiling Light is designed for ease of use.

- **Bulb Compatibility:** This fixture uses three standard E26 base bulbs (not included). It is compatible with CFL, LED, or incandescent bulbs, each up to 60W.
- **Dimmable Feature:** The fixture is dimmable. To utilize this feature, ensure you use dimmable E26 bulbs and connect the fixture to a compatible dimmer switch (sold separately).
- **Light Control:** The light is controlled by a standard wall switch or a dimmer switch, depending on your setup.

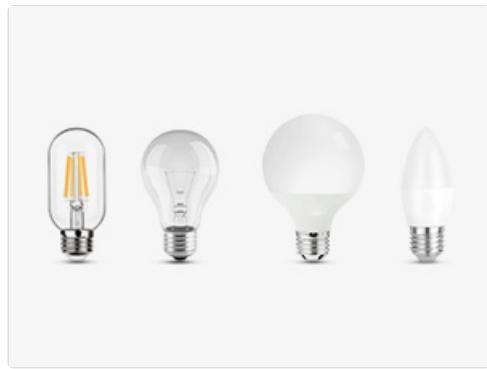


Figure 7: Compatible E26 bulb types



Warm White

Natural White

Cool White

Bulbs Not Included: Pick any bulbs that work best for you

Figure 8: Customize your atmosphere with different bulb types and color temperatures

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your light fixture.

- **Cleaning:** Always turn off the power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use harsh chemicals, abrasive cleaners, or polishes as they may damage the finish.
- **Bulb Replacement:** Ensure the power is off and the bulbs have cooled before attempting to replace them. Screw in new E26 bulbs, ensuring they do not exceed 60W.

- **Inspection:** Periodically check all electrical connections and mounting hardware for tightness.

8. TROUBLESHOOTING

If you encounter issues with your light fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	1. Power is off 2. Loose wiring connection 3. Faulty bulb 4. Faulty switch	1. Check circuit breaker/fuse. 2. Turn off power, check all wire connections. 3. Replace bulb(s). 4. Test switch or consult an electrician.
Light flickers	1. Loose bulb 2. Incorrect bulb type for dimmer 3. Loose wiring 4. Faulty dimmer switch	1. Tighten bulb(s). 2. Ensure dimmable bulbs are used with a dimmer. 3. Turn off power, check wiring connections. 4. Replace dimmer switch or consult an electrician.
Bulbs burn out quickly	1. Incorrect wattage 2. Poor quality bulbs 3. Overheating	1. Ensure bulbs do not exceed 60W. 2. Use reputable brand bulbs. 3. Ensure proper ventilation around fixture.

9. CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact VONLUCE customer service. Refer to your purchase documentation for specific contact details or visit the official VONLUCE website.

Website: [VONLUCE Store on Amazon](#)